# ILLUSTRATED
# PARTS
# BREAKDOWN

# 400 SERIES
# MASS STORAGE DEVICES

## ILLUSTRATED PARTS BREAKDOWN (IPB)
The IPB is used to identify a part and its location in a hardware product. The document references specific item numbers in the associated parts list.

## HOW TO USE THE IPB
1. Locate the figure containing the item of interest.
2. Locate the number (callout) of the item of interest.
3. Locate that item number in the associated parts list.

## FORMAT
Each IPB is generally organized based on its first figure. All other assemblies and subassemblies are referenced from this figure. Each figure contains numeric callouts of all major parts (items).

## PARTS LIST
Each parts list contains the following:

**Figure and Item No.** − Lists the figure number and its referenced numeric callout

**Description** − Presents the name and a brief description of the item. A single asterisk (*) preceding the description denotes item is a subassembly to its referenced figure. A double asterisk (**) preceding the description indicates that this item is subordinate to the preceding single asterisk item.

**Digital Part No.** − Lists the Digital/Vendor part number. The letter in the column heading indicates the current revision level of the Engineering Drawing for the referenced figure.

**ECO Cut-In** − Lists the top assembly drawing number and revision level at first printing. All additional revisions to an item are listed in this column.

**Used On Code** − Lists letters referring to the product variation assigned in Figure 1. When this column is blank, the item is used in all variations.

**Ref Fig No.** − Lists a cross reference between figures within the IPB.

## PART NUMBER/PART DESCRIPTION INDEX SECTION
Lists items by part number numerically, and description alphabetically. Items are also referenced to a location within the IPB by figure and item number.

| PRINTING | REVISION HISTORY | | | | RELATED IPB |
|---|---|---|---|---|---|
| | ECO LEVEL | | ECO LEVEL (Continued) | | |
| 24−SEP−93 5th Printing | RF31E | 00000−00002 | RZ56E | 00001−00002 | **SYSTEM LEVEL:** EK−438AB−IP EK−439AA−IP |
| | RF31F | 00000−00000 | RZ57E | 00002−00002 | |
| | 70−28086 | 00000−00002 | RZ58E | 00000−00000 | |
| | RF31T | 00000−00000 | 70−28089 | 00000−00000 | **ENCLOSURE LEVEL:** |
| | RF312 | 00000−00000 | RZ73E | 00006−00006 | EK−440AB−IP |
| | 70−29475 | 00000−00002 | RZ74E | 00000−00000 | |
| | RF35E | 00000−00000 | TLZ04 | 00000−00001 | |
| | RF36E | 00000−00000 | 70−28090 | 00000−00001 | **MASS STORAGE DEVICES:** |
| | RF352 | 00000−00000 | 70−28081 | 00000−00001 | EK−441AC−IP |
| | RF362 | 00000−00000 | TK50E | 00000−00000 | |
| | 70−29457 | 00000−00002 | TK70E | 00000−00001 | |
| | RF71E | 00000−00001 | 70−22839 | 00000−00001 | **DOCUMENTATION KIT (EK−4000S−DK) INCLUDES:** |
| | RF72E | 00001−00001 | 70−28088 | 00000−00001 | |
| | RF73E | 00000−00000 | 70−27050 | 00000−00001 | EK−438AB−IP |
| | RF74E | 00000−00000 | | | EK−439AA−IP |
| | 70−28087 | 00000−00005 | | | EK−440AB−IP |
| | EF51R | 00002−00002 | | | EK−441AC−IP |
| | EF52R | 00002−00002 | | | |
| | EF53 | 00000−00000 | | | |
| | TF85E | 00000−00000 | | | |
| | TF86E | 00000−00000 | | | |
| | 70−28092 | 00000−00000 | | | |
| | 70−27049 | 00000−00000 | | | |
| | 70−29478 | 00001−00001 | | | |
| | 70−27050 | 00001−00001 | | | |

**THIS IPB DETAILS PARTS INFORMATION FOR 400 SERIES MASS STORAGE DEVICES ONLY.**

# DSSI DRIVES

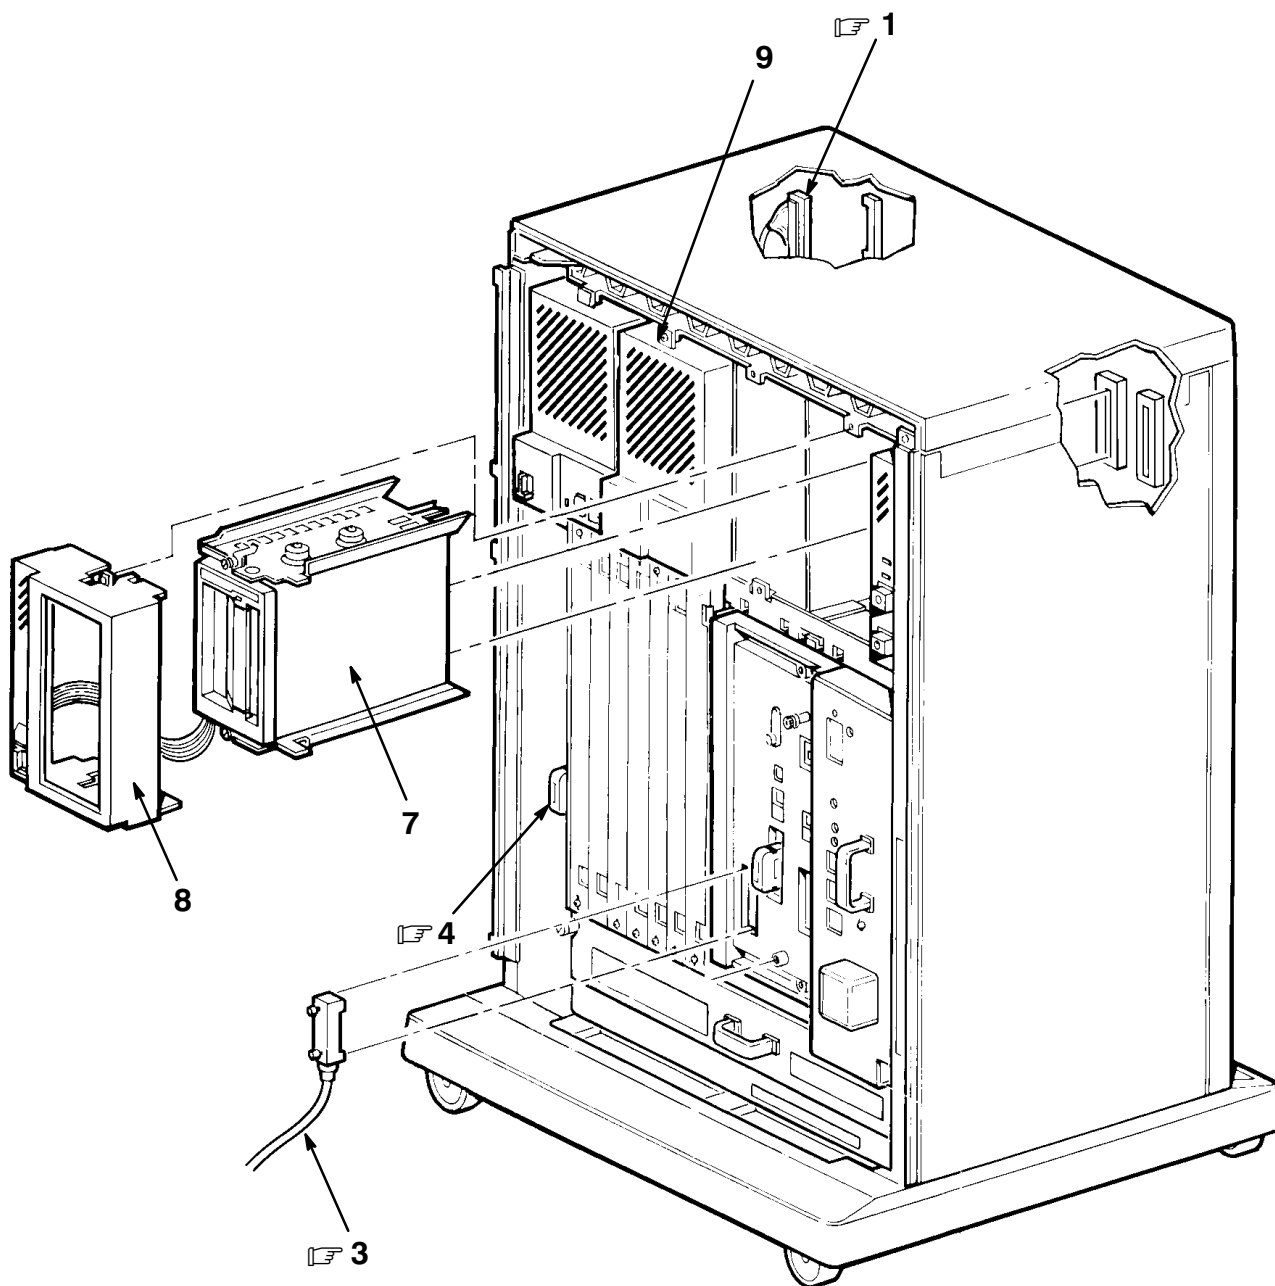☞ ☜ **INDICATES FRU LEVEL PARTS.**



**400ST−01−SC**

*Figure 1. Typical RF DSSI System Mounting and Cabling (Sheet 1 of 2)*

☞ ☜ **INDICATES FRU LEVEL PARTS.**



400ST−01A−SC

*Figure 1. Typical TF DSSI System Mounting and Cabling (Sheet 2 of 2)*

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. | ECO CUT-IN | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 1- | TYPICAL DSSI SYSTEM MOUNTING and CABLING | | | | |
| ☞1 | *Cable Assembly, Internal DSSI | 70-27458-01 | | | |
| 2 | *Bezel Assembly, Filler | 70-27414-01 | | | |
| ☞3 | *Cable Assembly, 50 Cond Molded Micro-D (BC21M-09) | 17-02152-03 | | | |
| ☞4 | *Connector, Terminator | 12-29258-01 | | | |
| 5 | *RF31E DISK DRIVE ASSEMBLY | RF31E-AA | | | 2 |
| | *RF31E DISK DRIVE ASSEMBLY | RF31E-AF | | | 2 |
| | *RF31F DISK DRIVE ASSEMBLY | RF31F-AA | | | 3 |
| | *RF31F DISK DRIVE ASSEMBLY | RF31F-AF | | | 3 |
| | *RF31T DISK DRIVE ASSEMBLY | RF31T-AA | | | 5 |
| | *RF31T DISK DRIVE ASSEMBLY | RF31T-AF | | | 5 |
| | *RF312 DISK DRIVE ASSEMBLY | RF312-AA | | | 6 |
| | *RF312 DISK DRIVE ASSEMBLY | RF312-AF | | | 6 |
| | *RF35E DISK DRIVE ASSEMBLY | RF35E-AA | | | 8 |
| | *RF35E DISK DRIVE ASSEMBLY | RF35E-AF | | | 8 |
| | *RF352 DISK DRIVE ASSEMBLY | RF352-AA | | | 9 |
| | *RF352 DISK DRIVE ASSEMBLY | RF352-AF | | | 9 |
| | *RF36E DISK DRIVE ASSEMBLY | RF36E-AA | | | 11 |
| | *RF36E DISK DRIVE ASSEMBLY | RF36E-AF | | | 11 |
| | *RF362 DISK DRIVE ASSEMBLY | RF362-AA | | | 12 |
| | *RF362 DISK DRIVE ASSEMBLY | RF362-AF | | | 12 |
| | *RF71E DISK DRIVE ASSEMBLY | RF71E-AA | | | 14 |
| | *RF71E DISK DRIVE ASSEMBLY | RF71E-AF | | | 14 |
| | *RF72E DISK DRIVE ASSEMBLY | RF72E-AA | | | 15 |
| | *RF72E DISK DRIVE ASSEMBLY | RF72E-AF | | | 15 |
| | *RF73E DISK DRIVE ASSEMBLY | RF73E-AA | | | 16 |
| | *RF73E DISK DRIVE ASSEMBLY | RF73E-AF | | | 16 |
| | *RF74E DISK DRIVE ASSEMBLY | RF74E-AA | | | 17 |
| | *RF74E DISK DRIVE ASSEMBLY | RF74E-AF | | | 17 |
| | *EF51R DISK DRIVE ASSEMBLY | EF51R-AA | | | 19 |
| | *EF51R DISK DRIVE ASSEMBLY | EF51R-AF | | | 19 |
| | *EF52R DISK DRIVE ASSEMBLY | EF52R-AA | | | 20 |
| | *EF52R DISK DRIVE ASSEMBLY | EF52R-AF | | | 20 |
| | *EF53 DISK DRIVE ASSEMBLY | EF53-AA | | | 21 |
| | *EF53 DISK DRIVE ASSEMBLY | EF53-AF | | | 21 |
| 6 | *BEZEL ASSEMBLY, 5 1/4 INCH DSSI DISK DRIVE | 70-27049-04 | | | 27 |
| | *BEZEL ASSEMBLY, 3 1/2 INCH DSSI DISK DRIVE | 70-29478-02 | | | 28 |
| 7 | *TF85E TAPE DRIVE ASSEMBLY | TF85E-JA | | | 23 |
| | *TF85E TAPE DRIVE ASSEMBLY | TF85E-JF | | | 23 |
| | *TF86E TAPE DRIVE ASSEMBLY | TF86E-JA | | | 25 |
| | *TF86E TAPE DRIVE ASSEMBLY | TF86E-JF | | | 25 |
| 8 | *BEZEL ASSEMBLY, TAPE DRIVE | 70-27050-03 | | | 29 |
| 9 | *BEZEL ASSEMBLY, BLANK | 70-27049-01 | | | 30 |

THIS PAGE INTENTIONALLY LEFT BLANK

☞ ☜ **INDICATES FRU LEVEL PARTS.**

☞ **11**

**1**

**3**
**6**

**5**

**2**

☞ **9**

**10**
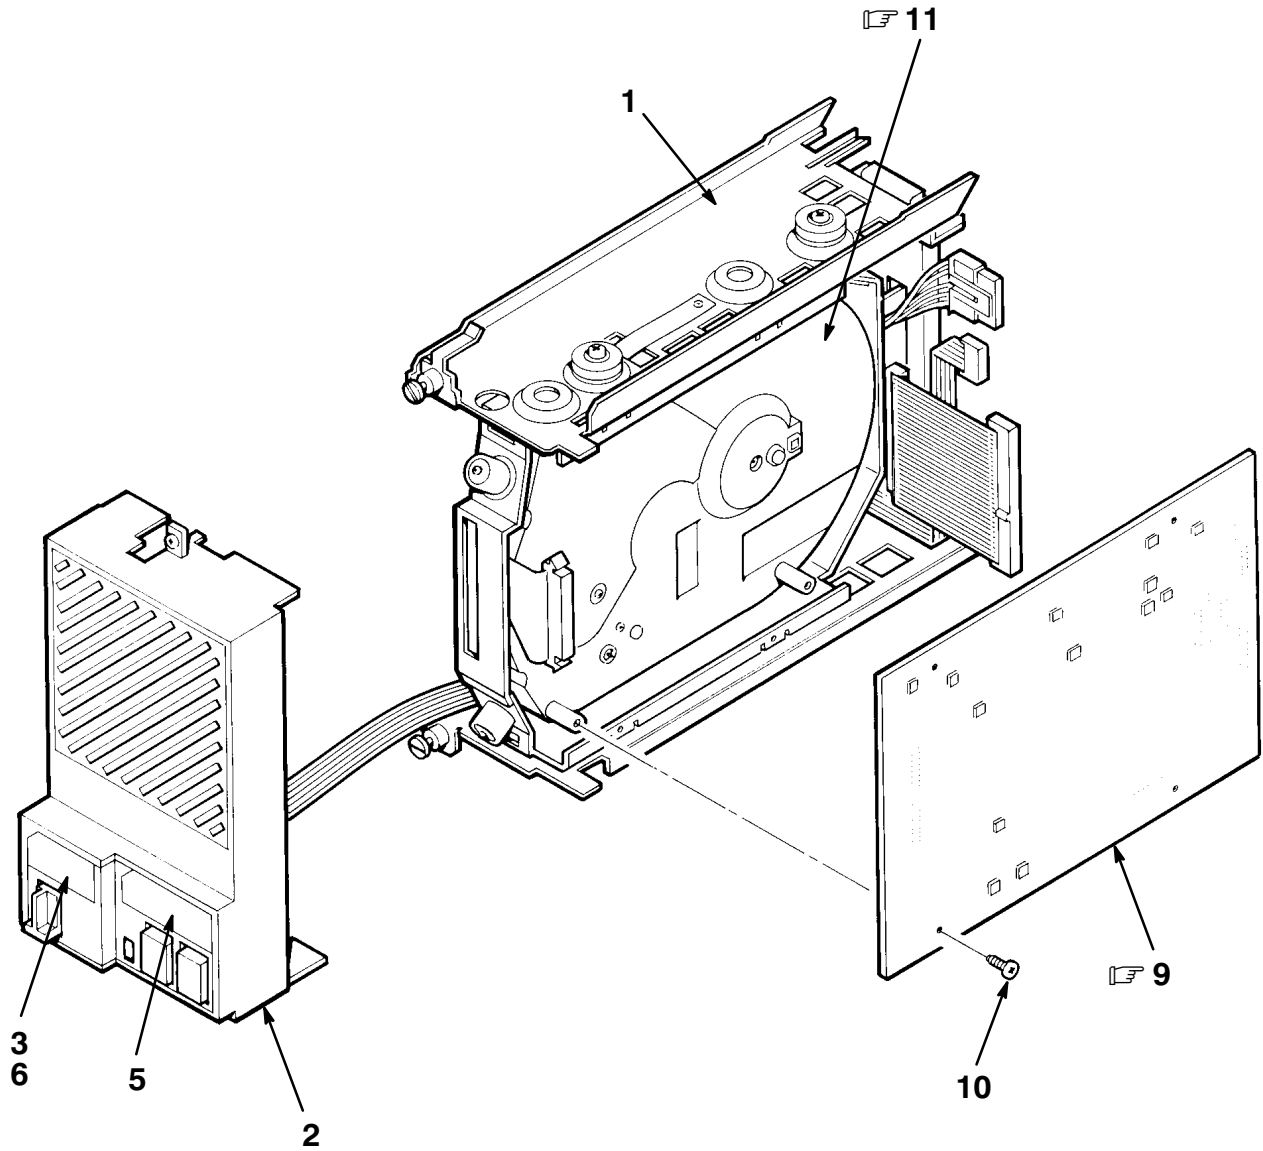
400ST−02−SC

*Figure 2. Storage Element, RF31E*

| FIG.&<br>ITEM<br>NO. | DESCRIPTION | DIGITAL<br>PART NO.<sup>B</sup> | ECO<br>CUT−IN<br>RF31E<br>00000 | USED<br>ON<br>CODE | REF<br>FIG<br>NO. |
|---|---|---|---|---|---|
| 2− | STORAGE ELEMENT, RF31E | | | | |
| | Code A − Used on RF31E−AA | RF31E−AA | | A | |
| | Code B − Used on RF31E−AF | RF31E−AF | | B | |
| 1 | *MOUNTING ASSEMBLY, RF31E ISE | 70−28086−01 | | | 4 |
| 2 | *BEZEL ASSEMBLY, 5 1/4 INCH DSSI DISK DRIVE | 70−27049−04 | | | 1,27 |
| 3 | *Label, Switch Marker | 36−18940−02 | | | |
| 4 | *Label, "Bar Code" (Not Shown)  (deleted) | 36−33151−03 | 00002 | | |
| 5 | *Label,"Drive No. 2 Language Variant" See Note 1 | 36−33183−02 | | | |
| 6 | *Label, "No. 2 Language Variant" (See Note 1) | 36−33183−04 | | | |
| 7 | *Documentation, "Storage Device Add On<br>   Procedure" (Not Shown) | EK−BA44A−IN | | B | |
| 8 | *Package Assembly (Not Shown) | 37−01215−04 | | B | |
| ☞9 | Module, RF31 Drive (See Note 2) | 54−18329−01 | | | |
| 10 | Screw, Machine Phl Pan Hd No. 4−40 x 3/8<br>   (See Note 2) | 90−06011−01 | | | |
| ☞11 | Mechanics Assembly, RF31 (See Note 2) | 70−24697−01 | | | |

Note 1:  Language Specific Used In Place Of 01, 03.

Note 2:  Not Part of RF31E−AA/AF Assembly, Shown For Reference Only.

☞ ⬅ INDICATES FRU LEVEL PARTS.
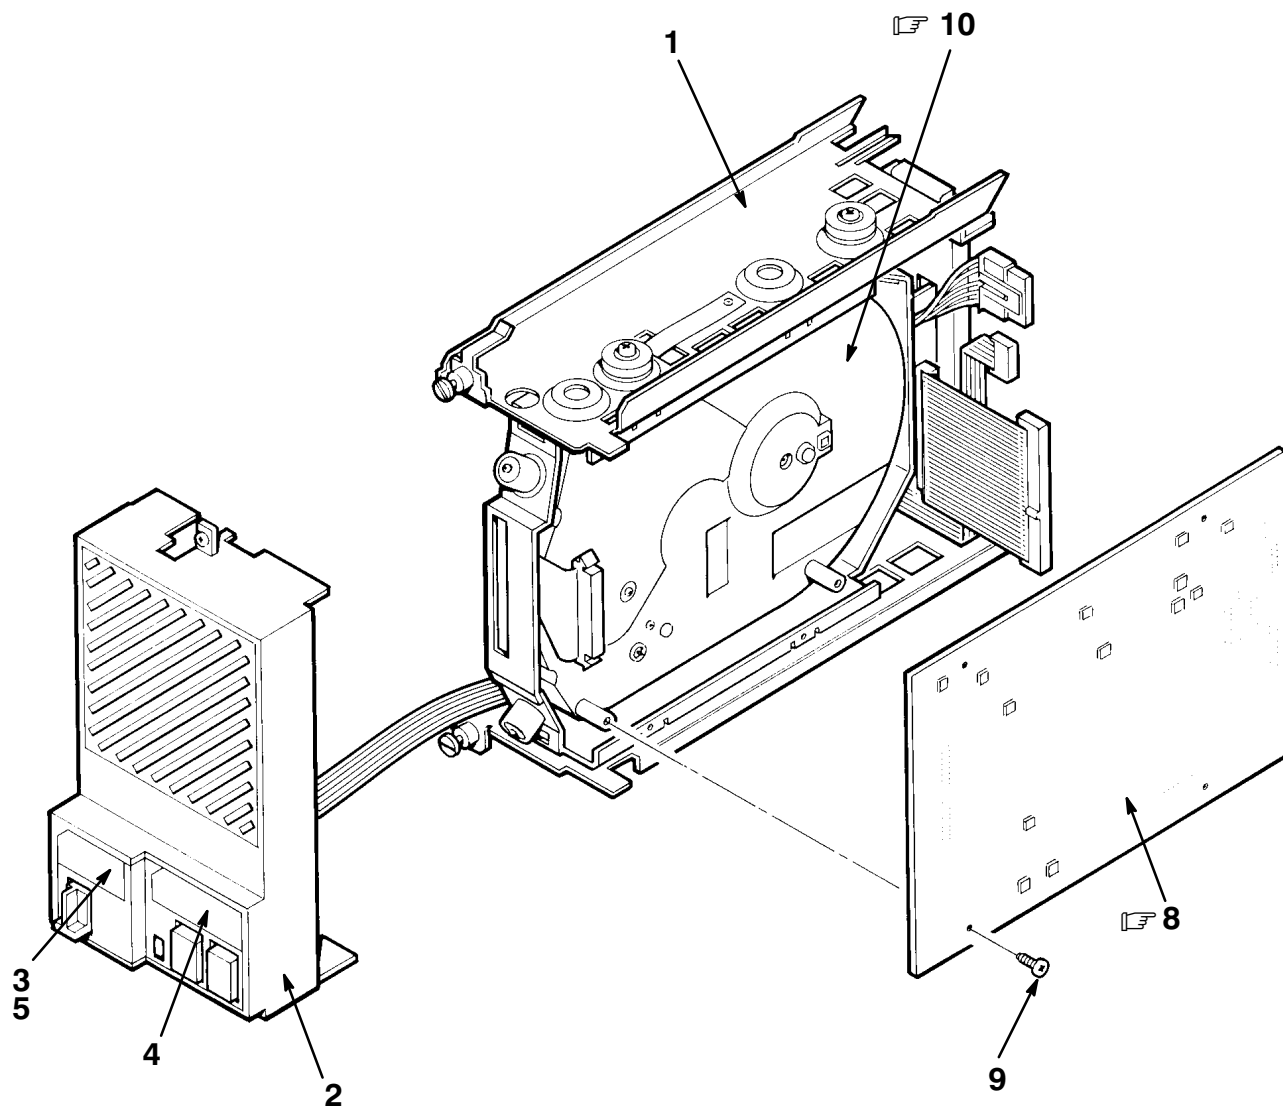


*Figure 3. Storage Element, RF31F*

400ST−03−SC

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. [A] | ECO CUT−IN RF31F 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 3− | STORAGE ELEMENT, RF31F | | | | 1 |
| | | | | | |
| | Code A − Used on RF31F−AA | RF31F−AA | | A | |
| | Code B − Used on RF31F−AF | RF31F−AF | | B | |
| | | | | | |
| 1 | *MOUNTING ASSEMBLY, RF31F ISE | 70−28086−02 | | | 4 |
| 2 | *BEZEL ASSEMBLY, 5 1/4 INCH DSSI DISK DRIVE | 70−27049−04 | | | 1,27 |
| 3 | *Label, Switch Marker | 36−18940−02 | | | |
| 4 | *Label,"Drive No. 2 Language Variant" See Note 1 | 36−33183−02 | | | |
| 5 | *Label, "No. 2 Language Variant" (See Note 1) | 36−33183−04 | | | |
| 6 | *Documentation, "Storage Device Add On Procedure" (Not Shown) | EK−BA44A−IN | | B | |
| 7 | *Package Assembly (Not Shown) | 37−01215−04 | | B | |
| ☞8 | Module, RF31F Drive (See Note 2) | 54−18329−02 | | | |
| 9 | Screw, Machine Phl Pan Hd No. 4−40 x 3/8 (See Note 2) | 90−06011−01 | | | |
| ☞10 | Mechanics Assembly, RF31F (See Note 2) | 70−24697−01 | | | |

Note 1: Language Specific Used In Place Of 01, 03.

Note 2: Not Part of RF31F−AA/AF Assembly, Shown For Reference Only.

☞ ☜ INDICATES FRU LEVEL PARTS.
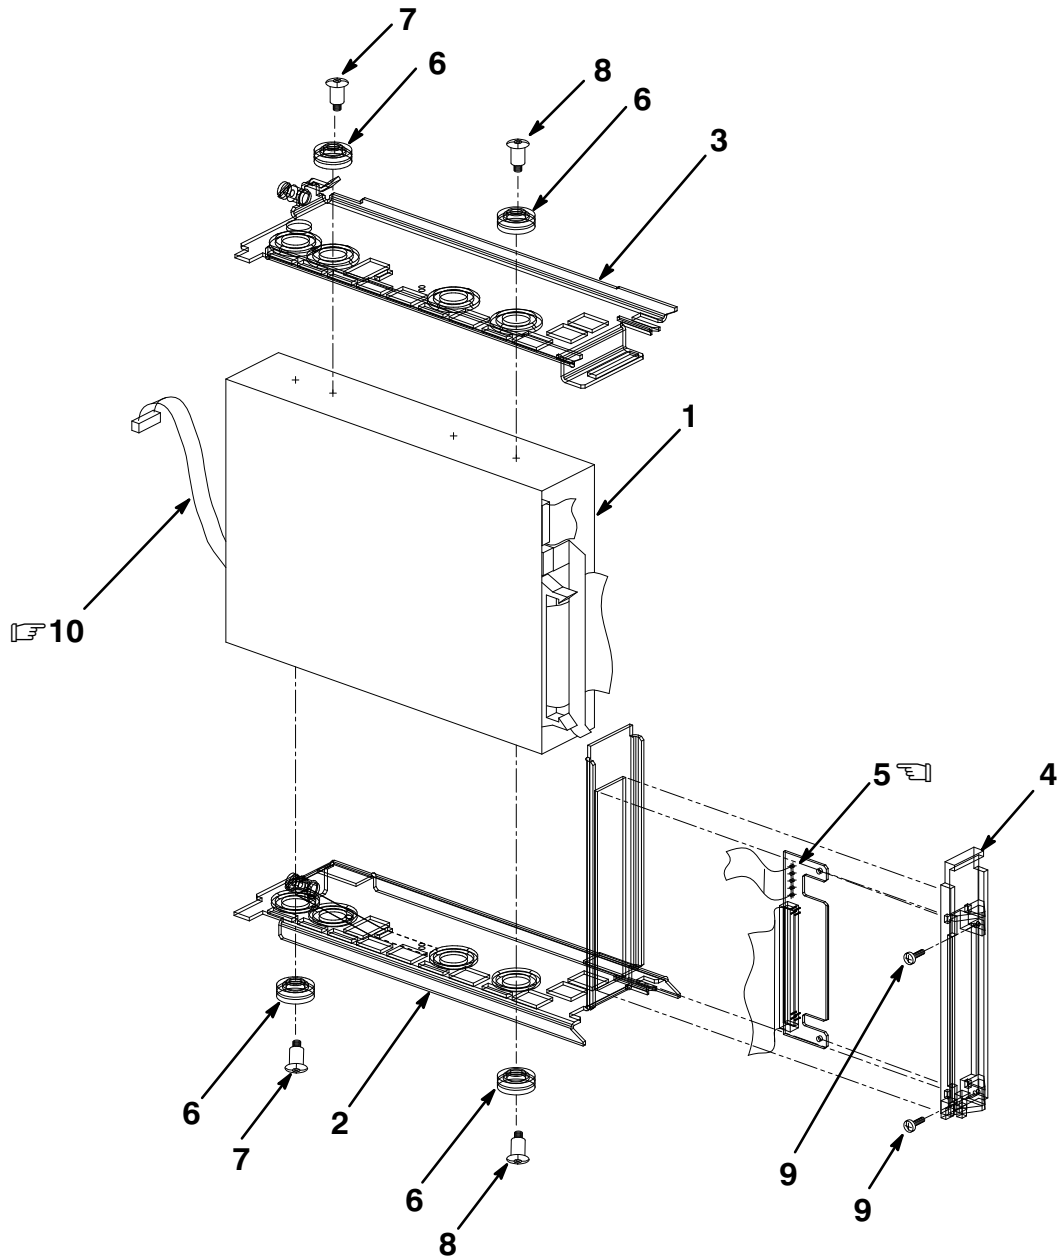

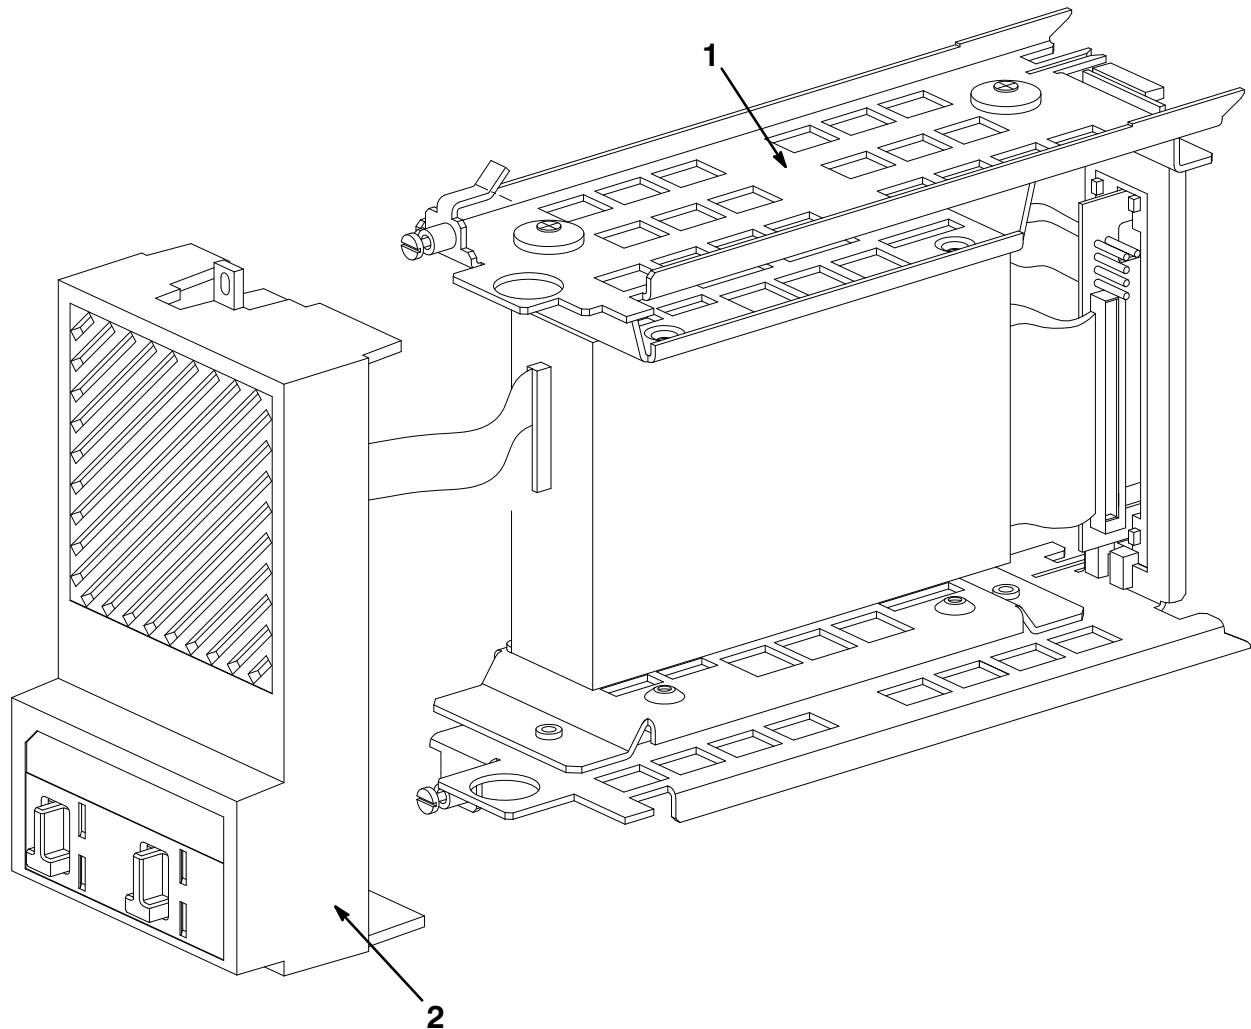
400ST−04−IL

*Figure 4. Mounting Assembly, RF31E/RF31F ISE*

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. <sup>B</sup> | ECO CUT−IN 70−28086 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 4− | MOUNTING ASSEMBLY, RF31E ISE | 70−28086−01 | | A | 2 |
| | MOUNTING ASSEMBLY, RF31F ISE | 70−28086−02 | 00002 | B | 3 |
| | | | | | |
| ☞1 | *Disk Drive Assembly RF31E | RF31−EA | | A | |
| | *Disk Drive Assembly RF31F | RF31F−EA | 00002 | B | |
| 2 | *Bracket Assembly, Bottom Drive | 70−27469−01 | | | |
| 3 | *Bracket Assembly, Top Drive | 74−40846−01 | | | |
| 4 | *Bracket, Paddle Board | 74−38830−01 | | | |
| ☞5 | *Module, DSSI Interface Card | 54−19787−01 | | | |
| 6 | *Isolator, Shock (deleted) | 12−32626−01 | 00001 | | |
| | *Isolator, Shock Grommet (added) | 12−32626−04 | 00001 | | |
| 7 | *Screw, Machine Phl Pan Hd No. 6−32 x 1/2 (deleted) | 90−06024−02 | 00001 | | |
| | *Screw, Shoulder No. 6−32 x 1/2 (added) | 12−34462−01 | 00001 | | |
| 8 | *Screw, Machine Flat Hd No. 6−32 x 5/8 (deleted) | 90−06025−02 | 00001 | | |
| | *Screw, Shoulder No. 6−32 x 1/2 (added) | 12−34462−01 | 00001 | | |
| 9 | *Screw, Phl Pan Hd No. 4−40 x 1/4 | 90−09315−01 | | | |
| ☞10 | *Cable Assembly, 10 Cond | 17−02706−01 | | | |

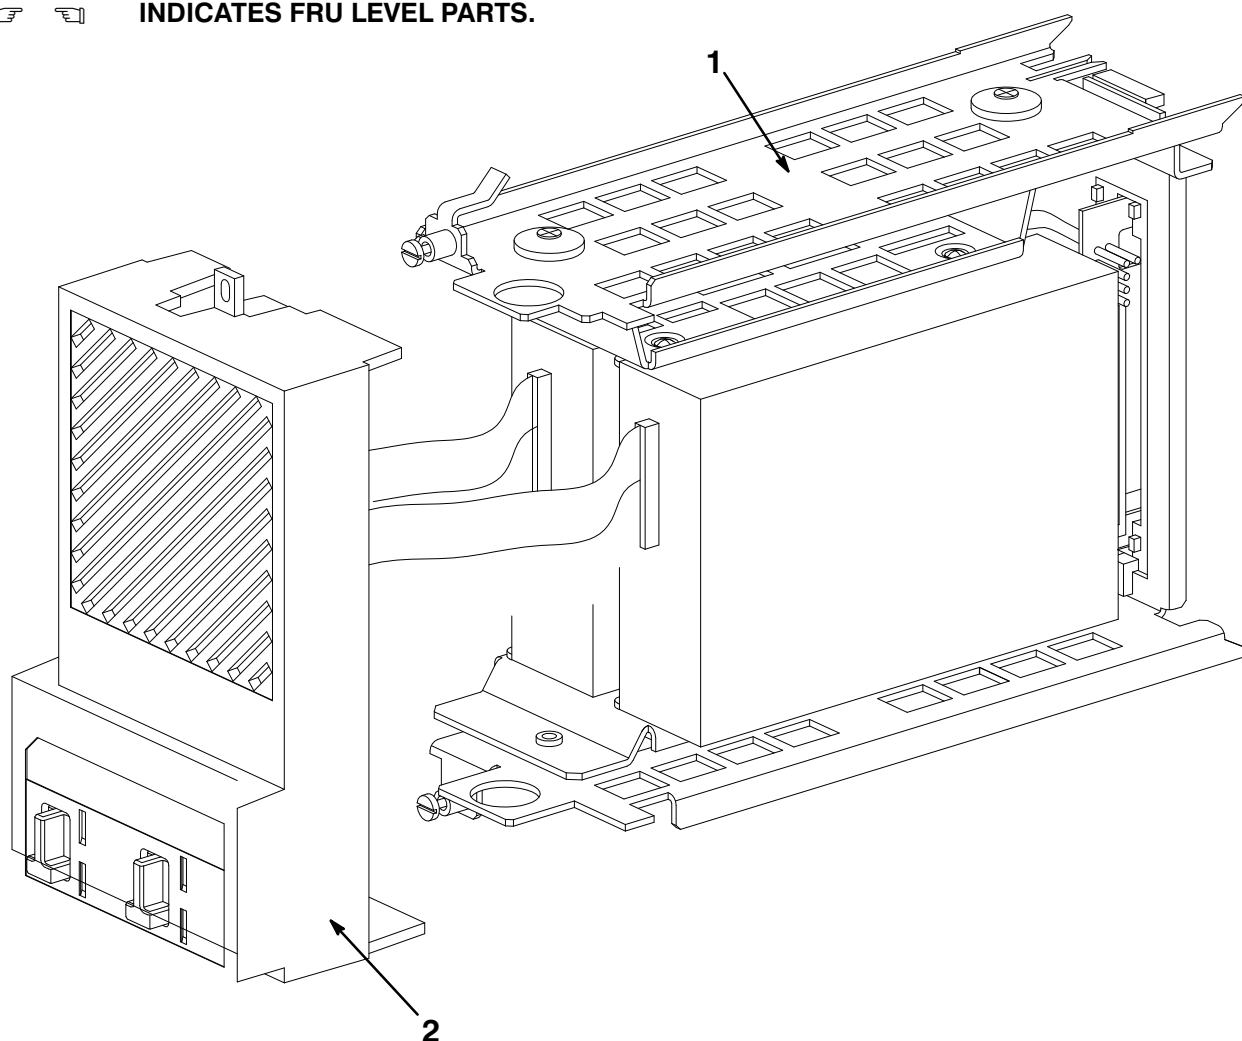| FIG.& ITEM NO. | DESCRIPTION | DIGITAL[A] PART NO. | ECO CUT−IN RF31T 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 5− | STORAGE ELEMENT, RF31T | | | | 1 |
| | Code A − Used on RF31T−AA | RF31T−AA | | A | |
| | Code B − Used on RF31T−AF | RF31T−AF | | B | |
| 1 | *MOUNTING ASSEMBLY, RF31T ISE | 70−29475−03 | | | 7 |
| 2 | *BEZEL ASSEMBLY, 3 1/2 INCH DSSI DISK DRIVE | 70−29478−02 | | | 1,28 |
| 3 | *Documentation, "Storage Device Add On Procedure" (Not Shown) | EK−BA44A−IN | | B | |
| 4 | *Package Assembly (Not Shown) | 37−01215−01 | | B | |

☞ ☜ INDICATES FRU LEVEL PARTS.



400ST−05−IL

*Figure 5. Storage Element, RF31T*

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. [A] | ECO CUT−IN RF312 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 6− | STORAGE ELEMENT, RF312 DUAL | | | | 1 |
| | Code A − Used on RF312−AA | RF312−AA | | A | |
| | Code B − Used on RF312−AF | RF312−AF | | B | |
| 1 | *MOUNTING ASSEMBLY, RF35 ISE DUAL | 70−29475−04 | | | 7 |
| 2 | *BEZEL ASSEMBLY, 3 1/2 INCH DSSI DISK DRIVE | 70−29478−02 | | | 1,28 |
| 3 | *Documentation, "Storage Device Add On Procedure" (Not Shown) | EK−BA44A−IN | | B | |
| 4 | *Package Assembly (Not Shown) | 37−01215−01 | | B | |

☞ ☜ INDICATES FRU LEVEL PARTS.



400ST−06−IL

**Figure 6. Storage Element, RF312 DUAL**

☞ ☜ **INDICATES FRU LEVEL PARTS.**



**VARIATION 04 SHOWN**
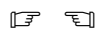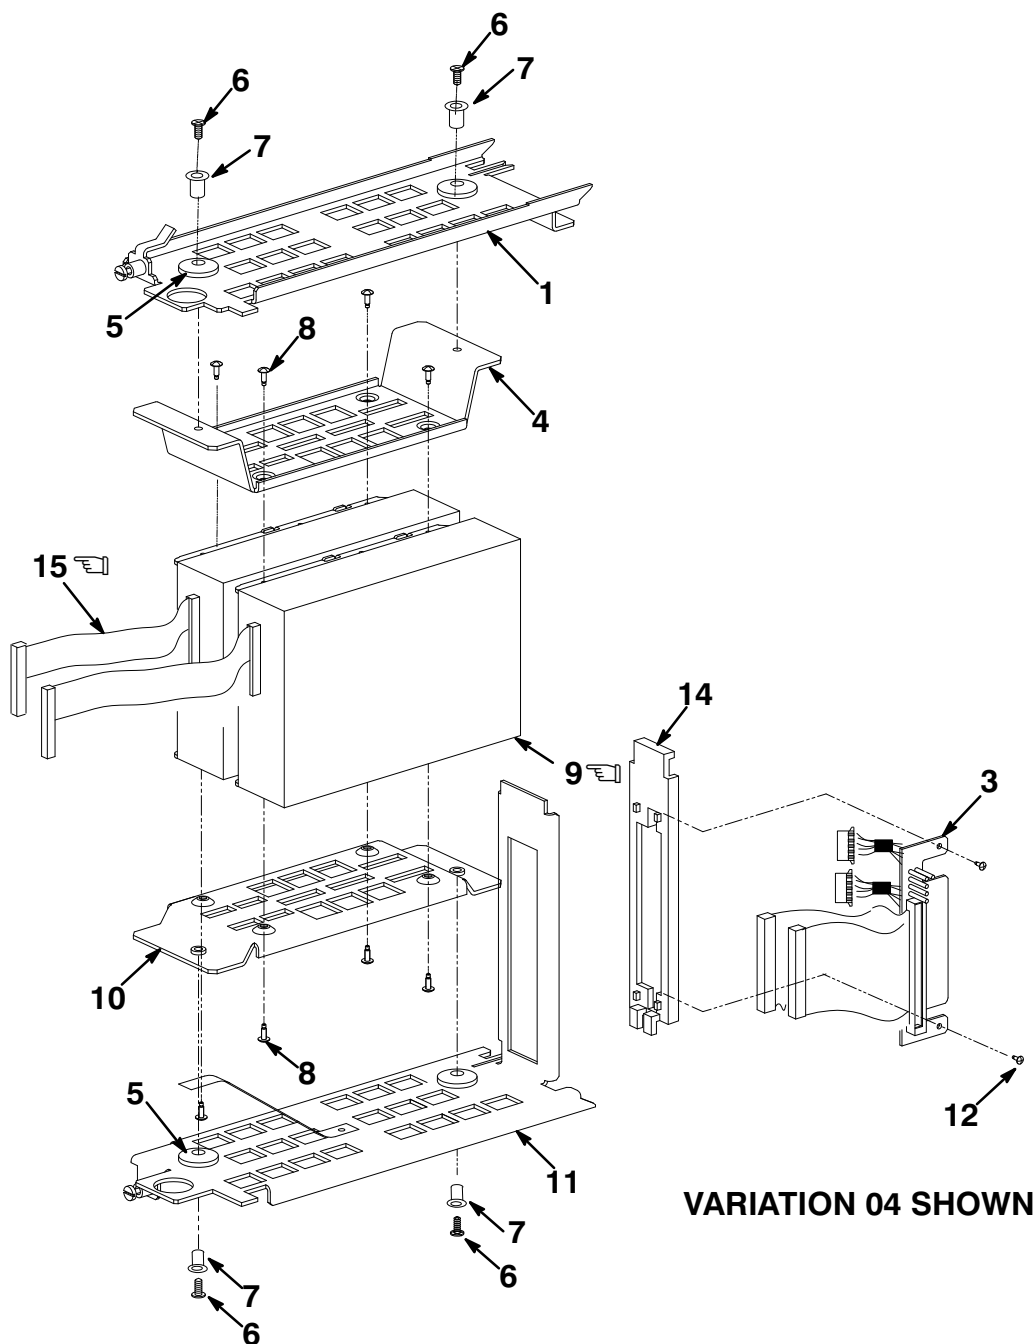
400ST−07−IL

*Figure 7. Mounting Assembly, RF31T ISE*

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. ᴮ | ECO CUT−IN 70−29475 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 7− | MOUNTING ASSEMBLY, RF31T ISE | 70−29475−03 | | A | 5 |
| | MOUNTING ASSEMBLY, RF312 ISE DUAL | 70−29475−04 | | B | 6 |
| | | | | | |
| 1 | *Bracket Assembly, Top Drive | 74−44231−01 | | | |
| 2 | This Item Is Not Used. | | | | |
| ☞3 | *Module,  Paddle | 54−19787−03 | | | |
| 4 | *Plate, Top Bracket Adapter | 74−44233−01 | | | |
| 5 | *Isolator, Shock Grommet | 12−32626−04 | | | |
| 6 | *Screw, Machine Flat Hd No. 6−32 x 5/8 | 90−06025−02 | | | |
| 7 | *Isolator, Shock Ferrule | 12−32626−03 | | | |
| 8 | *Screw, Sems Phl Hd No. 6−32 x 1/4 | 90−10174−00 | | | |
| ☞9 | *Storage Element, RF31T (See Note) | RF31T−EA | | | |
| 10 | *Plate, Bottom Bracket Adapter | 74−44234−01 | | | |
| 11 | *Bracket Assembly, Bottom Drive | 70−29476−01 | | | |
| 12 | *Screw, Phl Pan Hd No. 4−40 x 1/4 | 90−09315−01 | | | |
| 13 | This Item Is Not Used. | | | | |
| 14 | *Bracket, Paddle Module | 74−38830−01 | | | |
| ☞15 | *Cable Assembly, RFP 7 in. Female Flat (See Note) | 17−03428−01 | | | |

NOTE:    Use Quantity of 1 for 70−29475−03.
         Use Quantity of 2 for 70−29475−04.

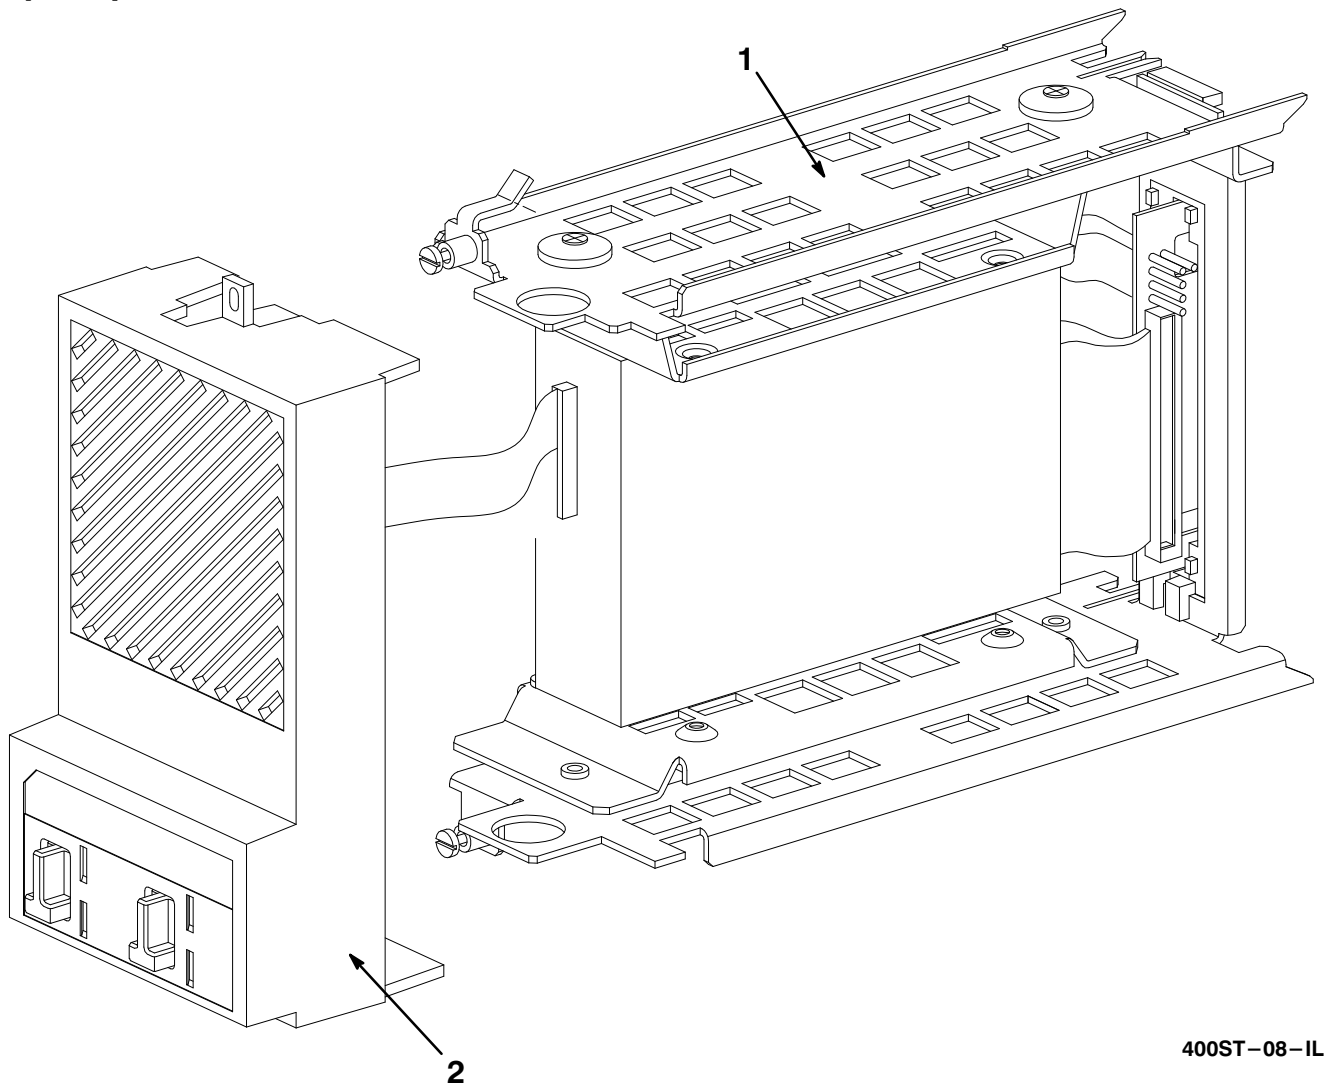| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. [A] | ECO CUT−IN RF35E 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 8− | STORAGE ELEMENT, RF35E | | | | |
| | Code A − Used on RF35E−AA | RF35E−AA | | A | |
| | Code B − Used on RF35E−AF | RF35E−AF | | B | |
| 1 | *MOUNTING ASSEMBLY, RF35 ISE | 70−29475−01 | | | 10 |
| 2 | *BEZEL ASSEMBLY, 3 1/2 INCH DSSI DISK DRIVE | 70−29478−02 | | | 1,28 |
| 3 | *Documentation, ''Storage Device Add On Procedure'' (Not Shown) | EK−BA44A−IN | | B | |
| 4 | *Package Assembly (Not Shown) | 37−01215−01 | | B | |

☞ ☜  INDICATES FRU LEVEL PARTS.



400ST−08−IL

**Figure 8. Storage Element, RF35E**

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. [A] | ECO CUT−IN RF352 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 9− | STORAGE ELEMENT, RF352 DUAL | | | | |
| | Code A − Used on RF352−AA | RF352−AA | | A | |
| | Code B − Used on RF352−AF | RF352−AF | | B | |
| 1 | *MOUNTING ASSEMBLY, RF35 ISE DUAL | 70−29475−02 | | | 10 |
| 2 | *BEZEL ASSEMBLY, 3 1/2 INCH DSSI DISK DRIVE | 70−29478−02 | | | 1,28 |
| 3 | *Documentation, "Storage Device Add On Procedure" (Not Shown) | EK−BA44A−IN | | B | |
| 4 | *Package Assembly (Not Shown) | 37−01215−01 | | B | |

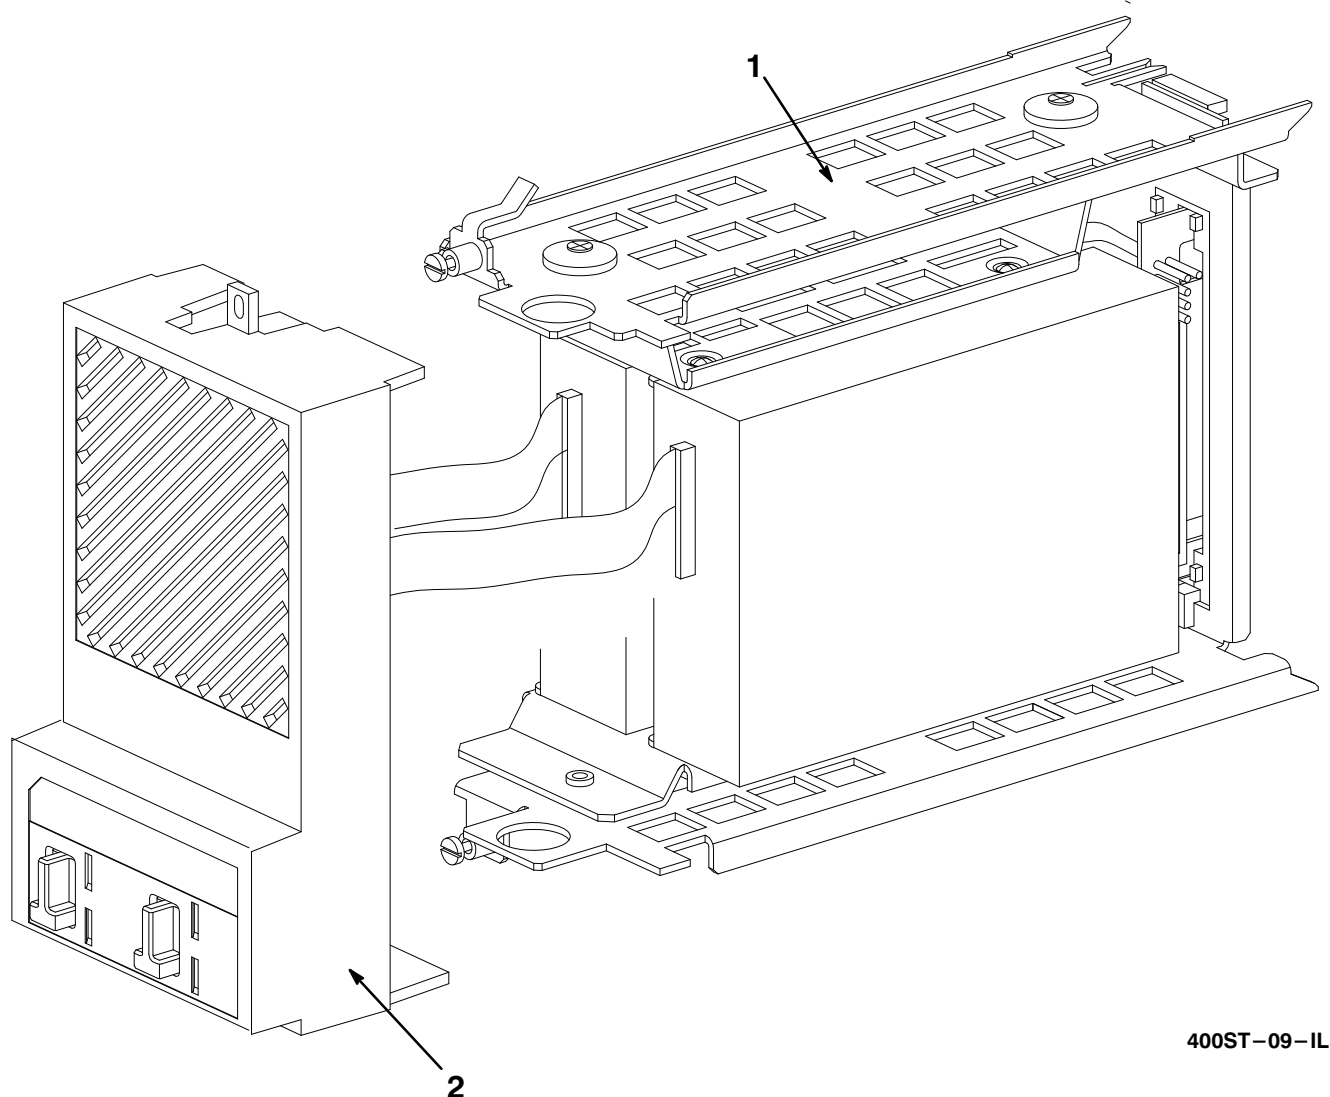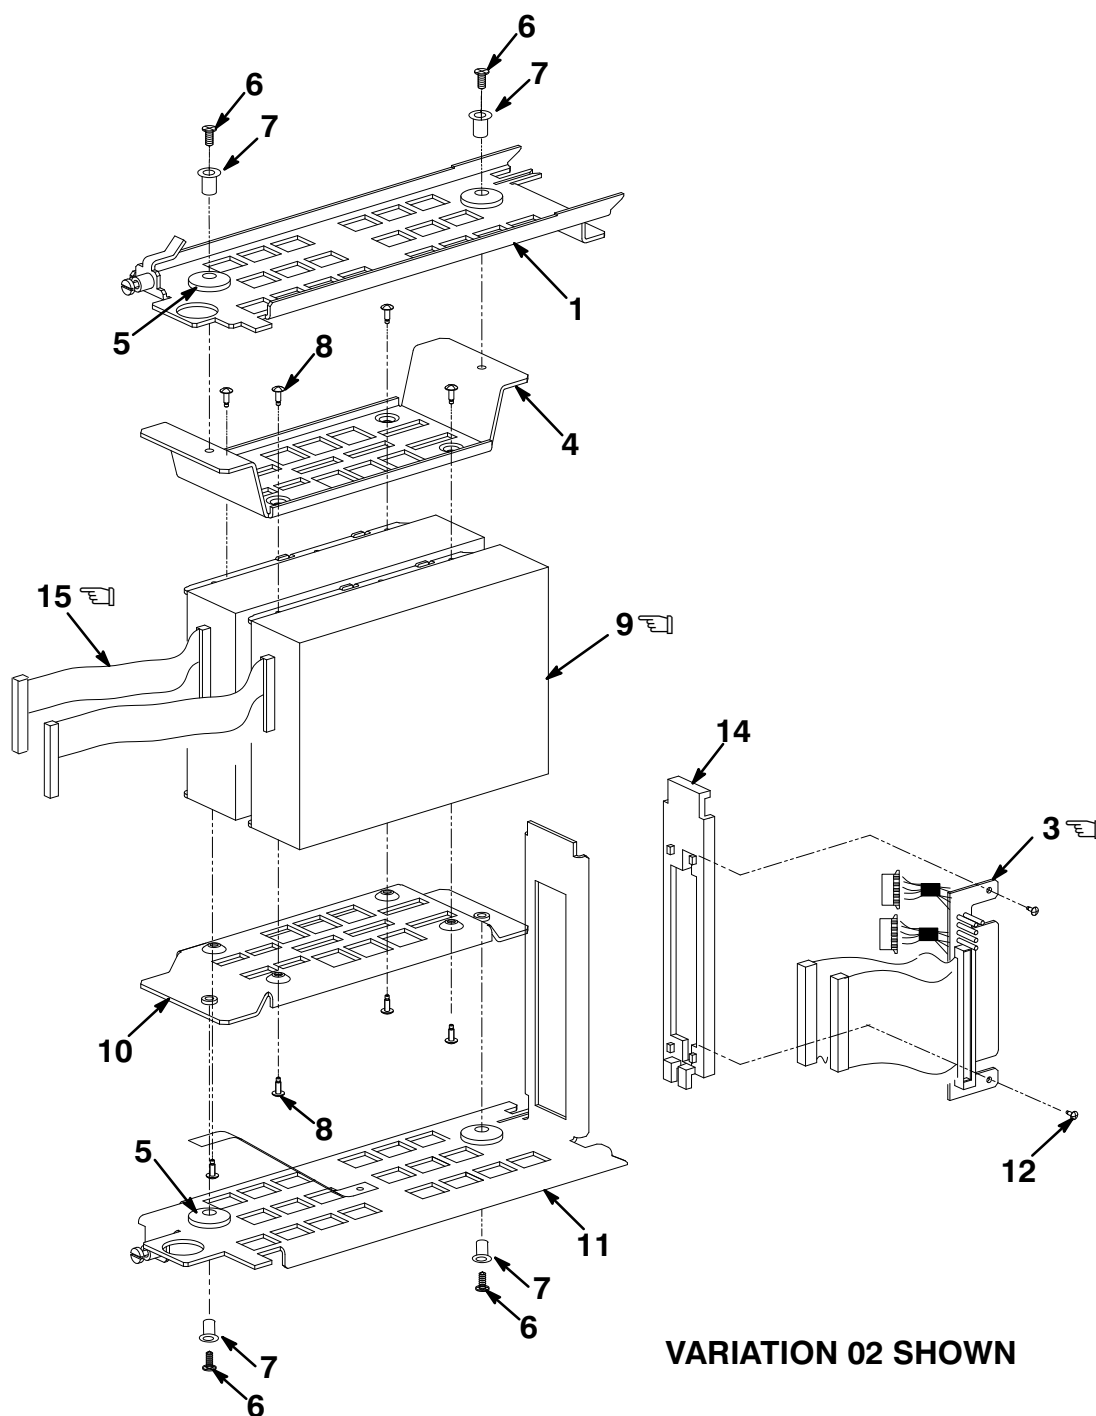☞  ☜   INDICATES FRU LEVEL PARTS.



400ST−09−IL

**Figure 9. Storage Element, RF352 Dual**

**VARIATION 02 SHOWN**

400ST−10−IL

*Figure 10. Mounting Assembly, RF35 ISE*

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. [c] | ECO CUT−IN 70−29475 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 10− | MOUNTING ASSEMBLY, RF35 ISE | 70−29475−01 | | A | 8 |
| | MOUNTING ASSEMBLY, RF35 ISE DUAL | 70−29475−02 | | B | 9 |
| | | | | | |
| 1 | *Bracket Assembly, Top Drive | 74−44231−01 | | | |
| 2 | This Item Is Not Used. | | | | |
| ☞3 | *Module, Paddle | 54−19787−03 | | | |
| 4 | *Plate, Top Bracket Adapter | 74−44233−01 | | | |
| 5 | *Isolator, Shock Grommet | 12−32626−04 | | | |
| 6 | *Screw, Machine Flat Hd No. 6−32 x 5/8 | 90−06025−02 | | | |
| 7 | *Isolator, Shock Ferrule | 12−32626−03 | | | |
| 8 | *Screw, Sems Phl Hd No. 6−32 x 1/4 | 90−10174−00 | | | |
| ☞9 | *Storage Element, RF35E (See Note) | RF35−EA | | | |
| 10 | *Plate, Bottom Bracket Adapter | 74−44234−01 | | | |
| 11 | *Bracket Assembly, Bottom Drive | 70−29476−01 | | | |
| 12 | *Screw, Phl Pan Hd No. 4−40 x 1/4 | 90−09315−01 | | | |
| 13 | This Item Is Not Used. | | | | |
| 14 | *Bracket, Paddle Module | 74−38830−01 | | | |
| ☞15 | *Cable Assembly, RFP 7 in. Female Flat (See Note) | 17−03428−01 | | | |

NOTE:   Use Quantity of 1 for 70−29475−01.
            Use Quantity of 2 for 70−29475−02.

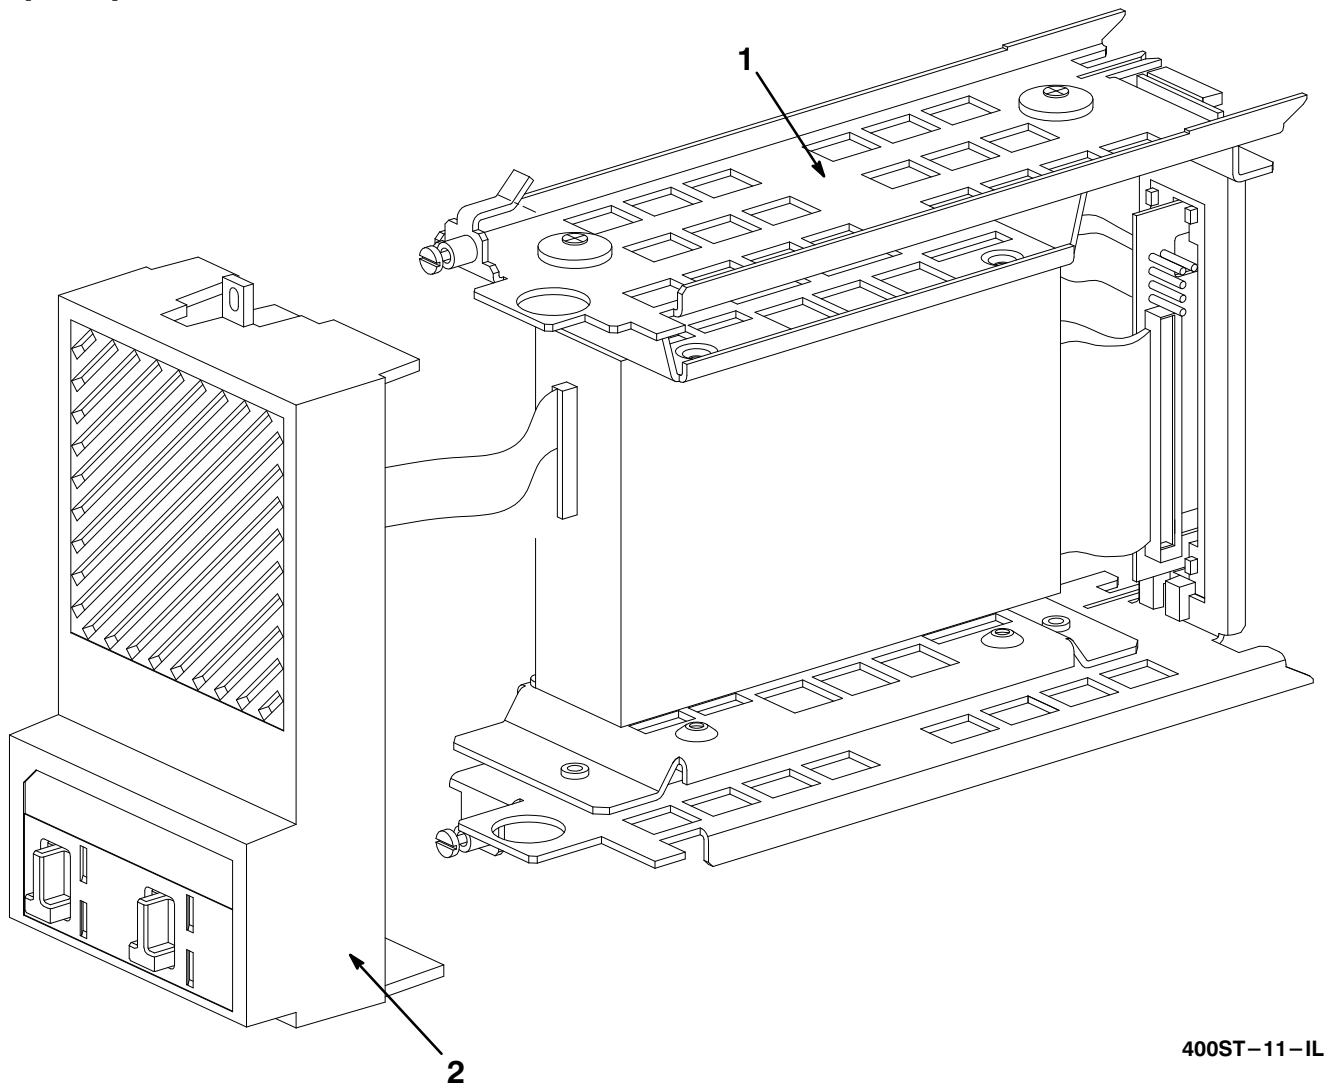| FIG.& ITEM NO. | DESCRIPTION | DIGITAL[A] PART NO. | ECO CUT−IN RF36E 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 11− | STORAGE ELEMENT, RF36E | | | | 1 |
| | Code A − Used on RF36E−AA | RF36E−AA | | A | |
| | Code B − Used on RF36E−AF | RF36E−AF | | B | |
| 1 | *MOUNTING ASSEMBLY, RF36 ISE | 70−29475−05 | | | 13 |
| 2 | *BEZEL ASSEMBLY, 3 1/2 INCH DSSI DISK DRIVE | 70−29478−02 | | | 1,28 |
| 3 | *Documentation, "Storage Device Add On Procedure" (Not Shown) | EK−BA44A−IN | | B | |
| 4 | *Package Assembly (Not Shown) | 37−01215−01 | | B | |

☞ ☜   INDICATES FRU LEVEL PARTS.



400ST−11−IL

*Figure 11. Storage Element, RF36E*

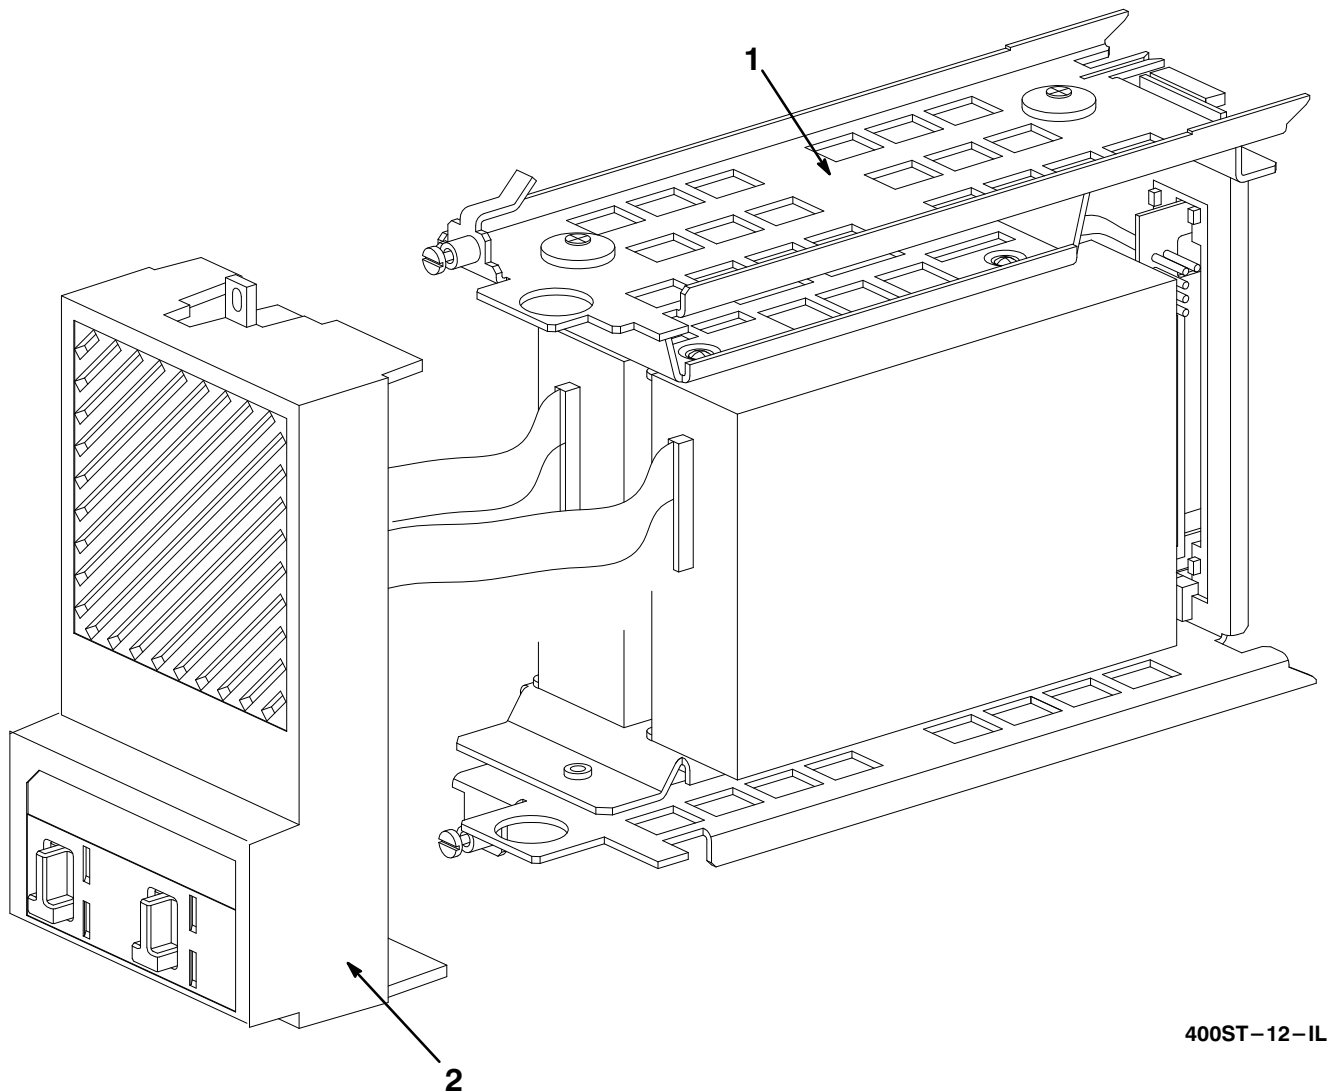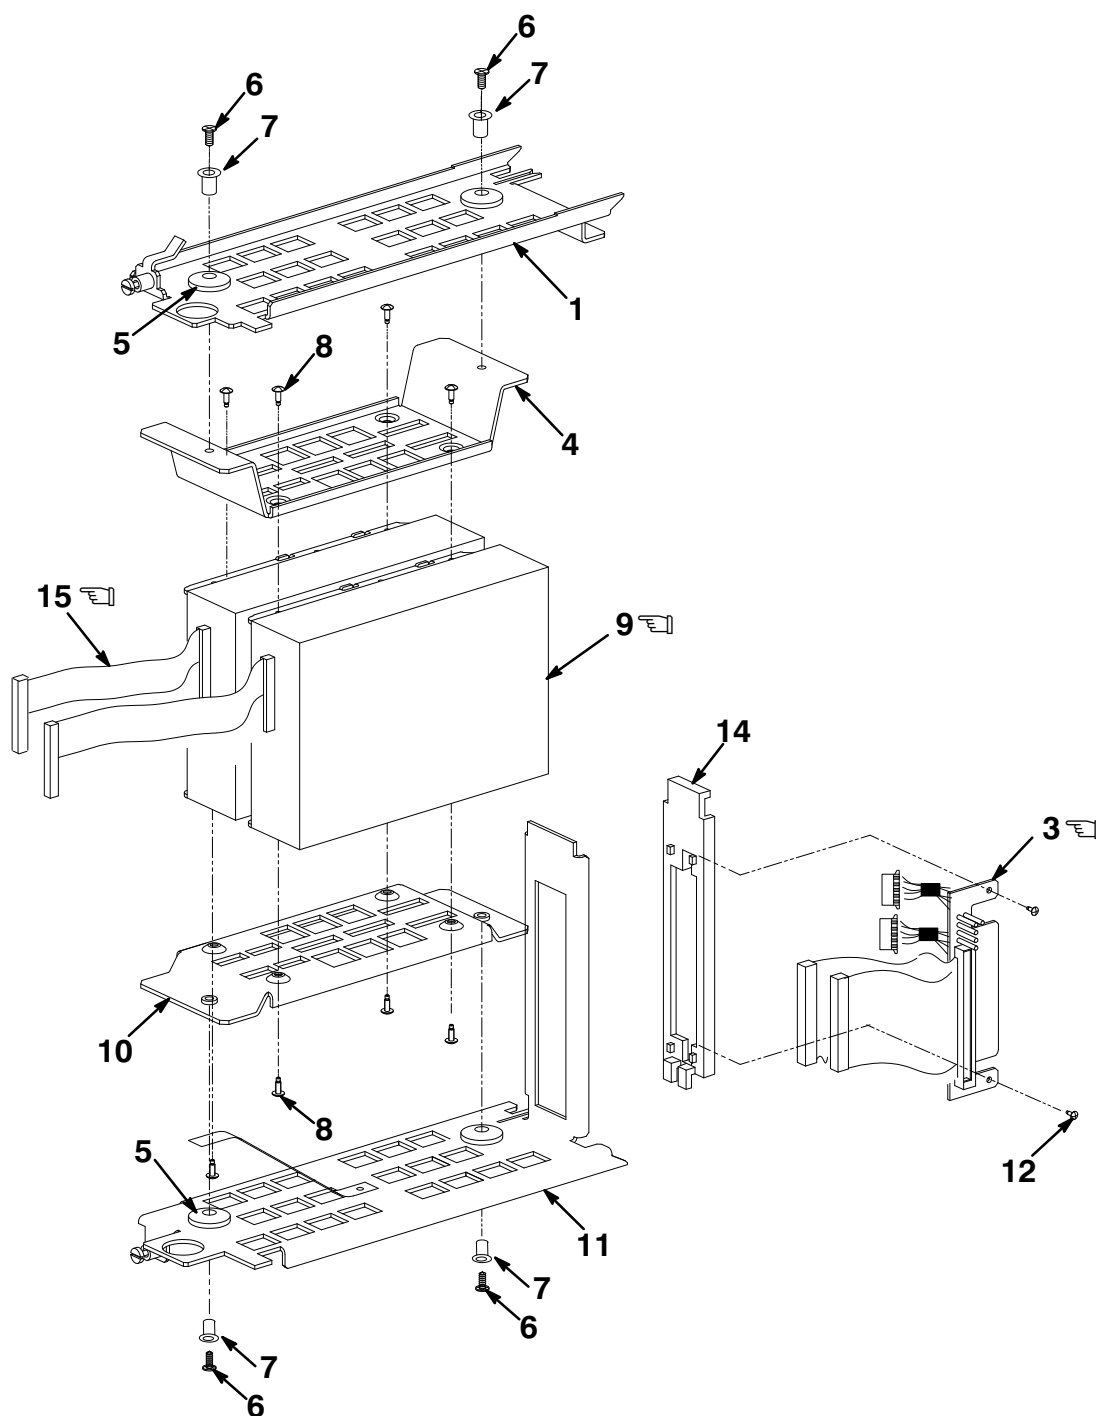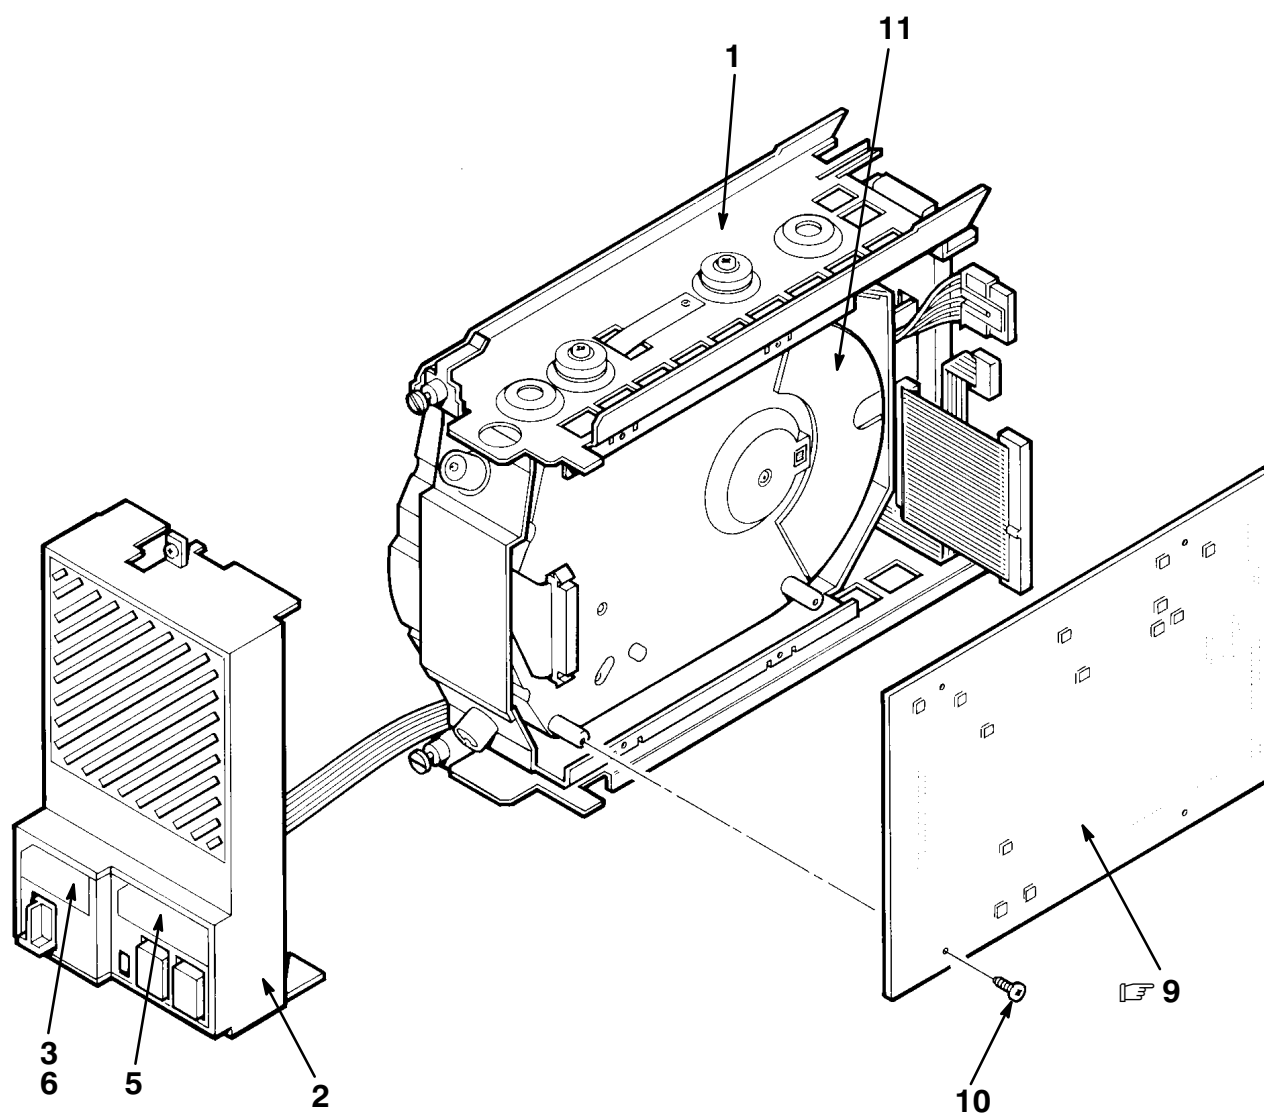| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. [A] | ECO CUT−IN RF362 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 12− | STORAGE ELEMENT, RF362 DUAL | | | | 1 |
| | Code A − Used on RF362−AA | RF362−AA | | A | |
| | Code B − Used on RF362−AF | RF362−AF | | B | |
| 1 | *MOUNTING ASSEMBLY, RF36 ISE DUAL | 70−29475−06 | | | 13 |
| 2 | *BEZEL ASSEMBLY, 3 1/2 INCH DSSI DISK DRIVE | 70−29478−02 | | | 1,28 |
| 3 | *Documentation, ''Storage Device Add On Procedure'' (Not Shown) | EK−BA44A−IN | | B | |
| 4 | *Package Assembly (Not Shown) | 37−01215−01 | | B | |

☞ ☜ INDICATES FRU LEVEL PARTS.



400ST−12−IL

**Figure 12. Storage Element, RF362 Dual**
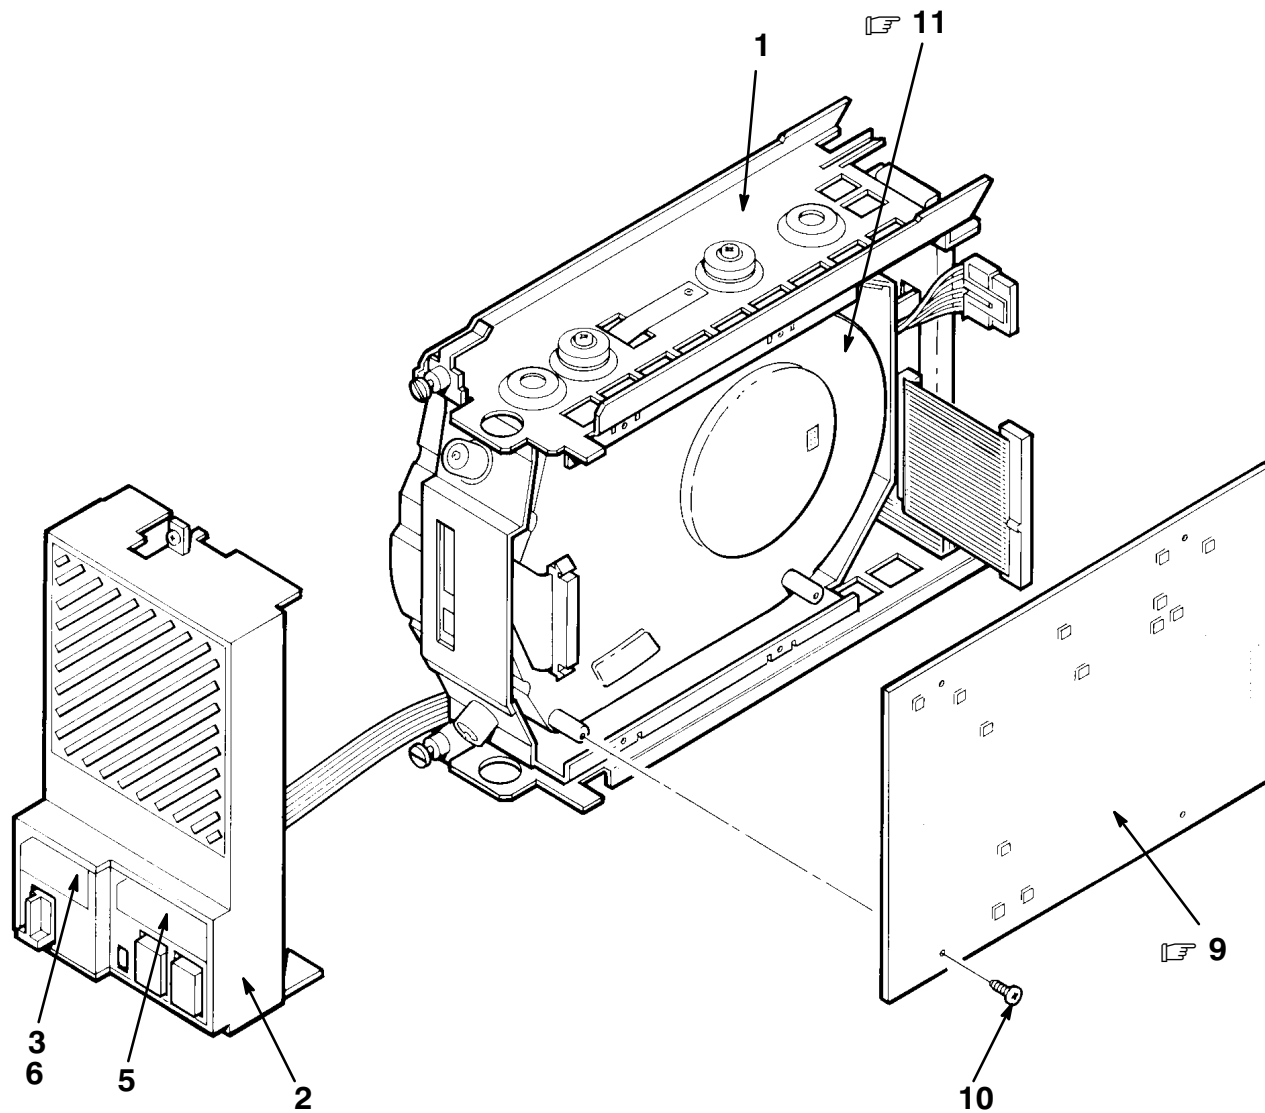
400ST−13−IL

*Figure 13. Mounting Assembly, RF36 ISE*

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. ᶜ | ECO CUT−IN 70−29475 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 13− | MOUNTING ASSEMBLY, RF36 ISE (added) | 70−29475−05 | 00002 | A | 11 |
| | MOUNTING ASSEMBLY, RF36 ISE DUAL (added) | 70−29475−06 | 00002 | B | 12 |
| | | | | | |
| 1 | *Bracket Assembly, Top Drive | 74−44231−01 | | | |
| 2 | This Item Is Not Used. | | | | |
| ☞3 | *Module, Paddle | 54−19787−03 | | | |
| 4 | *Plate, Top Bracket Adapter | 74−44233−01 | | | |
| 5 | *Isolator, Shock Grommet | 12−32626−04 | | | |
| 6 | *Screw, Machine Flat Hd No. 6−32 x 5/8 | 90−06025−02 | | | |
| 7 | *Isolator, Shock Ferrule | 12−32626−03 | | | |
| 8 | *Screw, Sems Phl Hd No. 6−32 x 1/4 | 90−10174−00 | | | |
| ☞9 | *Storage Element, RF36E (See Note) | RF36−EA | | | |
| 10 | *Plate, Bottom Bracket Adapter | 74−44234−01 | | | |
| 11 | *Bracket Assembly, Bottom Drive | 70−29476−01 | | | |
| 12 | *Screw, Phl Pan Hd No. 4−40 x 1/4 | 90−09315−01 | | | |
| 13 | This Item Is Not Used. | | | | |
| 14 | *Bracket, Paddle Module | 74−38830−01 | | | |
| ☞15 | *Cable Assembly, RFP 7 in. Female Flat (See Note) | 17−03428−01 | | | |
| | | | | | |
| | NOTE: Use Quantity of 1 for 70−29475−05. Use Quantity of 2 for 70−29475−06. | | | | |

☞ ☜ **INDICATES FRU LEVEL PARTS.**



400ST−14−SC

**Figure 14. Storage Element, RF71E**

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. ^B | ECO CUT−IN RF71E 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 14− | STORAGE ELEMENT, RF71E | | | | |
| | Code A − Used on RF71E−AA | RF71E−AA | | A | |
| | Code B − Used on RF71E−AF | RF71E−AF | | B | |
| 1 | *MOUNTING ASSEMBLY, RF71 ISE | 70−28087−01 | | | 18 |
| 2 | *BEZEL ASSEMBLY, 5 1/4 INCH DISK DRIVE | 70−27049−04 | | | 1,27 |
| 3 | Label, ''Switch Marker'' (See Notes 1 and 2) | 36−18940−02 | | | |
| 4 | *Label, ''Bar Code, Intergrated Storage'' (deleted) (Not Shown) | 36−33151−02 | 00001 | | |
| 5 | *Label, ''Drive No. 2 Language Variant'' (See Note 3) | 36−33183−02 | | | |
| 6 | *Label, ''No. 2 Language Variant'' (See Note 3) | 36−33183−04 | | | |
| 7 | *Documentation, ''Storage Device Add On Procedure'' (Not Shown) | EK−BA44A−IN | | B | |
| 8 | *Package Assembly (Not Shown) | 37−01215−01 | | B | |
| ☞9 | Module, RF71  Drive (See Notes 1 and 4) | 54−18316−XX | | | |
| 10 | Screw, Machine Phl Pan Hd No. 4−40 x 3/8 (See Note 1) | 90−06011−01 | | | |
| ☞11 | Mechanics Assembly, RF71 (See Note 1) | 70−23557−01 | | | |

Note 1:  Not Part of RF71E−AA/AF Assembly,
         Shown for Reference Only.

Note 2:  Item Ships With System.

Note 3:  Language Specific Used In Place Of 01,
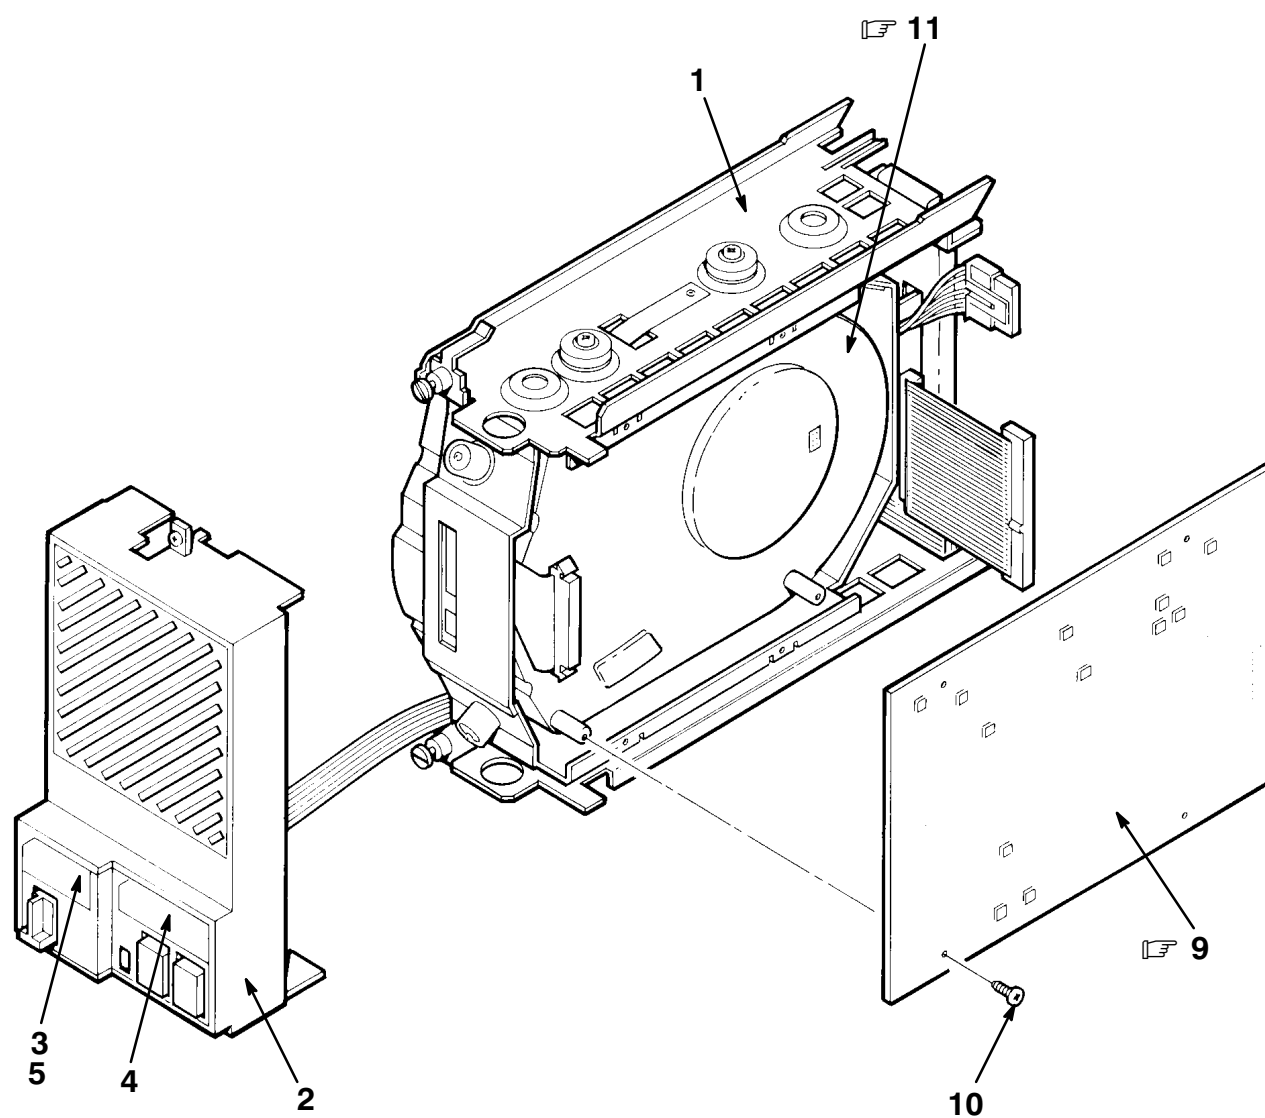         03.

Note 4:  XX = Order Latest Version.

☞ **11**

**1**

☞ **9**

**3**
**6**

**5**

**2**

**10**

400ST−15−SC

*Figure 15. Storage Element, RF72E*

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. | ECO CUT−IN RF72E 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 15− | STORAGE ELEMENT, RF72E | | | | |
| | Code A − Used on RF72E−AA | RF72E−AA | | A | |
| | Code B − Used on RF72E−AF | RF72E−AF | | B | |
| 1 | *MOUNTING ASSEMBLY, RF72 ISE | 70−28087−02 | | | 18 |
| 2 | *BEZEL ASSEMBLY, 5 1/4 INCH DSSI DISK DRIVE | 70−27049−04 | | | 1,27 |
| 3 | Label, ''Switch Marker'' (See Notes 1 and 2) | 36−18940−02 | | | |
| 4 | *Label, ''Bar Code, Integrated Storage'' (Not Shown) (deleted) | 36−33151−04 | 00001 | | |
| 5 | *Label, ''Drive No. 2 Language Variant'' (See Note 3) | 36−33183−02 | | | |
| 6 | *Label, ''No. 2 Language Variant'' (See Note 3) | 36−33183−04 | | | |
| 7 | *Documentation, ''Storage Device Add On Procedure'' (Not Shown) | EK−BA44A−IN | | B | |
| 8 | *Package Assembly (Not Shown) | 37−01215−01 | | B | |
| ☞9 | Module, RF72 Drive (See Notes 1 and 4) | 54−10091−XX | | | |
| 10 | Screw, Machine Phl Pan Hd No. 4−40 x 3/8 (See Note 1) | 90−06011−01 | | | |
| ☞11 | Mechanics Assembly, RF72 (See Note 1) | 70−25972−01 | | | |

Note 1:  Not Part of RF72E−AA/AF Assembly, Shown For Reference Only.

Note 2:  Item Ships With System.

Note 3:  Language Specific, Used In Place Of 01, 03.

Note 4:  XX = Order Latest Version.

☞ ☜ **INDICATES FRU LEVEL PARTS.**

☞ **11**

**1**

**3**
**5**

**4**

**2**

☞ **9**

**10**

*Figure 16. Storage Element, RF73E*

| FIG.&amp; ITEM NO. | DESCRIPTION | DIGITAL PART NO. [A] | ECO CUT−IN RF73E 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 16− | STORAGE ELEMENT, RF73E | | | | |
| | | | | | |
| | Code A − Used on RF73E−AA | RF73E−AA | | A | |
| | Code B − Used on RF73E−AF | RF73E−AF | | B | |
| | | | | | |
| 1 | *MOUNTING ASSEMBLY, RF73 ISE | 70−28087−03 | | | 18 |
| 2 | *BEZEL ASSEMBLY, 5 1/4 INCH DISK DRIVE | 70−27049−04 | | | 1,27 |
| 3 | Label, ''Switch Marker'' (See Notes 1 and 2) | 36−18940−02 | | | |
| 4 | *Label, ''Drive No. 2 Language Variant'' (See Note 3) | 36−33183−02 | | | |
| 5 | *Label, ''No. 2 Language Variant'' (See Note 3) | 36−33183−04 | | | |
| 6 | *Documentation, ''Storage Device Add On Procedure'' (Not Shown) | EK−BA44A−IN | | B | |
| 7 | *Package Assembly (Not Shown) | 37−01215−01 | | B | |
| 8 | *Package Assembly (Bulk Shipment) (Not Shown) | 37−01186−07 | | A | |
| ☞9 | Module, RF73  Drive (See Notes 1 and 4) | 54−19119−XX | | | |
| 10 | Screw, Machine Phl Pan Hd No. 4−40 x 3/8 (See Note 1) | 90−06011−01 | | | |
| ☞11 | Mechanics Assembly, RF73 (See Note 1) | 70−28814−01 | | | |

Note 1:  Not Part of RF73E−AA/AF Assembly, Shown For Reference Only.

Note 2:  Item Ships With System.

Note 3:  Language Specific Used In Place Of 01, 03.

Note 4:  XX = Order Latest Version.

☞ ☜ **INDICATES FRU LEVEL PARTS.**
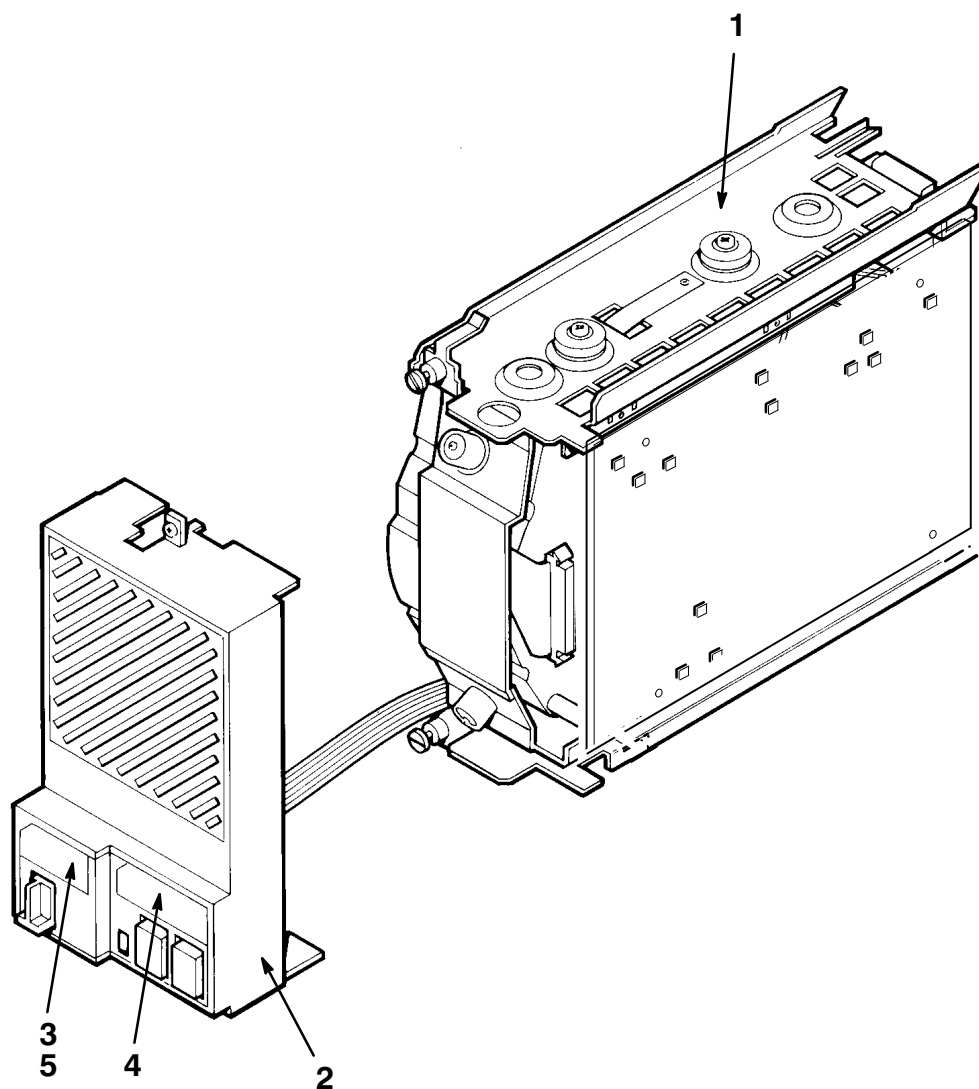


400ST−17−SC

*Figure 17. Storage Element, RF74E*
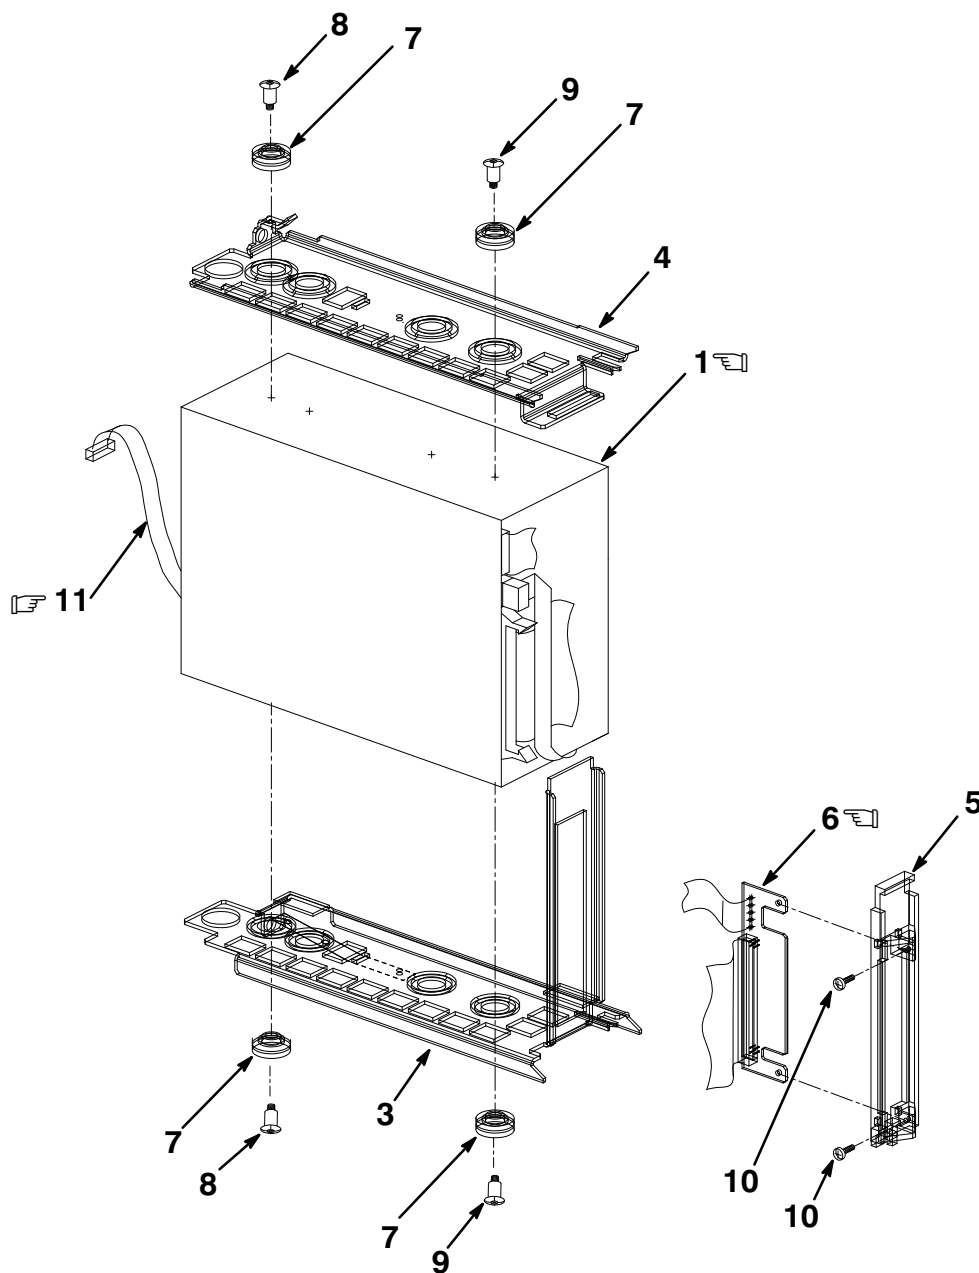
| FIG.&<br>ITEM<br>NO. | DESCRIPTION | A<br>DIGITAL<br>PART NO. | ECO<br>CUT−IN<br>RF74E<br>00000 | USED<br>ON<br>CODE | REF<br>FIG<br>NO. |
|---|---|---|---|---|---|
| 17− | ☞ STORAGE ELEMENT, RF74E | | | | |
| | Code A − Used on RF74E−AA | RF74E−AA | | A | |
| | Code B − Used on RF74E−AF | RF74E−AF | | B | |
| 1 | *MOUNTING ASSEMBLY, RF74 ISE | 70−28087−05 | | | 18 |
| 2 | *BEZEL ASSEMBLY, DISK DRIVE | 70−27049−04 | | | 1,27 |
| 3 | Label, ''Switch Marker'' (See Notes 1 and 2) | 36−18940−02 | | | |
| 4 | *Label, ''Drive No. 2 Language Variant''<br>   (See Note 3) | 36−33183−02 | | | |
| 5 | *Label, ''No. 2 Language Variant'' (See Note 3) | 36−33183−04 | | | |
| 6 | *Documentation, ''Storage Device Add On<br>   Procedure'' (Not Shown) | EK−BA44A−IN | | B | |
| 7 | *Package Assembly (Not Shown) | 37−01215−01 | | B | |
| | *Package Assembly (Bulk Shipment) (Not Shown) | 37−01186−07 | | A | |
| | Note 1:  Not Part of RF74E−AA/AF Assembly,<br>            Shown For Reference Only. | | | | |
| | Note 2:  Item Ships With System. | | | | |
| | Note 3:  Language Specific Used In Place Of 01,<br>            03. | | | | |

☞ ☜ **INDICATES FRU LEVEL PARTS.**



400ST−18−IL

*Figure 18. Mounting Assembly, RF71/RF72/RF73/RF74 ISE*

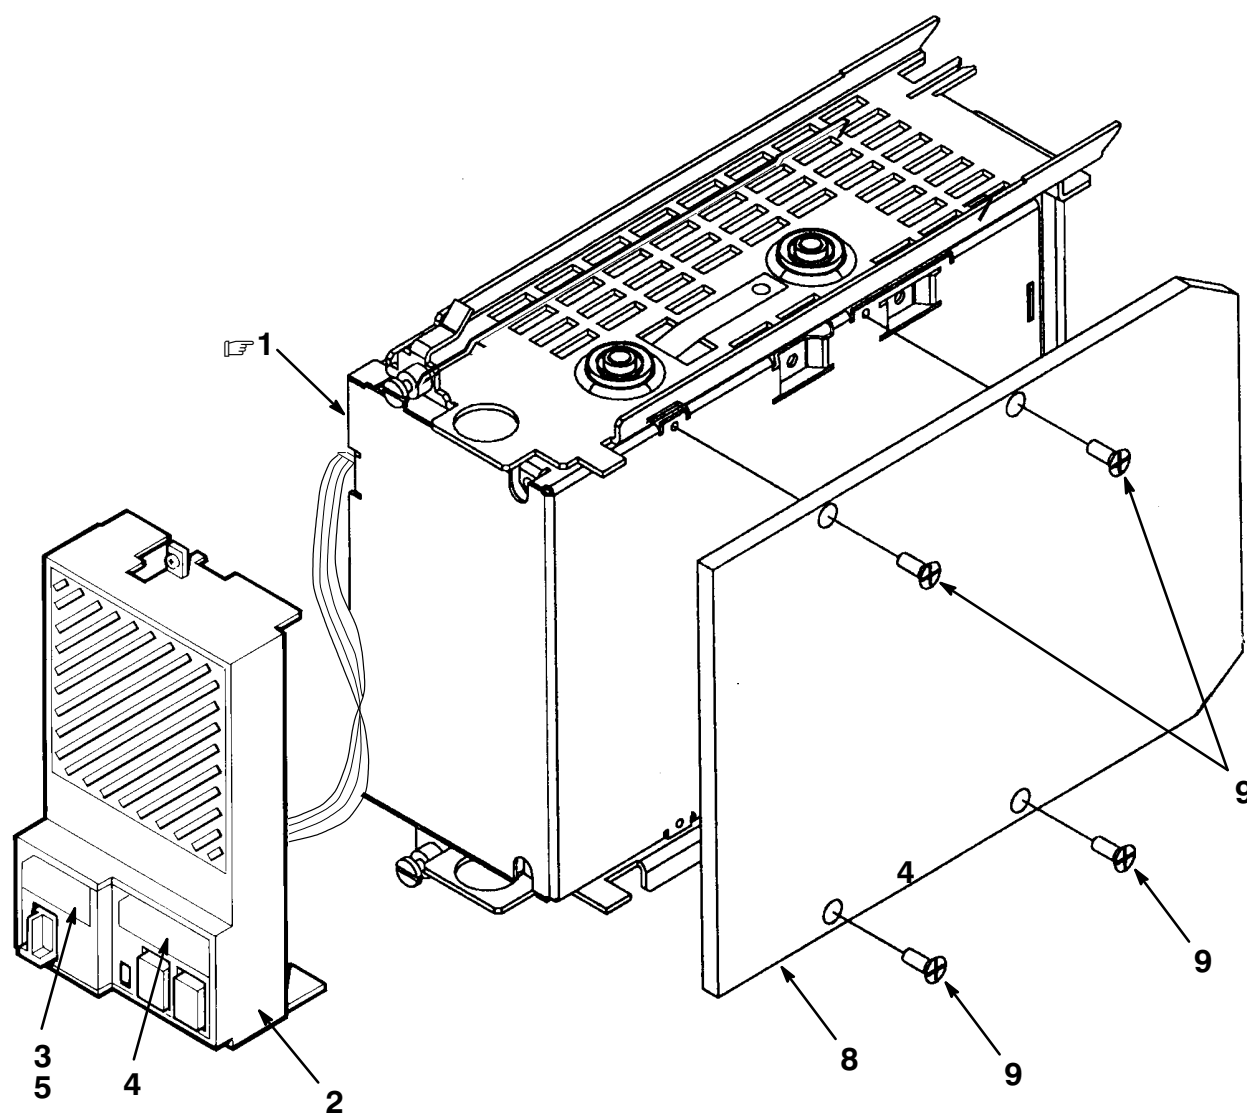| FIG.& ITEM NO. | DESCRIPTION | E DIGITAL PART NO. | ECO CUT−IN 70−28087 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 18− | MOUNTING ASSEMBLY, RF71 ISE | 70−28087−01 | | A | 14 |
| | MOUNTING ASSEMBLY, RF72 ISE | 70−28087−02 | | B | 15 |
| | MOUNTING ASSEMBLY, RF73 ISE (added) | 70−28087−03 | 00003 | C | 16 |
| | MOUNTING ASSEMBLY, RF74 ISE (added) | 70−28087−05 | 00005 | D | 17 |
| ☞ 1 | *Disk Drive Assembly (RF71) | RF71−EA | | A | |
| ☞ | *Disk Drive Assembly (RF72) | RF72−EA | | B | |
| ☞ | *Disk Drive Assembly (RF73) (added) | RF73−EA | 00003 | C | |
| ☞ | *Disk Drive Assembly (RF74) (added) | RF74−EA | 00005 | D | |
| 2 | *This Item Not Used | | | | |
| 3 | *Bracket Assembly, Bottom Drive | 70−27412−01 | | | |
| 4 | *Bracket Assembly, Top Drive | 74−38828−01 | | | |
| 5 | *Bracket, Paddle Board | 74−38830−01 | | | |
| ☞6 | *Module, DSSI Interface Card | 54−19787−01 | | | |
| 7 | *Isolator, Shock (deleted) | 12−32626−01 | 00001 | | |
| | *Isolator, Shock  Grommet (added) | 12−32626−04 | 00001 | | |
| 8 | *Screw, Machine Phl Pan Hd No. 6−32 x 1/2 (deleted) | 90−06024−02 | 00001 | | |
| | *Screw, Shoulder Hd No. 6−32 x 1/2 (added) | 12−34462−01 | 00001 | | |
| 9 | *Screw, Machine Flat Hd No. 6−32 x 5/8 (deleted) | 90−06025−02 | 00001 | | |
| | *Screw, Shoulder Hd No. 6−32 x 1/2 (added) | 12−34462−01 | 00001 | | |
| 10 | *Screw, Phl Pan Hd No. 4−40 x 1/4 | 90−09315−01 | | | |
| ☞11 | *Cable Assembly, 10 Cond | 17−02706−01 | | | |

☞ ☜ **INDICATES FRU LEVEL PARTS.**
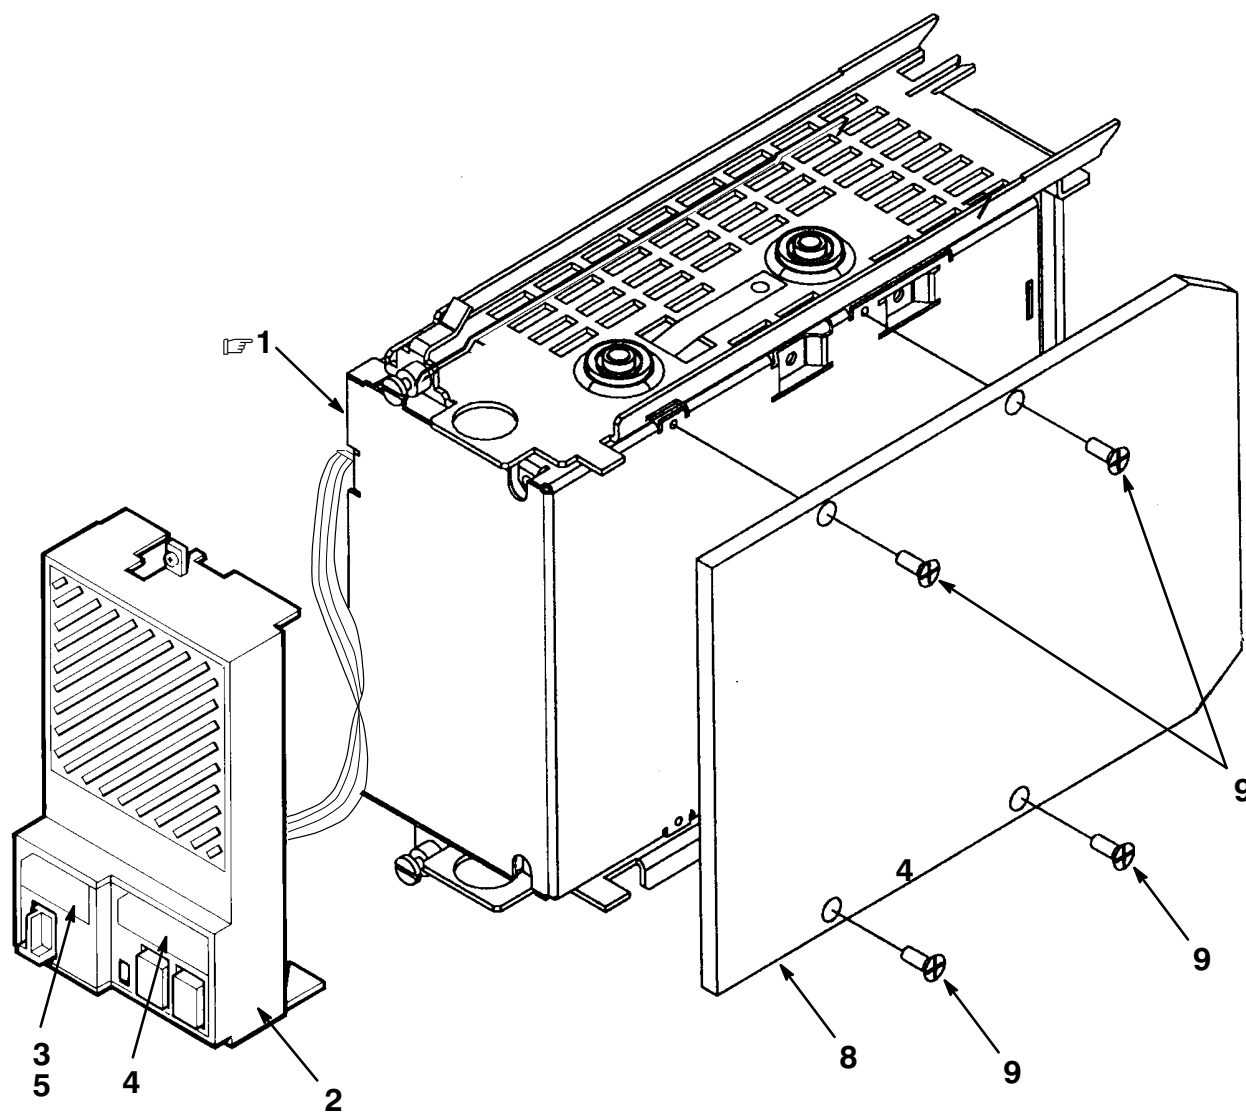


400ST−19−SC

*Figure 19. Storage Element, EF51R*

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. ᶜ | ECO CUT−IN EF51R 00002 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 19− | STORAGE ELEMENT, EF51R | | | | 1, 22 |
| | Code A − Used on EF51R−AA | EF51R−AA | | A | |
| | Code B − Used on EF51R−AF | EF51R−AF | | B | |
| ☞ 1 | *Disk Drive Assembly, SSD, 100 MB w/Data Retention | 70−29868−01 | | | |
| 2 | *Bezel Assembly | 70−27049−04 | | | |
| 3 | Label, "Switch Marker" (See Notes 1 and 2) | 36−18940−02 | | | |
| 4 | *Label, "Drive No. 2 Language Variant" (See Note 3) | 36−33183−02 | | | |
| 5 | *Label, "No. 2 Language Variant" (See Note 3) | 36−33183−04 | | | |
| 6 | *Documentation, "Storage Device Add On Procedure" (Not Shown) | EK−BA44A−IN | | | |
| | *Documentation, "EF5XX Series Solid State Disk" (Not Shown) | EK−EF5XX−UG | | | |
| 7 | *Package Assembly (Not Shown) | 37−01215−01 | | | |
| 8 | *Plate, Skid (See Note 4) | 74−25652−02 | | | |
| 9 | *Screw, Mach Pan Hd No. 6−32 x 1/4 (See Note 4) | 90−06020−01 | | | |

Note 1: Not Part of EF51R−AA/AF Assembly, Shown For Reference Only.

Note 2: Item Ships With System.

Note 3: Language Specific Used In Place Of 01, 03.

Note 4: Remove Items 8 and 9 Before Install− ation Into a BA400 Series Enclosure.

☞ ☜ **INDICATES FRU LEVEL PARTS.**

☞**1**

**3**
**5**

**4**

**2**

**8**

**9**

**9**

**9**

**9**

**4**

400ST−20−SC

***Figure 20. Storage Element, EF52R***

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. c | ECO CUT−IN EF52R 00002 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 20− | STORAGE ELEMENT, EF52R | | | | 1, 22 |
| | Code A − Used on EF52R−AA | EF52R−AA | | A | |
| | Code B − Used on EF52R−AF | EF52R−AF | | B | |
| ☞ 1 | *Disk Drive Assembly, SSD, 200 MB w/Data Retention | 70−29868−03 | | | |
| 2 | *Bezel Assembly | 70−27049−04 | | | |
| 3 | Label, "Switch Marker" (See Notes 1 and 2) | 36−18940−02 | | | |
| 4 | *Label, "Drive No. 2 Language Variant" (See Note 3) | 36−33183−02 | | | |
| 5 | *Label, "No. 2 Language Variant" (See Note 3) | 36−33183−04 | | | |
| 6 | *Documentation, "Storage Device Add On Procedure" (Not Shown) | EK−BA44A−IN | | | |
| | *Documentation, "EF5XX Series Solid State Disk" (Not Shown) | EK−EF5XX−UG | | | |
| 7 | *Package Assembly (Not Shown) | 37−01215−01 | | | |
| 8 | *Plate, Skid (See Note 4) | 74−25652−02 | | | |
| 9 | *Screw, Mach Pan Hd No. 6−32 x 1/4 (See Note 4) | 90−06020−01 | | | |

Note 1:  Not Part of EF52R−AA/AF Assembly, Shown For Reference Only.

Note 2:  Item Ships With System.

Note 3:  Language Specific Used In Place Of 01, 03.

Note 4:  Remove Items 8 and 9 Before Install− ation Into a BA400 Series Enclosure.
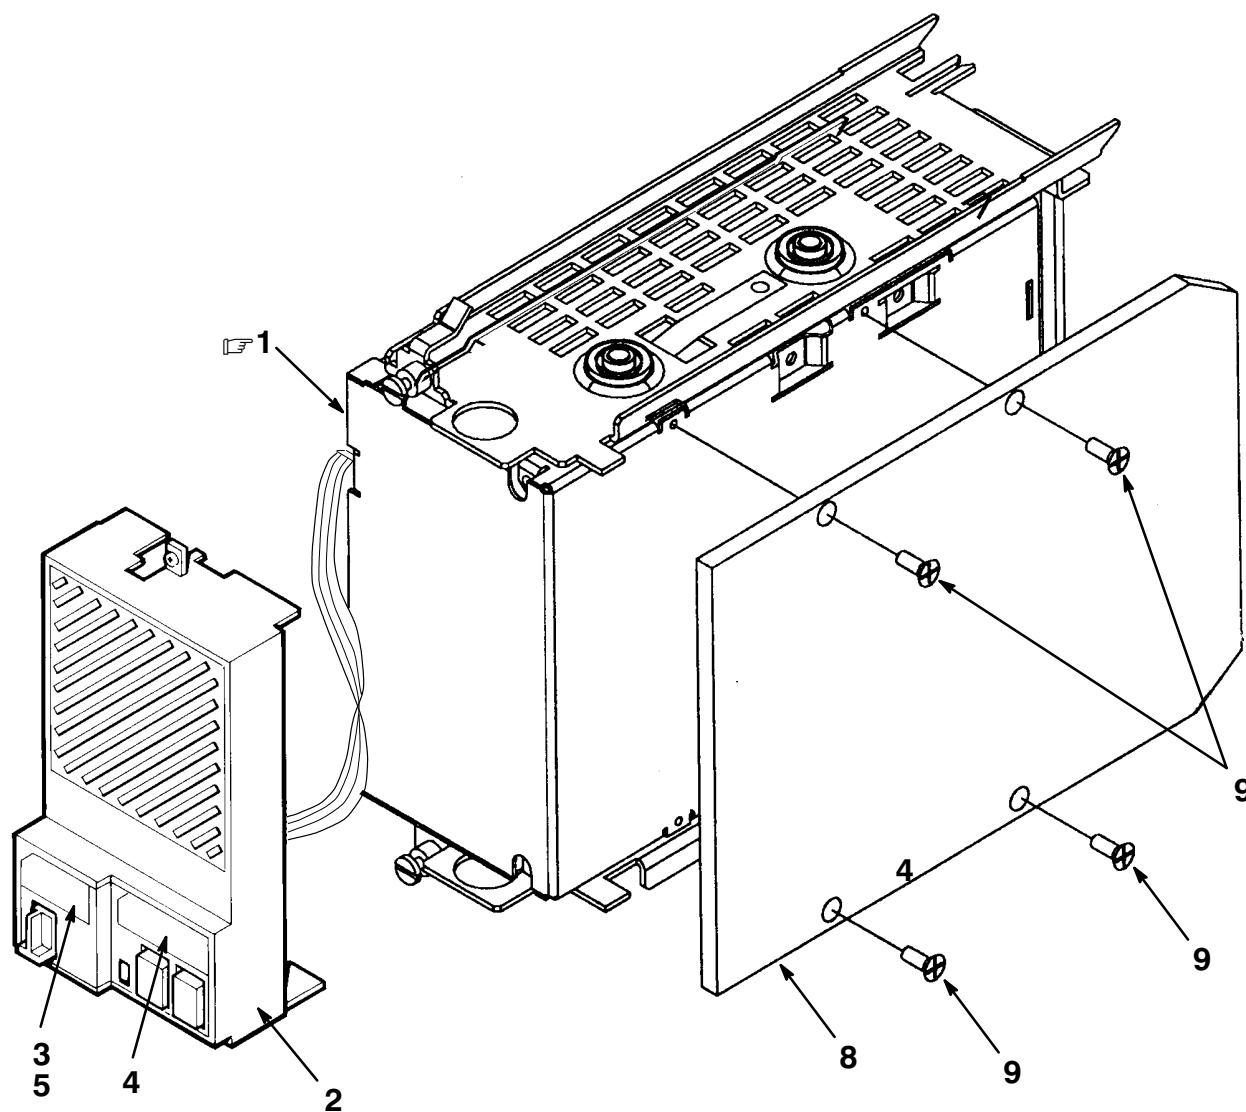
☞ ☜ **INDICATES FRU LEVEL PARTS.**

☞**1**

**9**

**9**

**4**

**9**

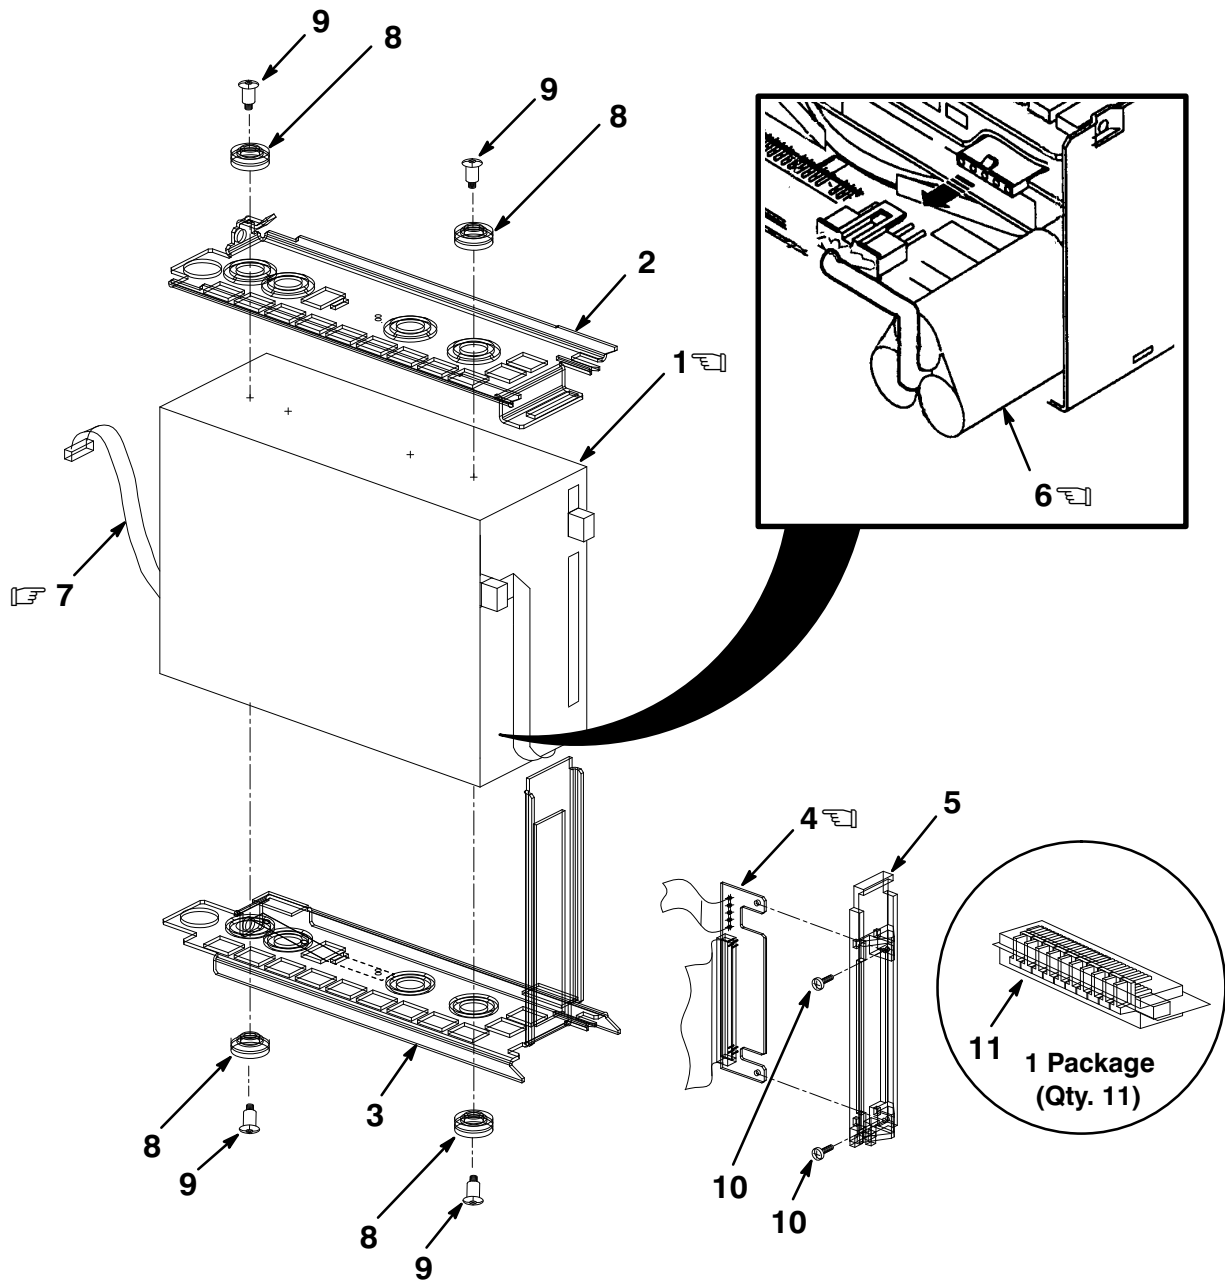**3**
**5**

**4**

**2**

**8**

**9**

400ST−21−SC

*Figure 21. Storage Element, EF53*

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. ^A | ECO CUT−IN EF53 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 21− | STORAGE ELEMENT, EF53 | | | | 1, 22 |
| | Code A − Used on EF53−AA | EF52R−AA | | A | |
| | Code B − Used on EF53−AF | EF52R−AF | | B | |
| ☞ 1 | *Disk Drive Assembly, SSD, 250 MB | 70−29869−01 | | | |
| 2 | *Bezel Assembly | 70−27049−04 | | | |
| 3 | Label, "Switch Marker" (See Notes 1 and 2) | 36−18940−02 | | | |
| 4 | *Label, "Drive No. 2 Language Variant" (See Note 3) | 36−33183−02 | | | |
| 5 | *Label, "No. 2 Language Variant" (See Note 3) | 36−33183−04 | | | |
| 6 | *Documentation, "Storage Device Add On Procedure" (Not Shown) | EK−BA44A−IN | | | |
| | *Documentation, "EF5XX Series Solid State Disk" (Not Shown) | EK−EF5XX−UG | | | |
| 7 | *Package Assembly (Not Shown) | 37−01215−01 | | | |
| 8 | *Plate, Skid (See Note 4) | 74−25652−02 | | | |
| 9 | *Screw, Mach Pan Hd No. 6−32 x 1/4 (See Note 4) | 90−06020−01 | | | |

Note 1: Not Part of EF52R−AA/AF Assembly, Shown For Reference Only.

Note 2: Item Ships With System.

Note 3: Language Specific Used In Place Of 01, 03.

Note 4: Remove Items 8 and 9 Before Install− ation Into a BA400 Series Enclosure.

**400ST−22−IL**

*Figure 22. Mounting Assembly, EF51R/EF52R/EF53 ISE*

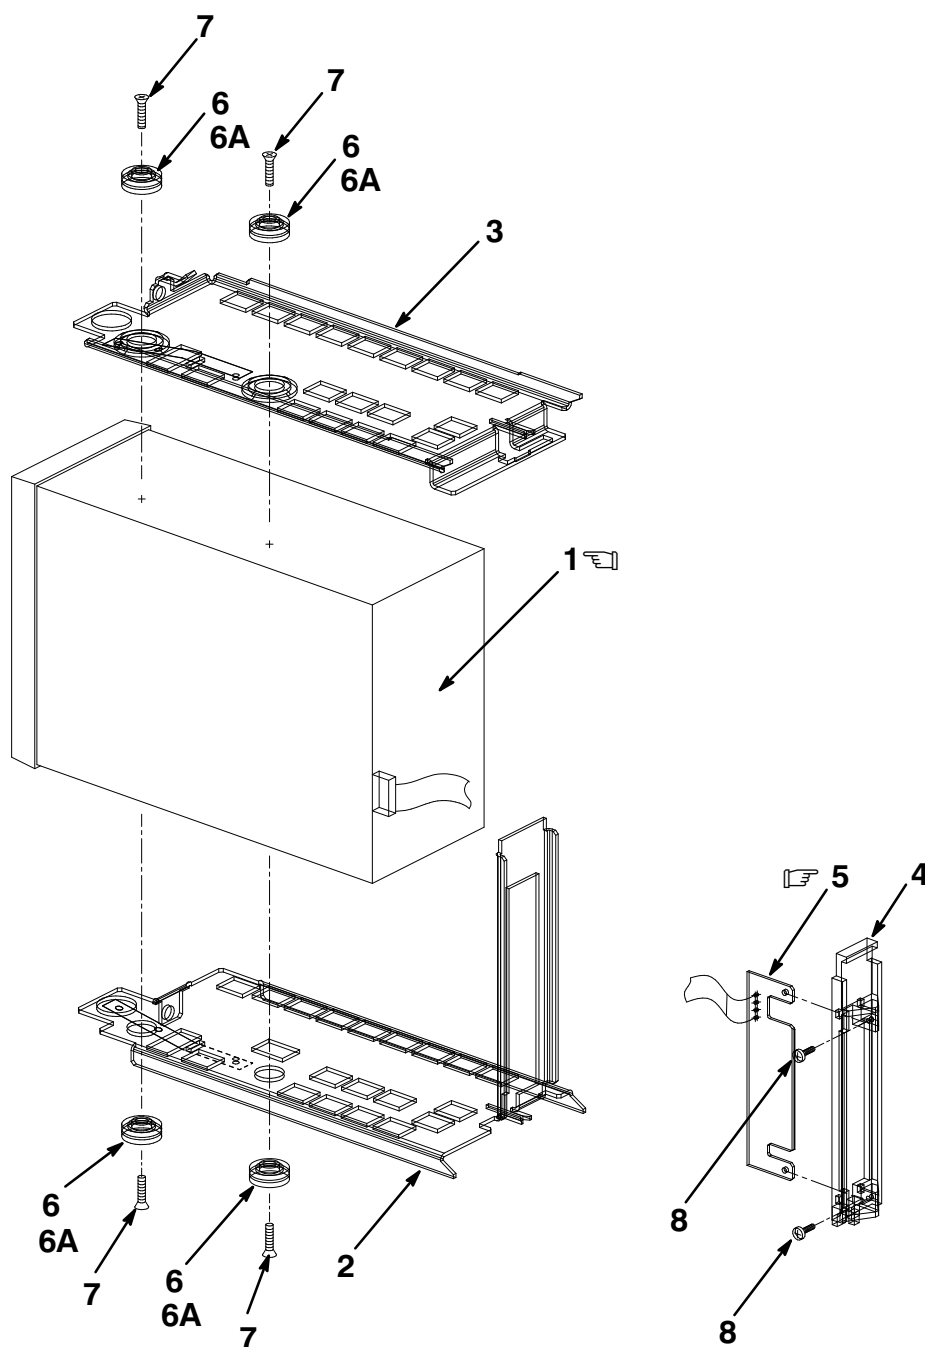| FIG.&<br>ITEM<br>NO. | DESCRIPTION | DIGITAL<br>PART NO. | ECO<br>CUT−IN | USED<br>ON<br>CODE | REF<br>FIG<br>NO. |
|---|---|---|---|---|---|
| 22− | **MOUNTING ASSEMBLY, EF51R/EF52R/EF53 ISE** | | | | |
| | **Code A − Used on EF51R−AA/AF** | | | **A** | **19** |
| | **Code B − Used on EF52R−AA/AF** | | | **B** | **20** |
| | **Code C − Used on EF53−AA/AF** | | | **C** | **21** |
| ☞ 1 | **\*Disk Drive Assembly, SSD, 100 MB**<br>  **w/Data Retention** | 70−29868−01 | | **A** | |
| ☞ | **\*Disk Drive Assembly, SSD, 200 MB**<br>  **w/Data Retention** | 70−29868−03 | | **B** | |
| ☞ | **\*Disk Drive Assembly, SSD, 250 MB** | 70−29869−01 | | **C** | |
| 2 | **\*Bracket Assembly, Top Drive** | 70−30268−01 | | | |
| 3 | **\*Bracket Assembly, Bottom Drive** | 70−30269−01 | | | |
| ☞ 4 | **\*Module, DSSI Interface Card** | 54−19787−01 | | | |
| 5 | **\*Bracket, Paddle Board** | 74−38830−01 | | | |
| ☞ 6 | **\*Battery Pack** | 12−19245−01 | | | |
| ☞ 7 | **\*Cable Assembly, 10 Cond** | 17−02706−01 | | | |
| 8 | **\*Isolator, Shock, Ferrule** | 12−32626−03 | | | |
| | **\*Isolator, Shock, Grommet** | 12−32626−04 | | | |
| 9 | **\*Screw, Mach Flat Hd No. 6−32 x 5/8** | 90−06025−02 | | | |
| 10 | **\*Screw, Phl Pan Hd No. 4−40 x 1/4** | 90−09315−01 | | | |
| 11 | **\*Encoder Set, Lens (DSSI Unit ID Plug)** | 12−28766−19 | | | |

☞ ☜ INDICATES FRU LEVEL PARTS.
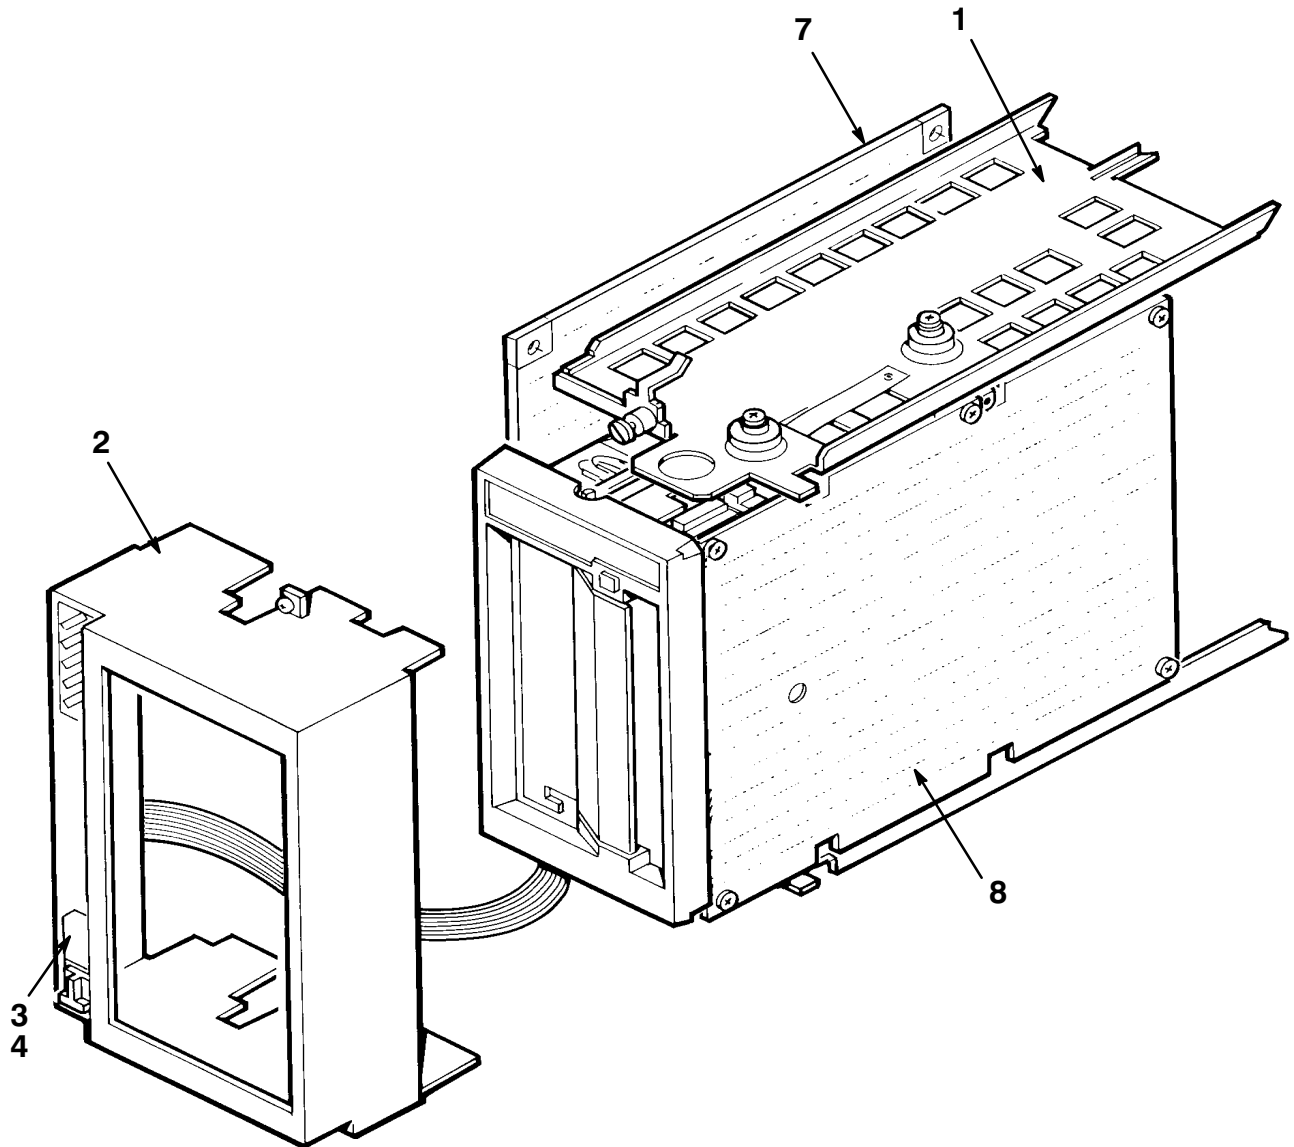


400ST–23–SC

*Figure 23. Storage Element, TF85E*

| FIG. & ITEM NO. | DESCRIPTION | DIGITAL PART NO. | ECO CUT−IN TF85E 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 23− | STORAGE ELEMENT, TF85E | | | | |
| | Code A − Used on TF85E−JA | TF85E−JA | | A | |
| | Code B − Used on TF85E−JF | TF85E−JF | | B | |
| 1 | *MOUNTING ASSEMBLY, TF85 ISE | 70−28092−01 | | | 24 |
| 2 | *BEZEL ASSEMBLY, TAPE DRIVE | 70−27050−03 | | | 1,29 |
| 3 | Label, ''Switch Marker'' (See Notes 1 and 2) | 36−18940−02 | | | |
| 4 | *Label, ''Bus ID'' (Language Variant) (See Note 3) | 36−33181−02 | | | |
| 5 | *Documentation, ''Storage Device Add On Procedure'' (Not Shown) | EK−BA44A−IN | | B | |
| 6 | *Package Assembly (Not Shown) | 37−01215−06 | | B | |
| 7 | Module, TF85 (See Note 1) | 54−19089−01 | | | |
| 8 | Mechanics Assembly, TF85 (See Note 1) | TK85−BX | | | |

Note 1: Not Part of TF85E−JA/JF Assembly, Shown for Reference Only.

Note 2: Item Ships With System.

Note 3: Language Specific, Used In Place Of 01.
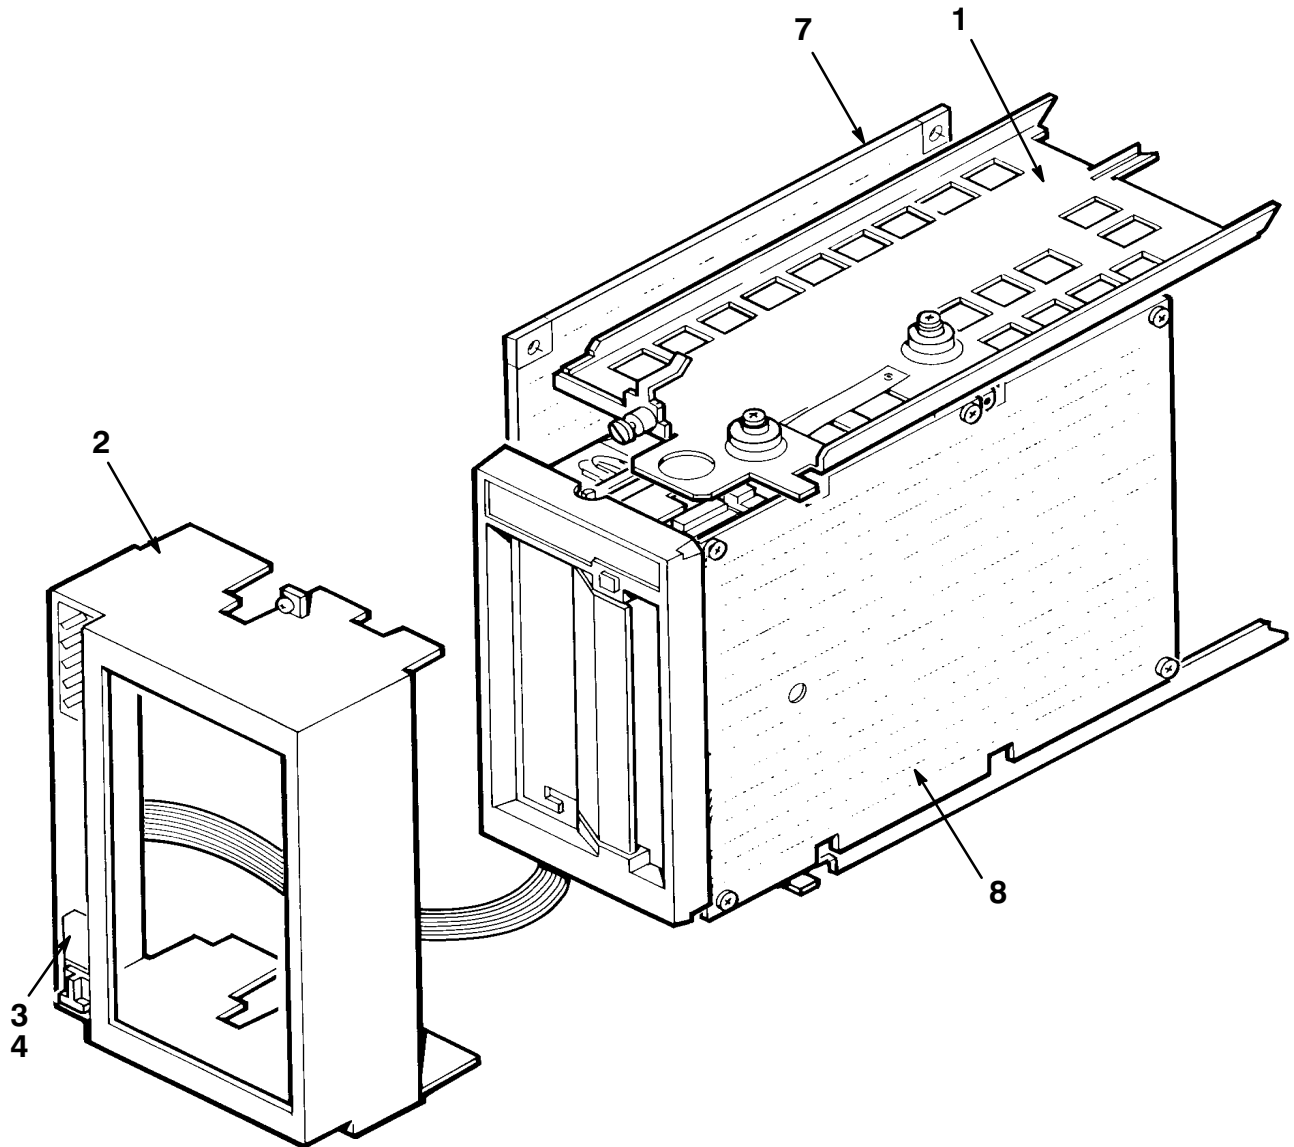
☞ ☜ **INDICATES FRU LEVEL PARTS.**



7

7

6
6A

6
6A

3

1 ☜

☞ 5

4

6
6A

6
6A

8

6
6A

7

8

7

2

8

400ST−24−IL

**Figure 24. Mounting Assembly, TF85 ISE**

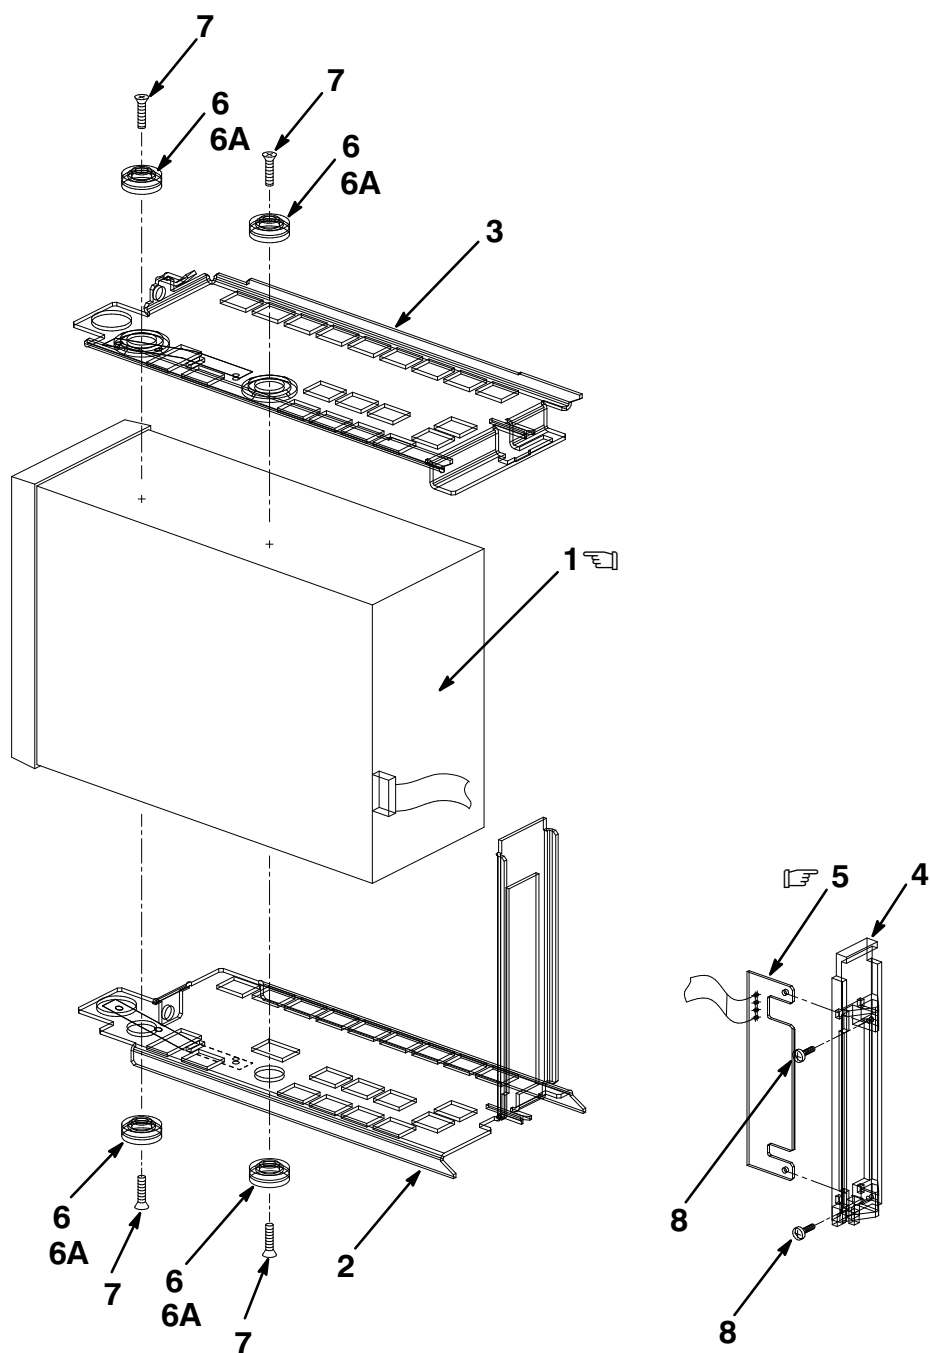| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. [A] | ECO CUT−IN 70−28092 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 24− | **MOUNTING ASSEMBLY, TF85 ISE** | 70−28092−01 | | | 23 |
| | | | | | |
| ☞1 | *Tape Drive Assembly | TF85−BA | | | |
| 2 | *Bracket Assembly, Bottom Tape Drive | 70−27413−01 | | | |
| 3 | *Bracket Assembly, Top Tape Drive | 70−27457−01 | | | |
| 4 | *Bracket, Paddle Board | 74−38830−01 | | | |
| ☞5 | *Module, Interface Card | 54−19787−02 | | | |
| 6 | *Isolator, Shock (Ferrule) | 12−32626−03 | | | |
| 6A | *Isolator, Shock (Grommet) | 12−32626−04 | | | |
| 7 | *Screw, Machine Flat Hd No. 6−32 x 5/8 | 90−06025−02 | | | |
| 8 | *Screw, Phl Pan Hd No. 4−40 x 1/4 | 90−09315−01 | | | |

☞ ☜ **INDICATES FRU LEVEL PARTS.**



400ST−25−SC

*Figure 25. Storage Element, TF86E*

| FIG.& ITEM NO. | DESCRIPTION | A<br>DIGITAL PART NO. | ECO CUT−IN TF86E 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 25− | STORAGE ELEMENT, TF86E | | | | 1 |
| | | | | | |
| | Code A − Used on TF86E−JA | TF86E−JA | | A | |
| | Code B − Used on TF86E−JF | TF86E−JF | | B | |
| | | | | | |
| 1 | *MOUNTING ASSEMBLY, TF86 ISE | 70−28092−03 | | | 26 |
| 2 | *BEZEL ASSEMBLY, TAPE DRIVE | 70−27050−03 | | | 1,29 |
| 3 | Label, "Switch Marker" (See Notes 1 and 2) | 36−18940−02 | | | |
| 4 | *Label, "Bus ID" (Language Variant) (See Note 3) | 36−33181−02 | | | |
| 5 | *Documentation, "Storage Device Add On Procedure" (Not Shown) | EK−BA44A−IN | | B | |
| 6 | *Package Assembly (Not Shown) | 37−01215−06 | | B | |
| 7 | Module, TF85/TF86 (See Note 1) | 54−19089−01 | | | |
| 8 | Mechanics Assembly, TF86 (See Note 1) | TK86−BX | | | |

Note 1: Not Part of TF86E−JA/JF Assembly, Shown for Reference Only.)

Note 2: Item Ships With System.

Note 3: Language Specific, Used In Place Of 01.
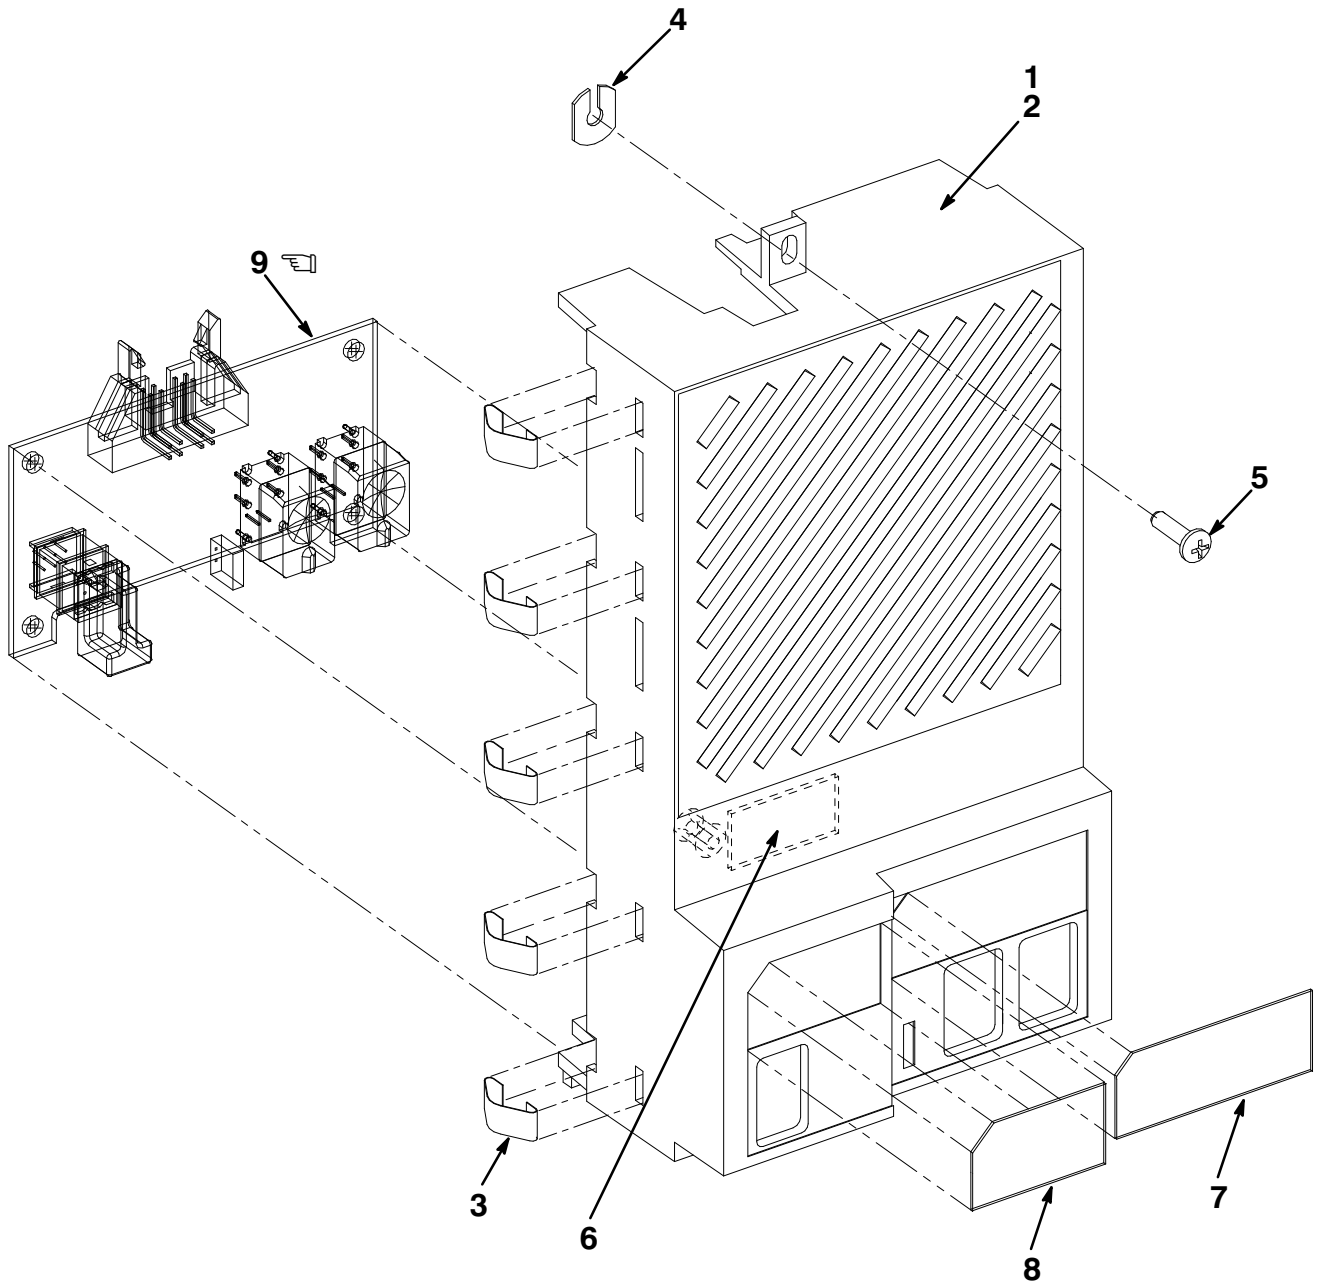
☞ ⊒ **INDICATES FRU LEVEL PARTS.**

**Figure 26. Mounting Assembly, TF86 ISE**

400ST−26−IL

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. | A ECO CUT−IN 70−28092 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 26− | **MOUNTING ASSEMBLY, TF86 ISE** | 70−28092−03 | | | 25 |
| | | | | | |
| ☞1 | ***Tape Drive Assembly** | **TF86−BA** | | | |
| 2 | ***Bracket Assembly, Bottom Tape Drive** | 70−27413−01 | | | |
| 3 | ***Bracket Assembly, Top Tape Drive** | 70−27457−01 | | | |
| 4 | ***Bracket, Paddle Board** | 74−38830−01 | | | |
| ☞5 | ***Module,  Interface Card** | 54−19787−02 | | | |
| 6 | ***Isolator, Shock (Ferrule)** | 12−32626−03 | | | |
| 6A | ***Isolator, Shock (Grommet)** | 12−32626−04 | | | |
| 7 | ***Screw, Machine Flat Hd No. 6−32 x 5/8** | 90−06025−02 | | | |
| 8 | ***Screw, Phl Pan Hd No. 4−40 x 1/4** | 90−09315−01 | | | |

☞ 🖅 **INDICATES FRU LEVEL PARTS.**

**4**

**1**
**2**

**9** 🖅

**5**

**3**
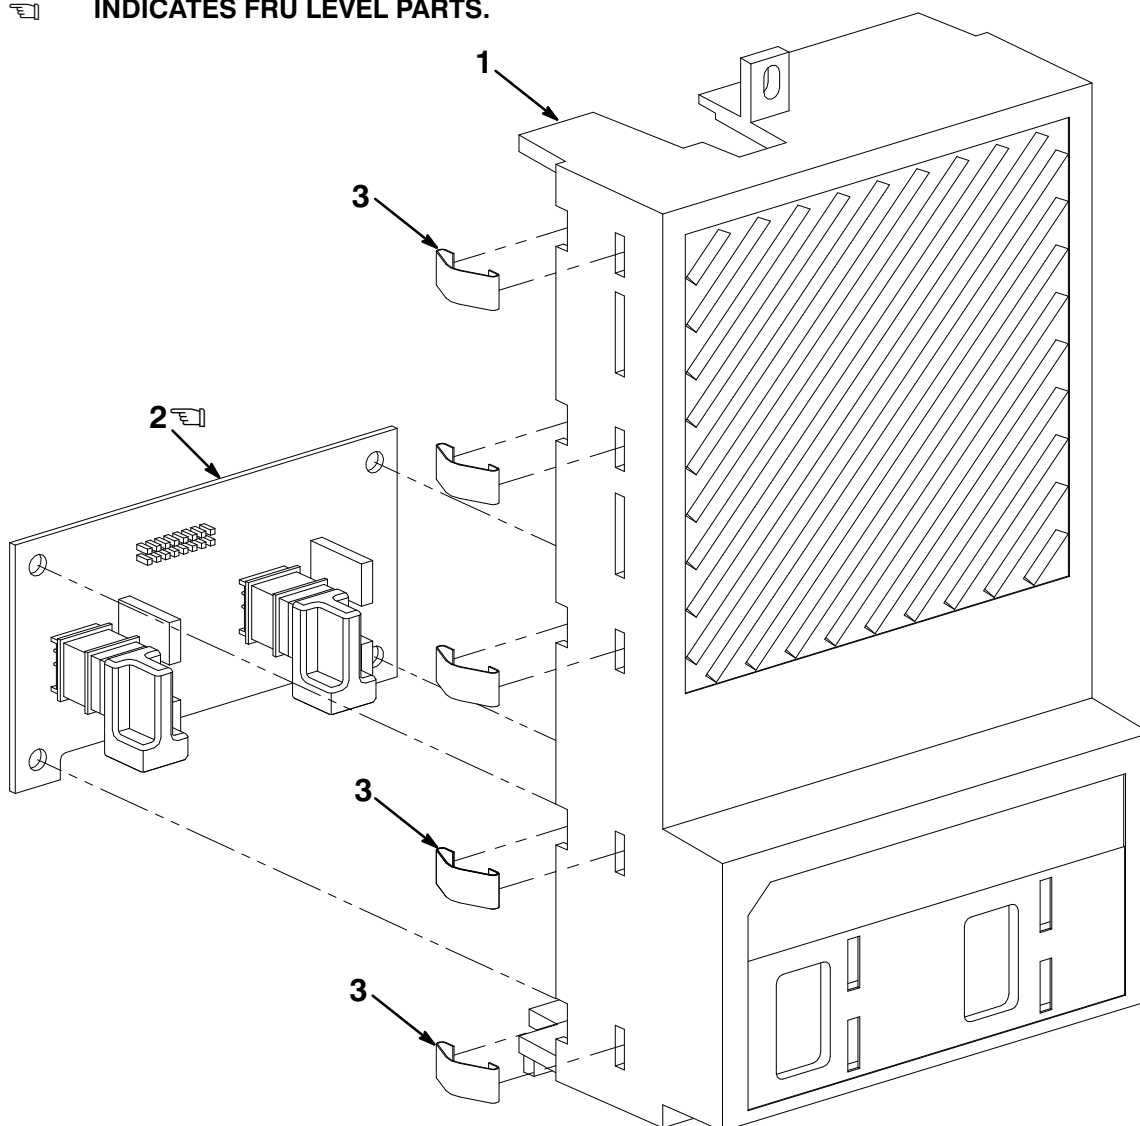
**6**

**7**

**8**

400ST−27−IL

***Figure 27. Bezel Assembly, 5 1/4 Inch DSSI Disk Drive***

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. <sup>A</sup> | ECO CUT−IN 70−27049 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 27− | **BEZEL ASSEMBLY, 5 1/4 INCH DSSI DISK DRIVE** | 70−27049−04 | | | 14,15 16,17 |
| 1 | *BEZEL ASSEMBLY, DISK DRIVE | 70−27049−01 | | | |
| 2 | **Bezel, RF71 Drive | 74−39272−01 | | | |
| 3 | **Finger, Grounding | 12−26922−01 | | | |
| 4 | **Washer, Retainer | 12−30421−01 | | | |
| 5 | **Screw, Phl Pan Hd No. 6−32 x 5/16 | 90−06021−01 | | | |
| 6 | **Tape, Velcro | 12−32980−01 | | | |
| 7 | *Label, ''Drive Control'' | 36−33183−01 | | | |
| 8 | *Label, ''Bus ID'' | 36−33183−03 | | | |
| ☞9 | *Module, DSSI Front Panel | 54−19791−01 | | | |

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. [B] | ECO CUT−IN 70−29478 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 28− | BEZEL ASSEMBLY, 3 1/2 INCH DSSI DISK DRIVE | 70−29478−01 | | | 1,5,6 8,9 10,11 |
| 1 | *Bezel, Blank | 74−44325−01 | 00001 | | |
| ☞ 2 | *Module, DSSI Remote Front Panel | 54−21530−01 | | | |
| 3 | Finger, Non−Snag Grounding (Not Part of This Assembly, Shown for Reference Only.) | 12−26922−01 | | | |

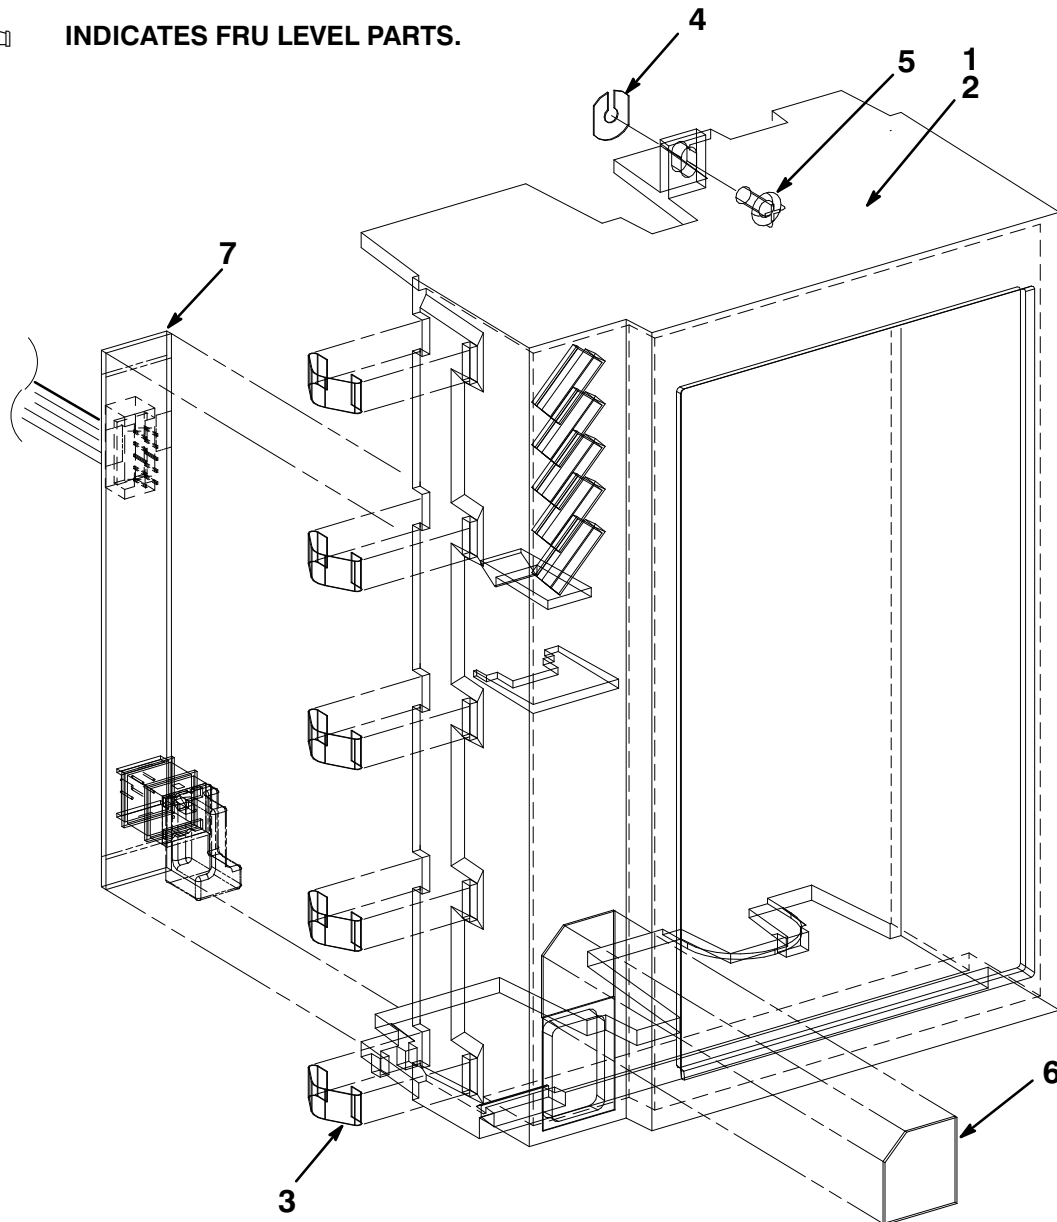☞ ╦⌐ INDICATES FRU LEVEL PARTS.



400ST−28−IL

**Figure 28. Bezel Assembly, 3 1/2 Inch DSSI Disk Drive**

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. [B] | ECO CUT−IN 70−27050 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 29− | BEZEL ASSEMBLY, TAPE DRIVE | 70−27050−03 | | | 1,23 |
| 1 | **BEZEL ASSEMBLY, TAPE DRIVE | 70−27050−01 | | | |
| 2 | **Bezel, Tape Drive | 74−39273−01 | | | |
| 3 | **Finger, Grounding | 12−26922−01 | | | |
| 4 | **Washer, Retaining | 12−30421−01 | | | |
| 5 | **Screw, Phl Pan Hd No. 6−32 x 5/16 | 90−06021−01 | | | |
| 6 | *Label, "Bus ID" | 36−33181−01 | | | |
| 7 | *Module, Device ID Panel | 54−20336−01 | | | |

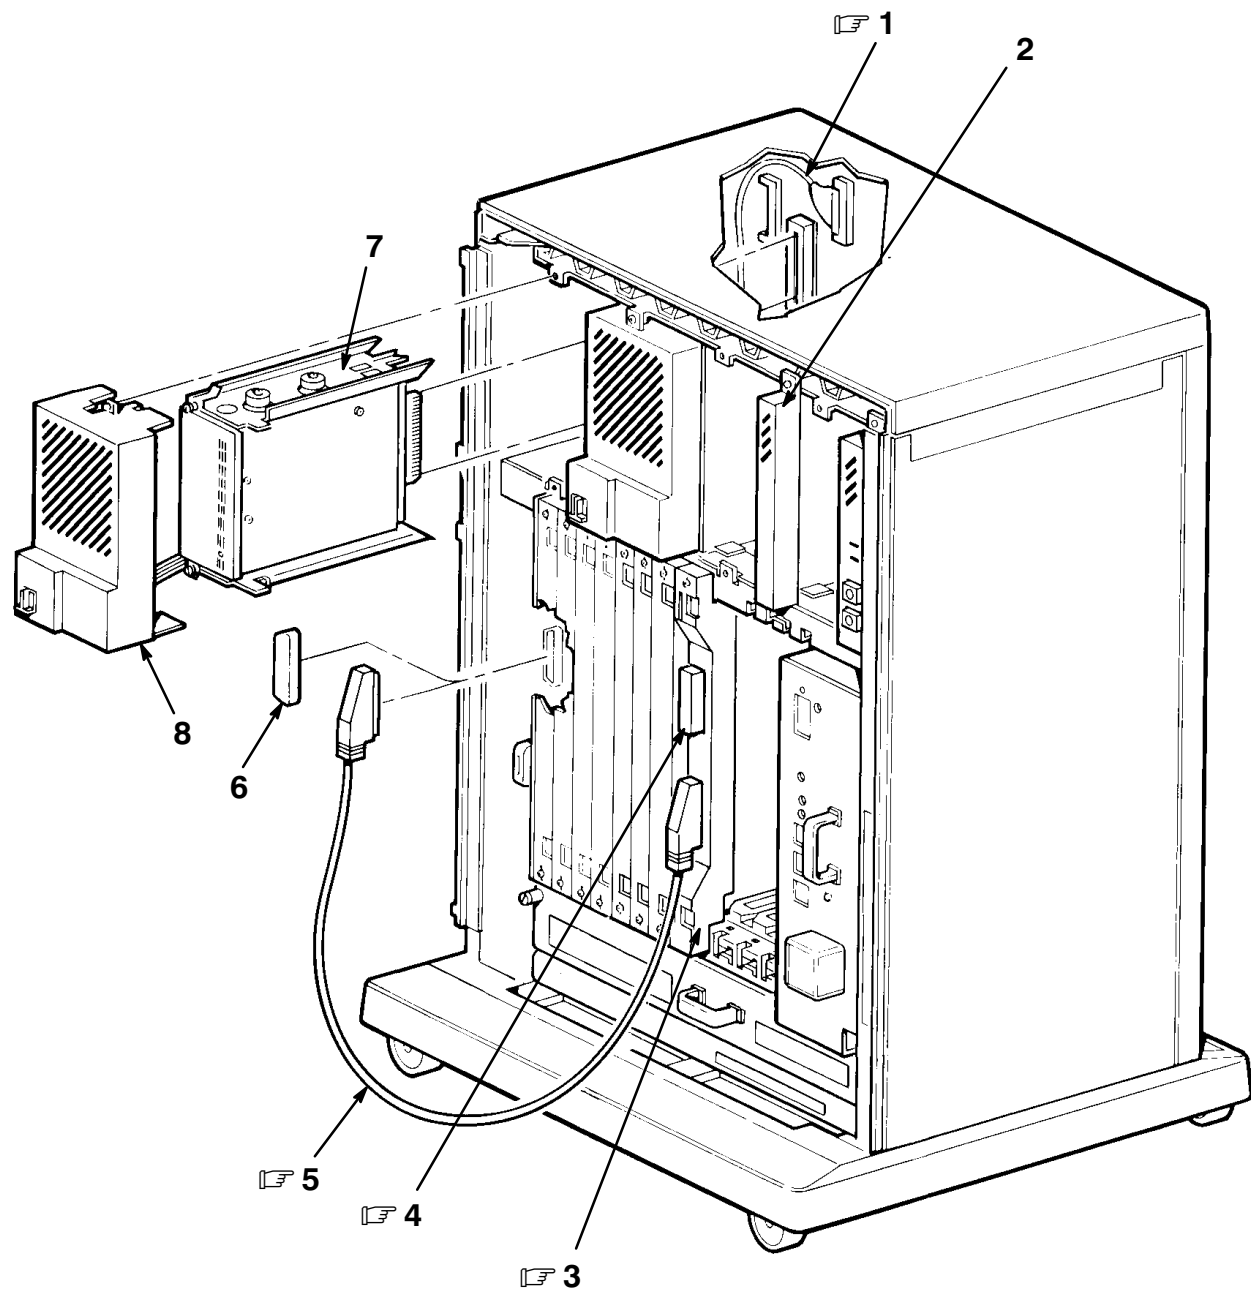☞  ☜   INDICATES FRU LEVEL PARTS.



400ST−29−IL

*Figure 29. Bezel Assembly, Tape Drive*

# SCSI DRIVES

☞ ☜ **INDICATES FRU LEVEL PARTS.**



400ST−30−SC

*Figure 30. Typical RZ SCSI System Mounting and Cabling (Sheet 1 of 2)*

☞ ☜ **INDICATES FRU LEVEL PARTS.**



400ST–30A–SC

*Figure 30. Typical RZ SCSI System Mounting and Cabling (Sheet 2 of 2)*

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. | ECO CUT−IN | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 30− | **TYPICAL SCSI SYSTEM MOUNTING and CABLING** | | | | |
| ☞1 | *Cable Assembly, Internal SCSI | 70−27459−01 | | | |
| 2 | *Bezel Assembly, Filler | 70−27414−01 | | | |
| ☞3 | *Module, KZQSA | KZQSA−SA | | | |
| ☞4 | *Connector, SCSI Term 50 Pos Champ Hsg | 12−30552−01 | | | |
| ☞5 | *Cable Assembly, 50 Cond, Molded, Shielded | 17−02659−03 | | | |
| 6 | *Cover, 50 Pin IDC Connector | 12−33377−01 | | | |
| 7 | *RZ56E DISK DRIVE ASSEMBLY | RZ56E−AA | | | 31 |
| | *RZ56E DISK DRIVE ASSEMBLY | RZ56E−AF | | | 31 |
| | *RZ57E DISK DRIVE ASSEMBLY | RZ57E−AA | | | 32 |
| | *RZ57E DISK DRIVE ASSEMBLY | RZ57E−AF | | | 32 |
| | *RZ58E DISK DRIVE ASSEMBLY | RZ58E−AA | | | 33 |
| | *RZ58E DISK DRIVE ASSEMBLY | RZ58E−AF | | | 33 |
| | *RZ73 DISK DRIVE ASSEMBLY | RZ73E | | | 35 |
| | *RZ74 DISK DRIVE ASSEMBLY | RZ74E | | | 36 |
| 8 | *BEZEL ASSEMBLY, DISK DRIVE | 70−27049−05 | | | 31,32 33,35 36,40 |
| 9 | *TLZ04 TAPE DRIVE ASSEMBLY | TLZ04−JA | | | 38 |
| | *TLZ04 TAPE DRIVE ASSEMBLY | TLZ04−JF | | | 38 |
| 10 | *BEZEL ASSEMBLY, TAPE DRIVE (Wide Window) | 70−28081−03 | | | 41 |
| 11 | *BEZEL ASSEMBLY, BLANK | 70−27049−01 | | | 1 |

THIS PAGE INTENTIONALLY LEFT BLANK

☞ ☜ **INDICATES FRU LEVEL PARTS.**
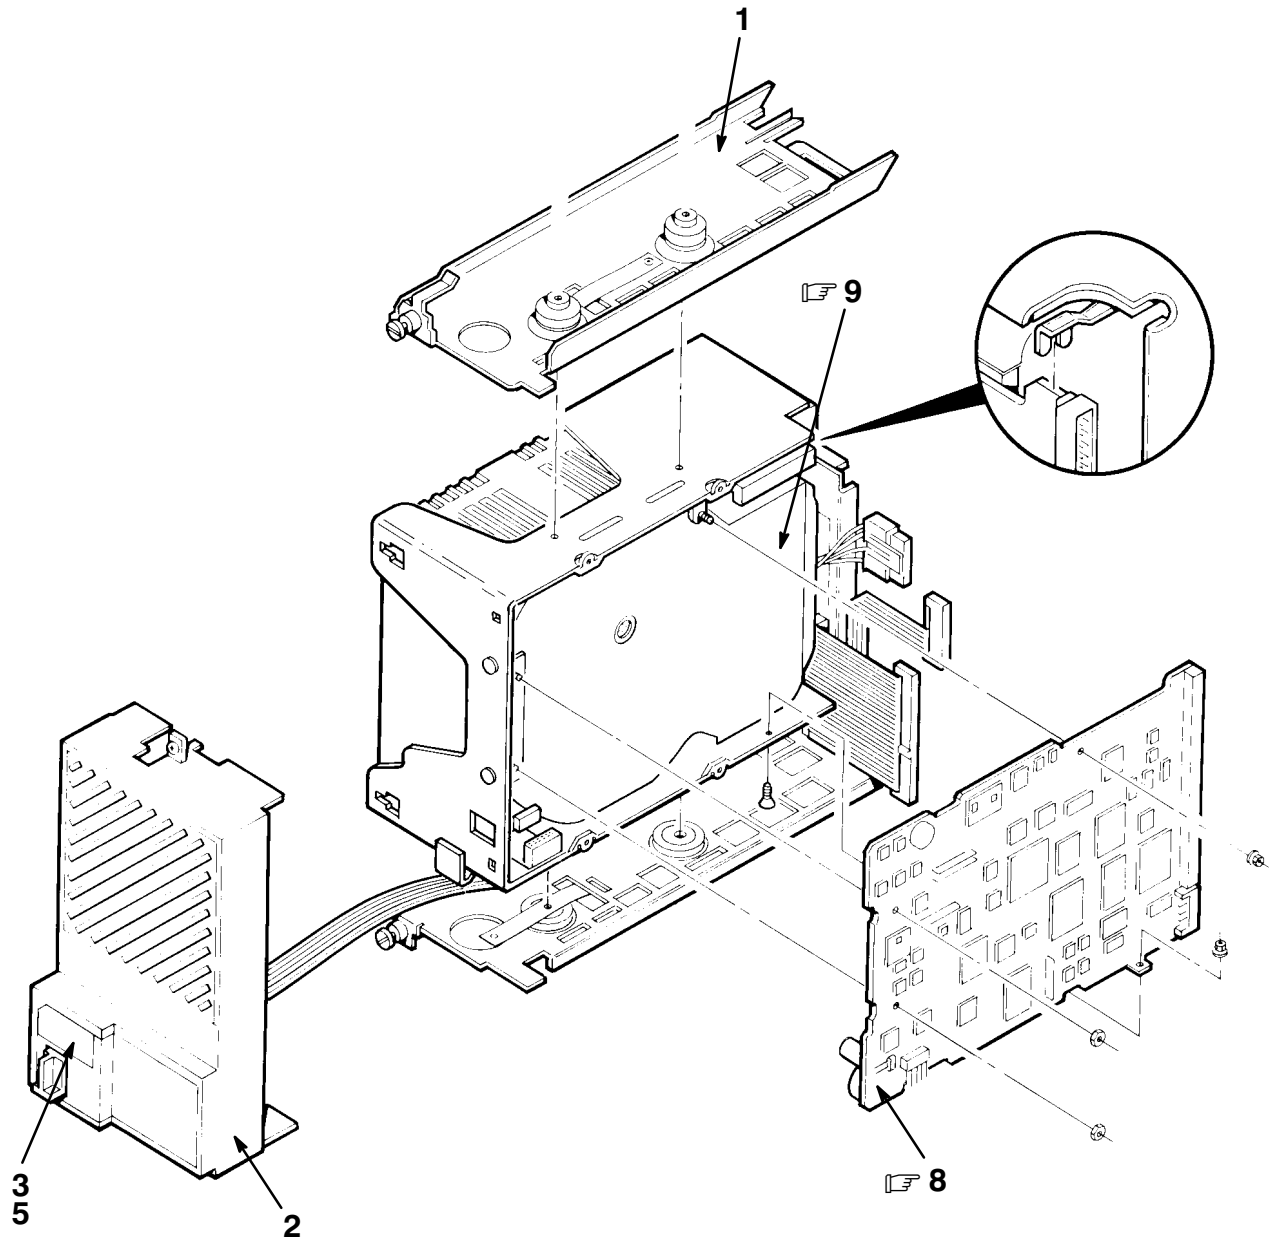
1

☞ **9**

☞ **8**

3
5

2
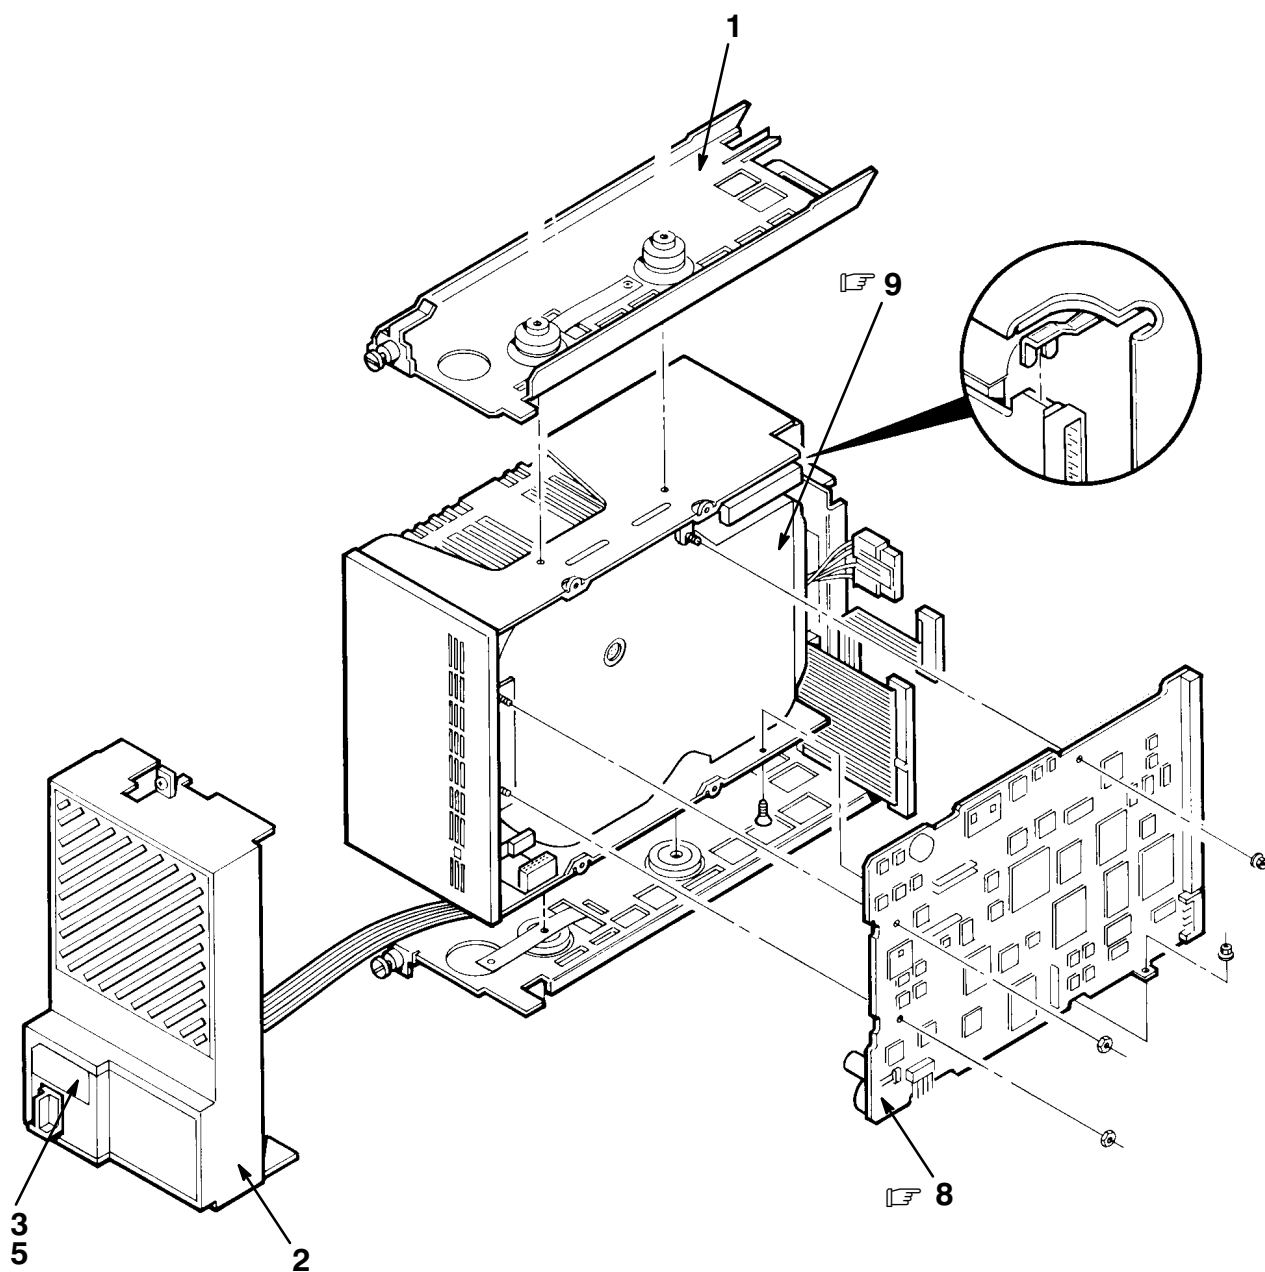
400ST−31−SC

*Figure 31. Storage Element, RZ56E*

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. ^c | ECO CUT−IN RZ56E 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 31− | **STORAGE ELEMENT, RZ56E** | | | | 30 |
| | | | | | |
| | **Code A − Used on RZ56E−AA** | **RZ56E−AA** | | **A** | |
| | **Code B − Used on RZ56E−AF** | **RZ56E−AF** | | **B** | |
| | | | | | |
| 1 | **\*MOUNTING ASSEMBLY, RZ56 ISE** | **70−28089−01** | | | 34 |
| 2 | **\*BEZEL ASSEMBLY, DISK DRIVE** | **70−27049−05** | | | 30,40, |
| 3 | **\*Label, "Switch Marker" (deleted)** | **36−18940−02** | **00001** | | |
| 4 | **\*Label, "Bar Code, Integrated Storage" (deleted) (Not Shown)** | **36−33151−05** | **00002** | | |
| 5 | **\*Label, "No. 2 Language Variant"** | **36−33183−04** | | | |
| 6 | **\*Documentation, "Storage Device Add On Procedure" (Not Shown)** | **EK−BA44A−IN** | | **B** | |
| 7 | **\*Package Assembly (Not Shown)** | **37−01215−01** | | **B** | |
| ☞8 | **Module, RZ56 Drive (See Note)** | **29−27889−01** | | | |
| ☞9 | **Disk Assembly, RZ56 (See Note)** | **29−27890−01** | | | |

**Note: Not Part of RZ56E−AA/AF Assembly, Shown For Reference Only.**

☞ ☜ **INDICATES FRU LEVEL PARTS.**

1

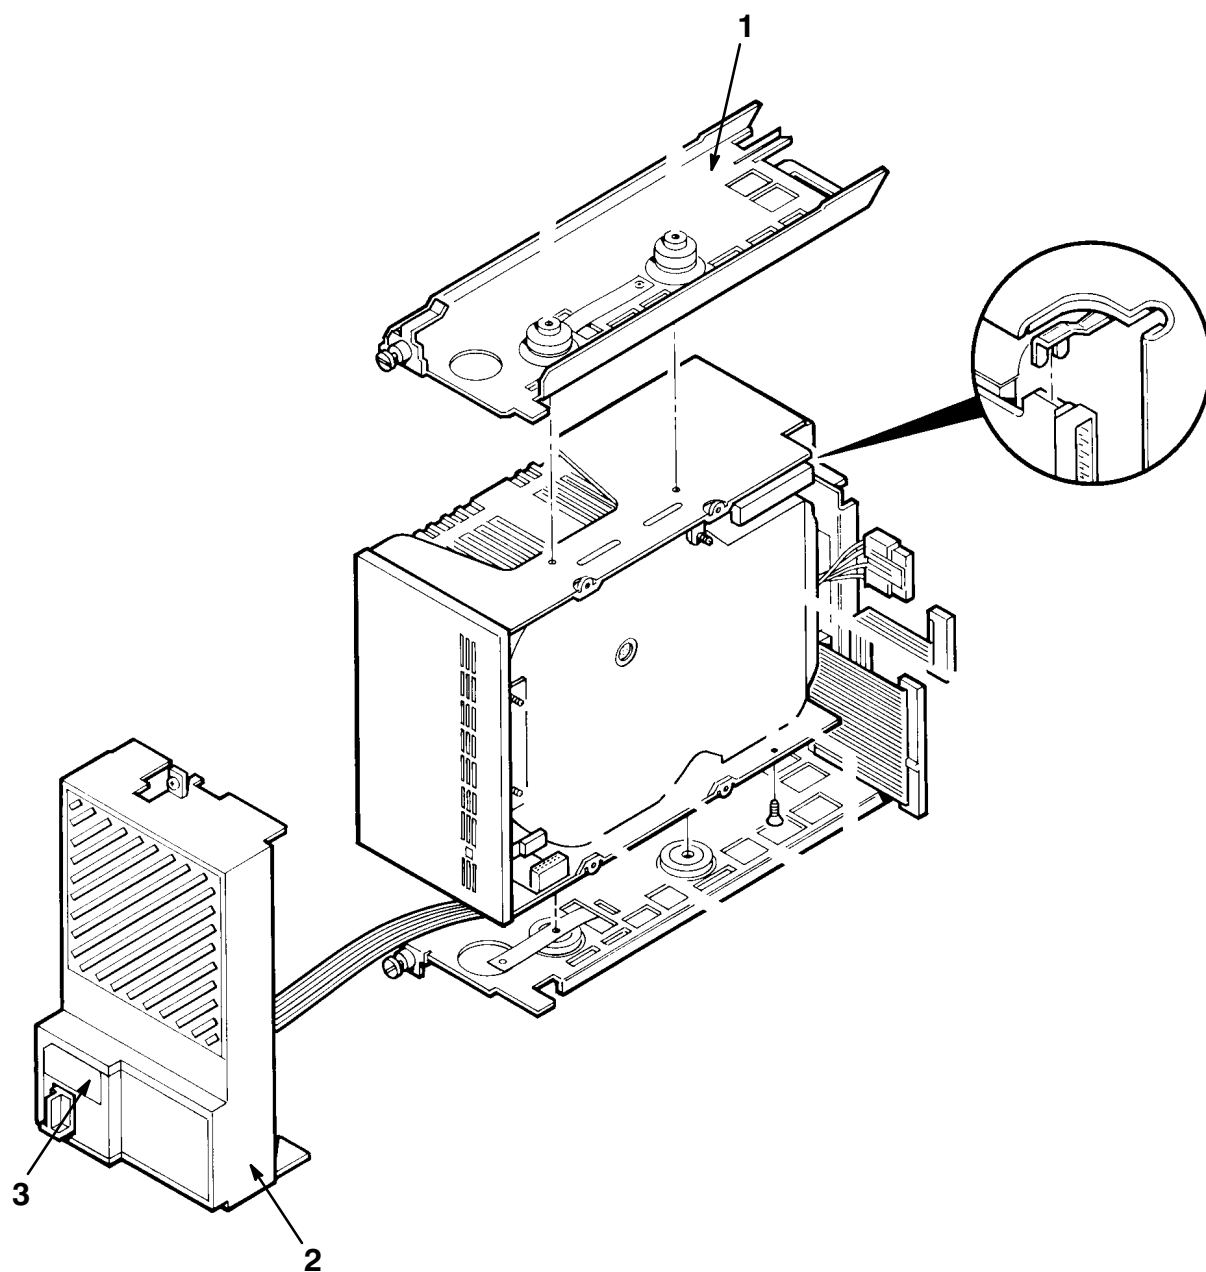☞**9**

☞**8**

3
5

2

400ST−32−SC

**Figure 32. Storage Element, RZ57E**

| FIG. & ITEM NO. | DESCRIPTION | DIGITAL PART NO. [c] | ECO CUT−IN RZ57E 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 32− | **STORAGE ELEMENT, RZ57E** | | | | 30 |
| | | | | | |
| | **Code A − Used on RZ57E−AA** | RZ57E−AA | | A | |
| | **Code B − Used on RZ57E−AF** | RZ57E−AF | | B | |
| | | | | | |
| 1 | *MOUNTING ASSEMBLY, RZ57 ISE | 70−28089−02 | | | 34 |
| 2 | *BEZEL ASSEMBLY, DISK DRIVE | 70−27049−05 | | | 30,32, |
| 3 | *Label, ''Switch Marker'' (deleted) | 36−18940−02 | 00001 | | |
| 4 | *Label, ''Bar Code, Integrated Storage'' (deleted) (Not Shown) | 36−33151−05 | 00002 | | |
| 5 | *Label, ''No. 2 Language Variant'' | 36−33183−04 | | | |
| 6 | *Documentation, ''Storage Device Add On Procedure'' (Not Shown) | EK−BA44A−IN | | B | |
| 7 | *Package Assembly (Not Shown) | 37−01215−01 | | B | |
| ☞8 | Module, RZ57 Drive (See Note) | 29−28159−01 | | | |
| ☞9 | Disk Assembly, RZ57 (See Note) | 29−28158−01 | | | |

 Note: Not Part of RZ57E−AA/AF Assembly,
 Shown For Reference Only.

☞ ⬚ INDICATES FRU LEVEL PARTS.



400ST−33−SC

**Figure 33. Storage Element, RZ58E**

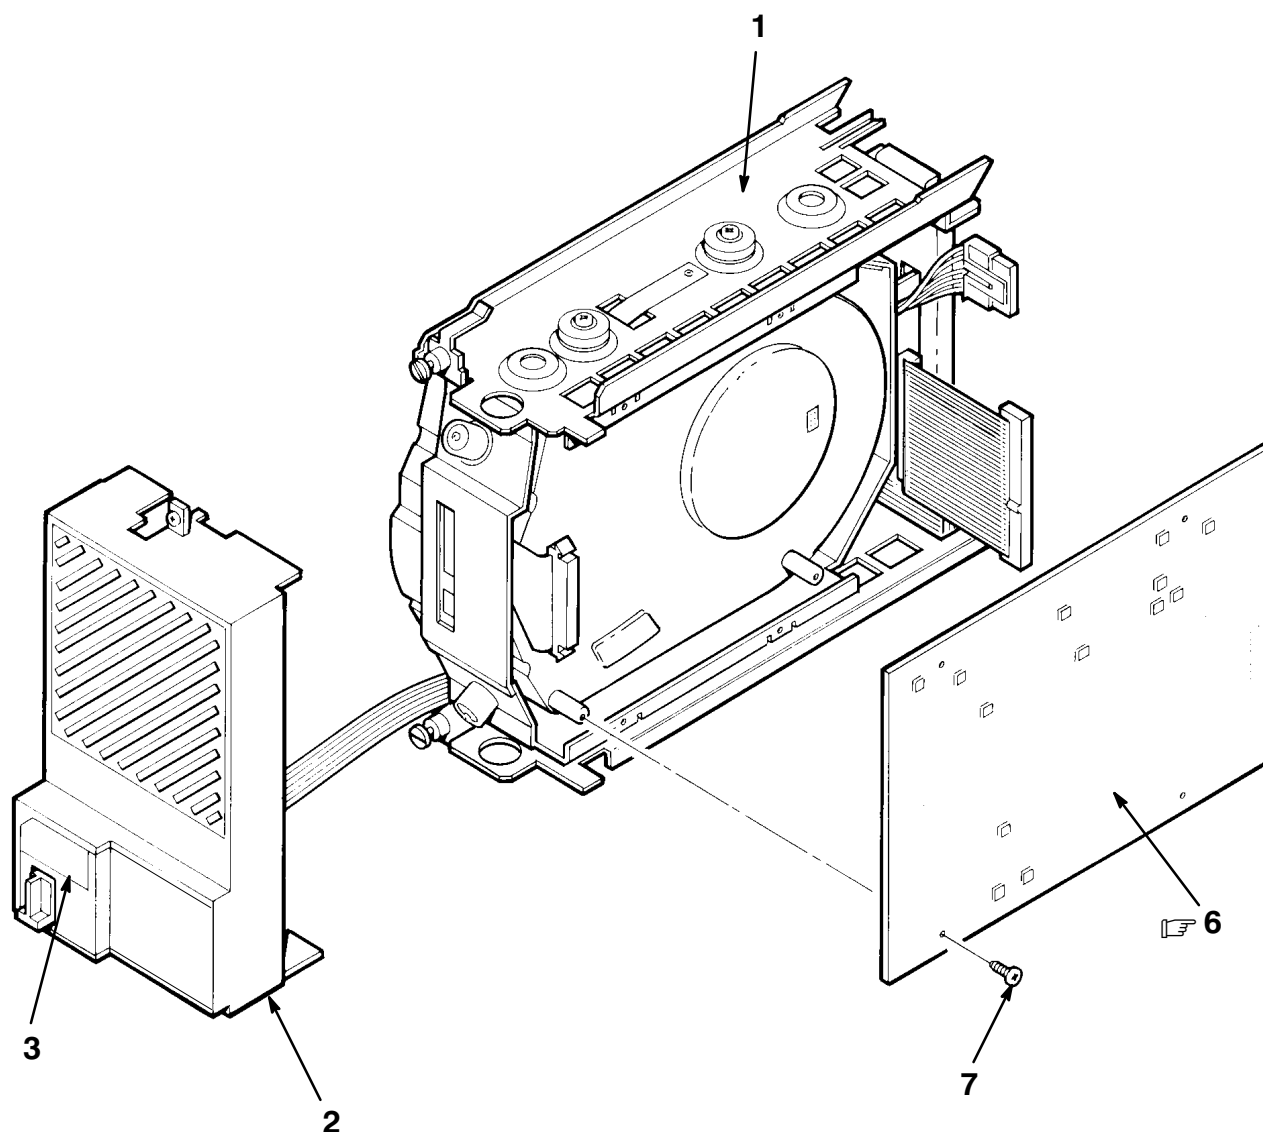| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. [A] | ECO CUT−IN RZ58E 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 33− | STORAGE ELEMENT, RZ58E | | | | 30 |
| | Code A − Used on RZ58E−AA | RZ58E−AA | | A | |
| | Code B − Used on RZ58E−AF | RZ58E−AF | | B | |
| 1 | *MOUNTING ASSEMBLY, RZ58 ISE | 70−28089−03 | | | 34 |
| 2 | *BEZEL ASSEMBLY, DISK DRIVE | 70−27049−05 | | | 30,36, 40 |
| 3 | *Label, ''No. 2 Language Variant'' | 36−33183−04 | | | |
| 4 | *Documentation, ''Storage Device Add On Procedure'' (Not Shown) | EK−BA44A−IN | | B | |
| 5 | *Package Assembly (Not Shown) | 37−01215−01 | | B | |

☞ ☜ **INDICATES FRU LEVEL PARTS.**
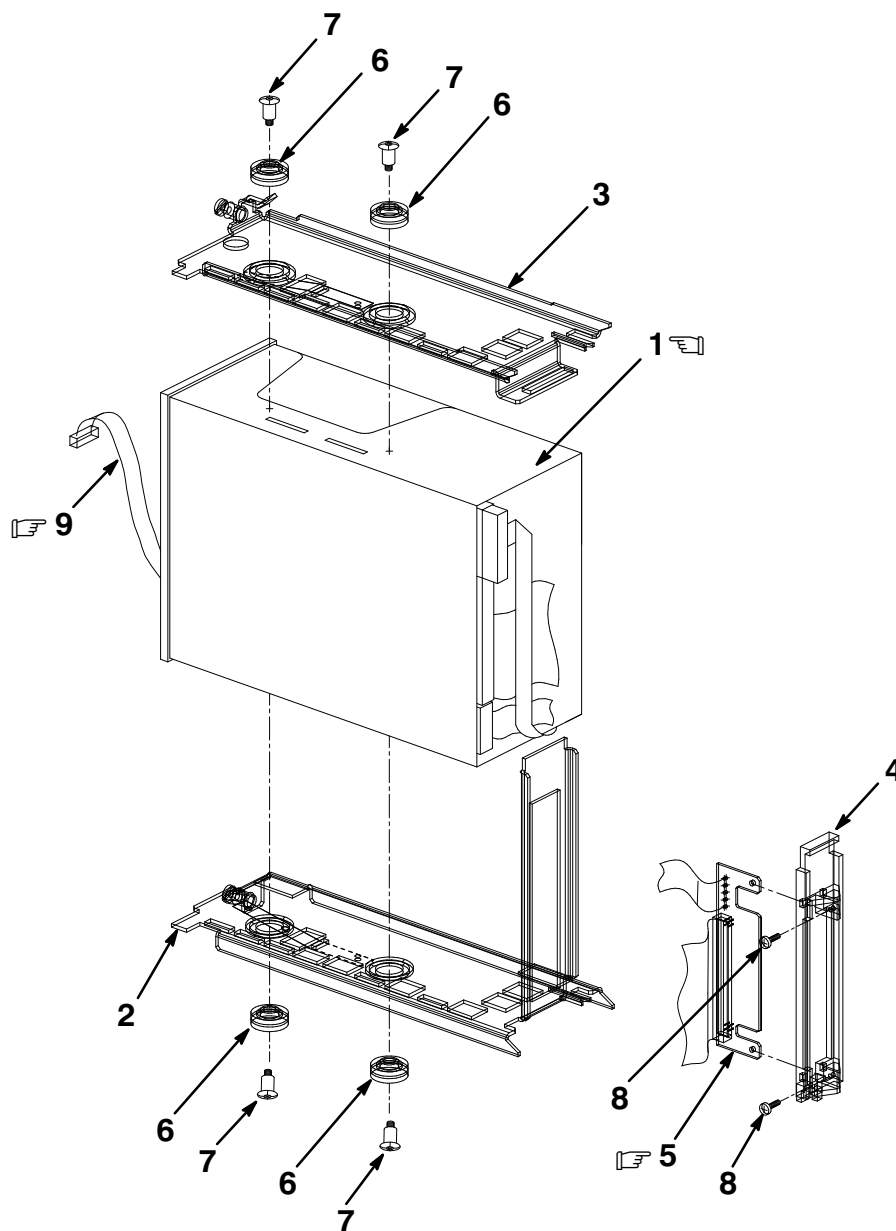


400ST−34−IL

*Figure 34. Mounting Assembly, RZ56/RZ57/RZ58 ISE*

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. ᴮ | ECO CUT−IN 70−28089 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 34− | MOUNTING ASSEMBLY, RZ56 ISE | 70−28089−01 | | A | 31 |
| | MOUNTING ASSEMBLY, RZ57 ISE | 70−28089−02 | | B | 32 |
| | MOUNTING ASSEMBLY, RZ58 ISE (added) | 70−28089−03 | 00001 | C | 33 |
| | | | | | |
| ☞ 1 | *Disk Drive Assembly | RZ56−E | | A | |
| ☞ | *Disk Drive Assembly | RZ57−E | | B | |
| ☞ | *Disk Drive Assembly (added) | RZ58−E | 00001 | C | |
| 2 | *Bracket Assembly, Bottom Drive | 70−28076−01 | | | |
| 3 | *Bracket, Top SCSI | 74−41144−01 | | | |
| 4 | *Bracket, Paddle Board | 74−38830−01 | | | |
| ☞ 5 | *Module, SCSI Interface Card | 54−20136−01 | | | |
| 6 | *Isolator, Shock Grommet | 12−32626−04 | | | |
| 7 | *Screw, Shoulder No. 6−32 | 12−34462−02 | | | |
| 8 | *Screw, Phl Pan Hd No. 4−40 x 1/4 | 90−09315−01 | | | |
| ☞ 9 | *Cable Assembly, 10 Cond. | 17−02887−01 | | | |

400ST−35−SC

*Figure 35. Storage Element, RZ73E*

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. [H] | ECO CUT−IN RF73E 00006 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 35− | STORAGE ELEMENT, RZ73E | RZ73E | | | 30 |
| 1 | *MOUNTING ASSEMBLY, RZ73 ISE | 70−28089−04 | | | 37 |
| 2 | *BEZEL ASSEMBLY, 5 1/4 INCH DISK DRIVE | 70−27049−05 | | | 27,30 40 |
| 3 | *Label, ''No. 2 Language Variant'' (See Note 1) | 36−33183−04 | | | |
| 4 | *Documentation, ''Storage Device Add On Procedure'' (Not Shown) | EK−BA44A−IN | | | |
| 5 | *Package Assembly (Not Shown) | 37−01215−01 | | | |
| ☞ 6 | Module, RZ73 Drive (See Notes 2 and 3) | 54−19110−XX | | | |
| 7 | Screw, Mach Phl Pan Hd No. 4−40 x 3/8 (See Note 3) | 90−06011−01 | | | |

Note 1: Language Specific Used In Place Of 01

Note 2: XX = Order Latest Version.

Note 3: Not Part of RZ73E Assembly, Shown For Reference Only.

☞ ☜ INDICATES FRU LEVEL PARTS.
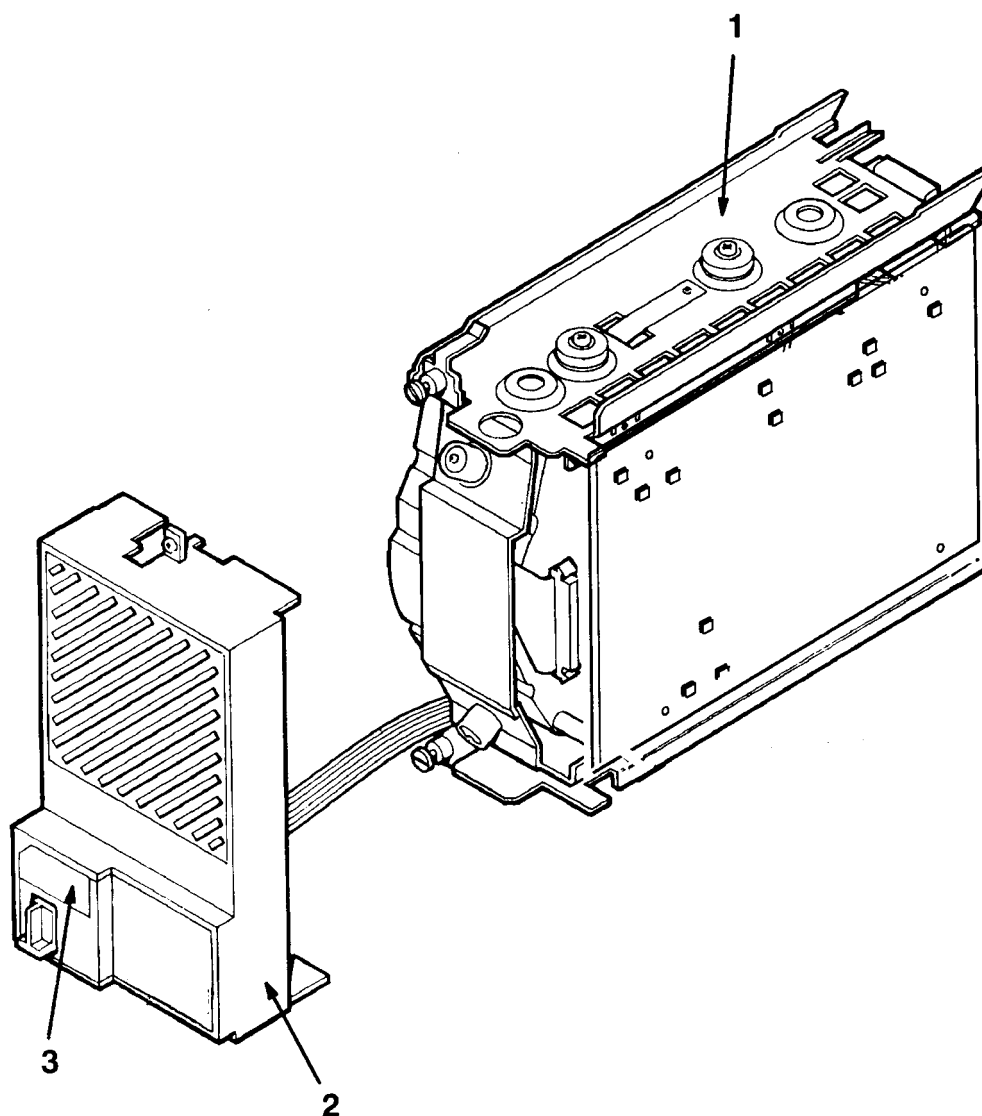


400ST−36−SC

**Figure 36. Storage Element, RZ74E**

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. <sup>A</sup> | ECO CUT−IN RF74E 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 36− | ☞ STORAGE ELEMENT, RZ74E | RZ74E | | | 1 |
| 1 | *MOUNTING ASSEMBLY, RZ74 ISE | 70−28089−05 | | | 37 |
| 2 | *BEZEL ASSEMBLY, 5 1/4 INCH DISK DRIVE | 70−27049−05 | | | 27,30 33,40 |
| 3 | *Label, ''No. 2 Language Variant'' (See Note 1) | 36−33183−04 | | | |
| 4 | *Documentation, ''Storage Device Add On Procedure'' (Not Shown) | EK−BA44A−IN | | | |
| 5 | *Package Assembly (Not Shown) | 37−01215−01 | | | |
| | Note 1: Language Specific Used In Place Of 01. | | | | |

☞ ⬚ **INDICATES FRU LEVEL PARTS.**
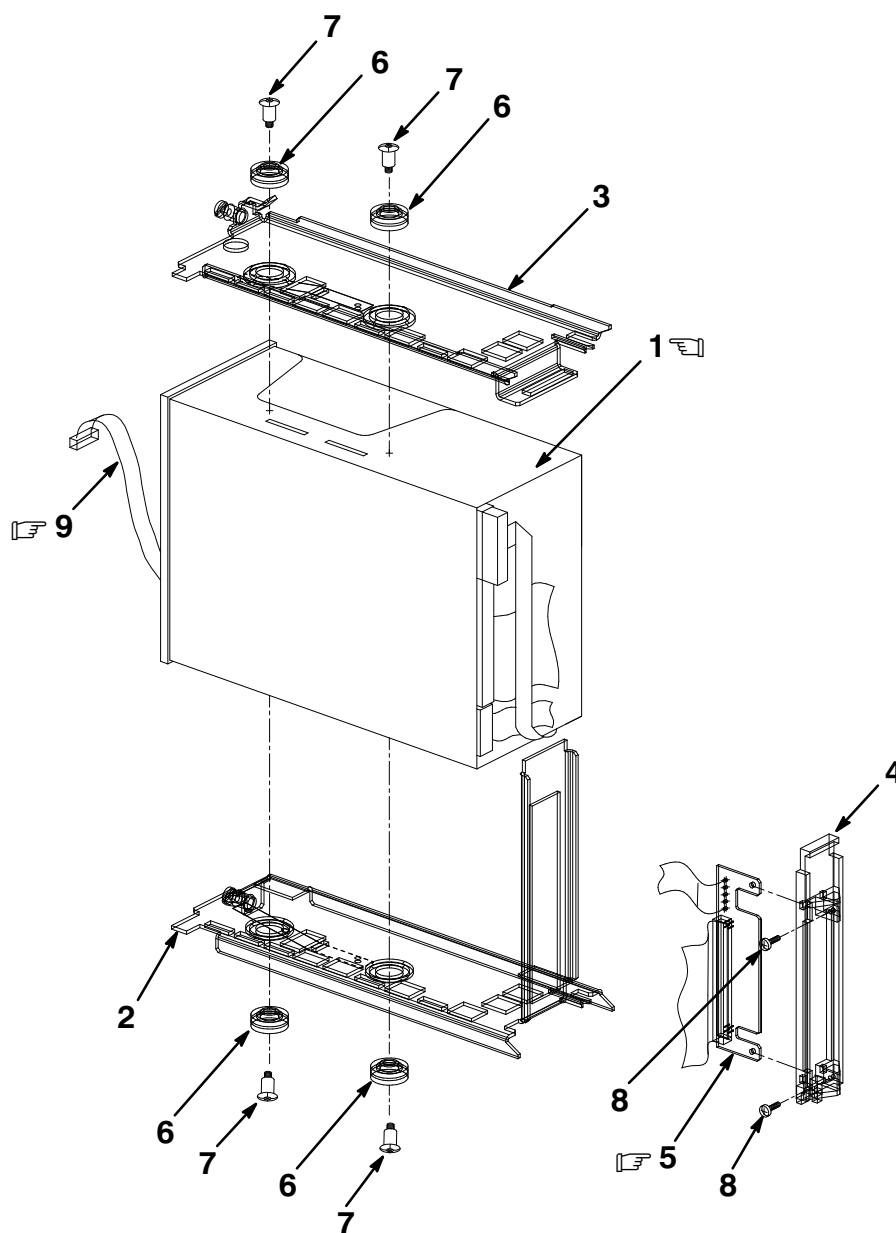


400ST−37−IL

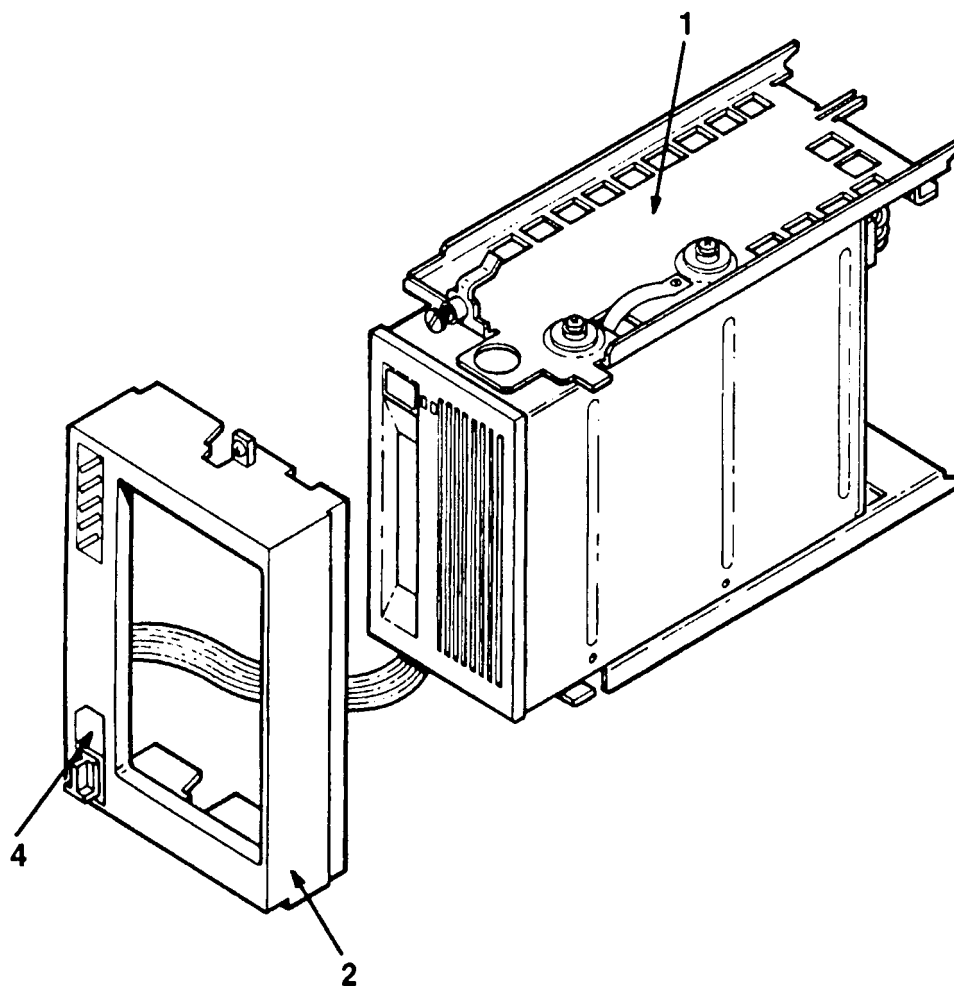*Figure 37. Mounting Assembly, RZ73/RZ74 ISE*

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. <sup>B</sup> | ECO CUT−IN 70−28089 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 37− | MOUNTING ASSEMBLY, RZ73 ISE | 70−28089−04 | | A | 35 |
| | MOUNTING ASSEMBLY, RZ74 ISE | 70−28089−05 | | B | 36 |
| | | | | | |
| ☞ 1 | *Disk Drive Assembly | RZ73−E | | A | |
| | *Disk Drive Assembly | RZ74−E | | B | |
| 2 | *Bracket Assembly, Bottom Drive | 70−27412−01 | | | |
| 3 | *Bracket, Top SCSI | 74−38828−01 | | | |
| 4 | *Bracket, Paddle Board | 74−38830−01 | | | |
| ☞ 5 | *Module, SCSI Interface Card | 54−20136−01 | | | |
| 6 | *Isolator, Shock Grommet | 12−32626−04 | | | |
| 7 | *Screw, Shoulder No. 6−32 | 12−34462−01 | | | |
| 8 | *Screw, Phl Pan Hd No. 4−40 x 1/4 | 90−09315−01 | | | |
| ☞ 9 | *Cable Assembly, 06 Cond. | 17−03498−01 | | | |

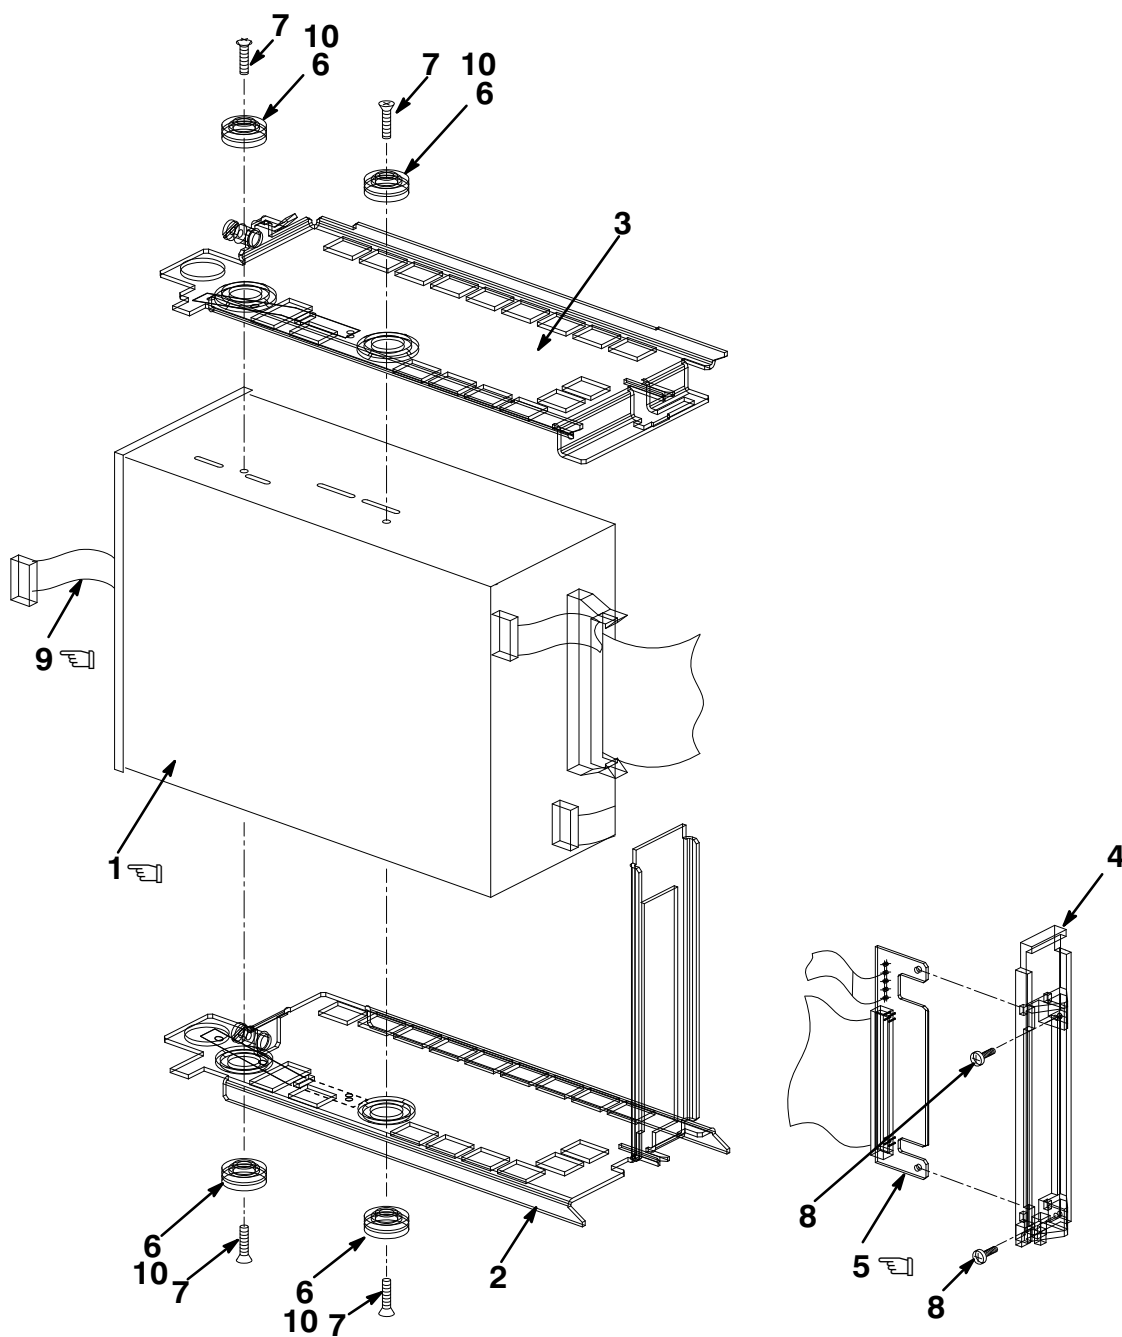| FIG.& ITEM NO. | DESCRIPTION | DIGITAL[C] PART NO. | ECO CUT−IN TLZ04 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 38− | STORAGE ELEMENT, TLZ04 | | | | |
| | Code A − Used on TLZ04−JA | TLZ04−JA | | A | 30 |
| | Code B − Used on TLZ04−JF | TLZ04−JF | | B | 30 |
| 1 | *MOUNTING ASSEMBLY, TLZ04 ISE | 70−28090−01 | | | 39 |
| 2 | *BEZEL ASSEMBLY, WIDE WINDOW | 70−28081−03 | | | 30,41 |
| 3 | *Label, "Bar Code, Integrated Storage" (deleted) (Not Shown) | 36−33151−07 | 00001 | | |
| 4 | *Label, "Bus ID Language Variant" | 36−33181−02 | | | |
| 5 | *Documentation, "Storage Device Add On Procedure" (Not Shown) | EK−BA44A−IN | | B | |
| 6 | *Package Assembly (Not Shown) | 37−01215−01 | | B | |

☞ ⌐ INDICATES FRU LEVEL PARTS.



400ST−38−SC

Figure 38. Storage Element, TLZ04

THIS PAGE INTENTIONALLY LEFT BLANK

☞ ⬧ **INDICATES FRU LEVEL PARTS.**



400ST−39−IL

*Figure 39. Mounting Assembly, TLZ04 ISE*

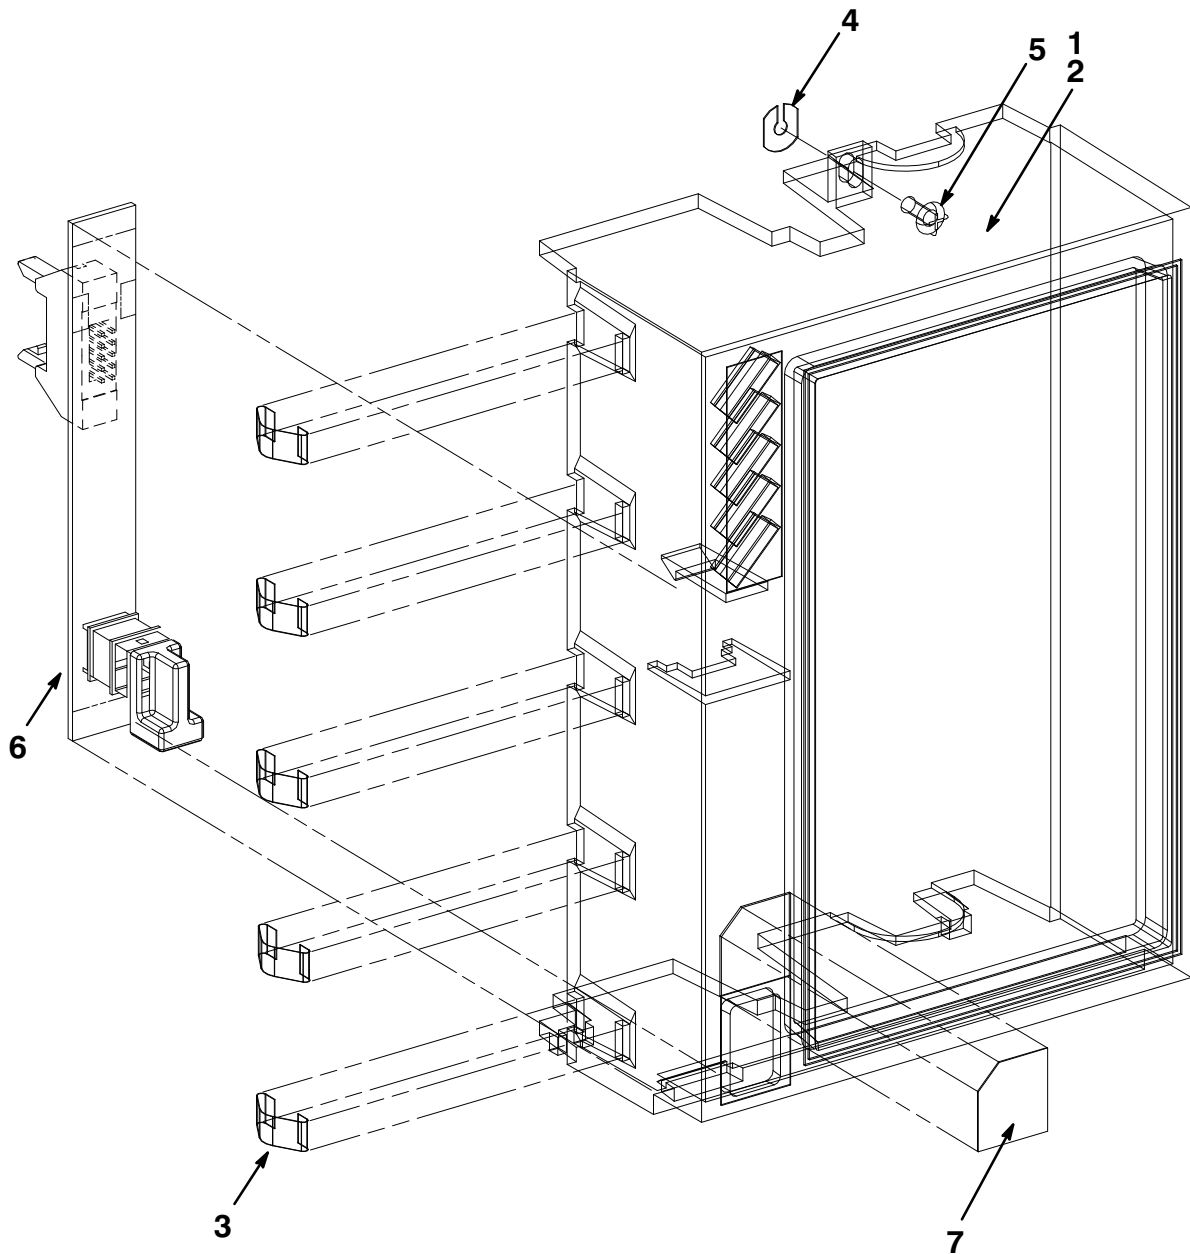| FIG.&  ITEM NO. | DESCRIPTION | DIGITAL PART NO. | ECO CUT−IN 70−28090 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| | | B | | | |
| 39− | MOUNTING ASSEMBLY, TLZ04 ISE | 70−28090−01 | | | 38 |
| | | | | | |
| ☞1 | *Tape Drive Assembly | TLZ04−AA | | | |
| 2 | *Bracket Assembly, Bottom | 70−28078−01 | | | |
| 3 | *Bracket, Top | 70−28077−01 | | | |
| 4 | *Bracket, Paddle Board | 74−38830−01 | | | |
| ☞5 | *Module, SCSI Interface Card | 54−20136−03 | | | |
| 6 | *Isolator, Shock (deleted) | 12−32626−01 | 00001 | | |
| | *Isolator, Shock Grommet (added) | 12−32626−04 | 00001 | | |
| 7 | *Screw, Machine No. M−3 14 mm | 90−11163−01 | | | |
| 8 | *Screw, Phl Pan Hd No. 4−40 x 1/4 | 90−09315−01 | | | |
| ☞9 | *Cable Assembly, 10 Cond. | 17−01936−02 | | | |
| 10 | *Ferrule (added) | 12−32626−03 | 00001 | | |

☞ ☜ **INDICATES FRU LEVEL PARTS.**
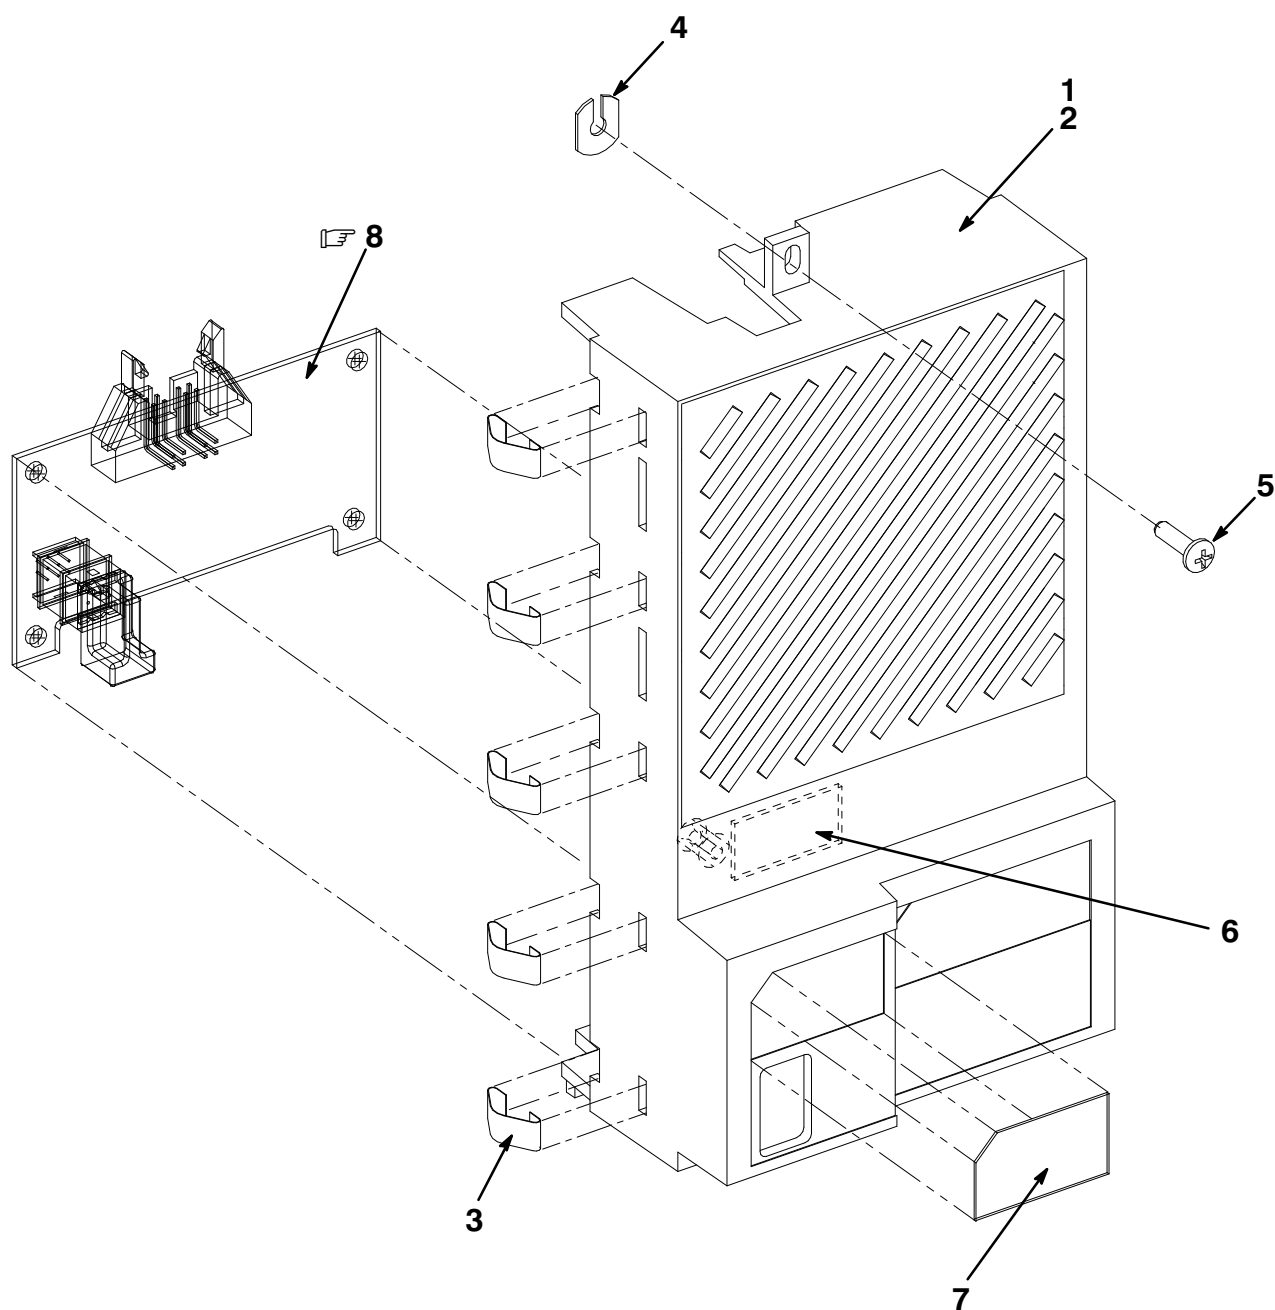


400ST−40−IL

*Figure 40. Bezel Assembly, Disk Drive*

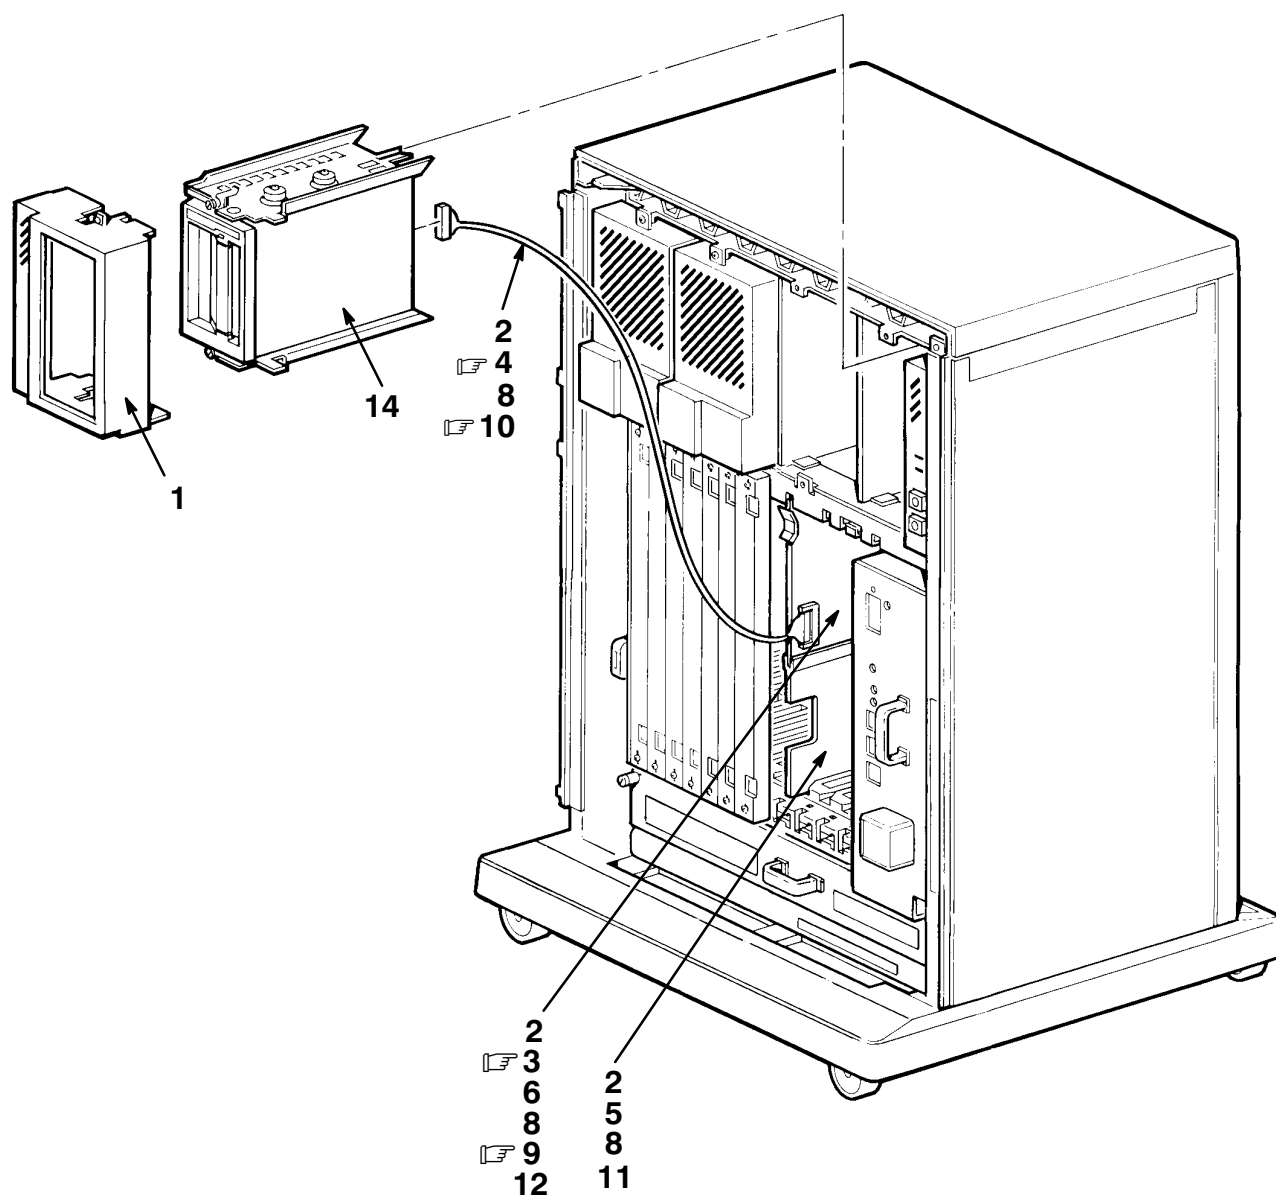| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. | ECO CUT−IN 70−27049 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 40− | BEZEL ASSEMBLY, DISK DRIVE | 70−27049−05 | | | 30,31, 32,33 35,36 |
| 1 | *BEZEL ASSEMBLY, DISK DRIVE | 70−27049−03 | | | |
| 2 | **Bezel, Drive | 74−39272−03 | | | |
| 3 | **Finger, Grounding | 12−26922−01 | | | |
| 4 | **Washer, Retainer | 12−30421−01 | | | |
| 5 | **Screw, Phl Pan Hd No. 6−32 x 5/16 | 90−06021−01 | | | |
| 6 | **Tape, Velcro | 12−32980−01 | | | |
| 7 | *Label, ''Bus ID'' | 36−33183−03 | | | |
| ☞8 | *Module, SCSI Device ID Panel | 54−20400−01 | | | |

☞ 🖅 INDICATES FRU LEVEL PARTS.



400ST−41−IL

*Figure 41. Bezel Assembly, Wide Window*

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. B | ECO CUT−IN 70−28081 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 41− | BEZEL ASSEMBLY, WIDE WINDOW | 70−28081−03 | | | 30,38 |
| | | | | | |
| 1 | *Bezel Assembly, Wide Window | 70−28081−01 | | | |
| 2 | **Bezel, Wide Window | 74−41159−01 | | | |
| 3 | **Finger, Grounding | 12−26922−01 | | | |
| 4 | **Washer, Retaining | 12−30421−01 | | | |
| 5 | **Screw, Machine Phl Pan Hd No. 6−32 x  5/16 | 90−06021−01 | | | |
| 6 | *Module, RDAT ID | 54−20438−01 | | | |
| 7 | *Label, "Bus ID" | 36−33181−01 | | | |

# TK DRIVES

☞ ☜ **INDICATES FRU LEVEL PARTS.**



**2**
☞**4**
**8**
☞**10**

**14**

**1**

**2**
☞**3**
**6**
**8**
☞**9**
**12**

**2**
**5**
**8**
**11**

400ST−42−SC

*Figure 42. Typical TK System Mounting and Cabling*

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. | ECO CUT−IN | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 42− | **TYPICAL TK SYSTEM MOUNTING and CABLING** | | | | |
| 1 | ***BEZEL ASSEMBLY, TAPE DRIVE** | 70−27050−02 | | | 43,45, 47 |
| 2 | ***KIT, Q−bus CONTROLLER** | TQK70−SA | | | |
| ☞3 | ****Module, Tape Controller** | M7559−00 | | | |
| ☞4 | ****Cable Assembly** | 17−01363−01 | | | |
| 5 | ****Panel, Blank Dual** | 74−33507−01 | | | |
| 6 | ****Label, "Module Number" (See Note)** | 36−26883−45 | | | |
| 7 | ****Label, "BAXXX Rev" (Rolled) (Not Shown)** | 36−29163−07 | | | |
| 8 | ***KIT, Q−bus CONTROLLER** | TQK50−SA | | | |
| ☞9 | ****Module, Tape Controller** | M7546−00 | | | |
| ☞10 | ****Cable Assembly** | 17−01363−01 | | | |
| 11 | ****Panel, Blank Dual** | 74−33507−01 | | | |
| 12 | ****Label, "Module Number" (See Note)** | 36−26883−11 | | | |
| 13 | ****Label, "BAXXX Rev" (Rolled) (Not Shown)** | 36−29163−07 | | | |
| 14 | ***TK70E Tape Drive Assembly** | TK70E−AA | | | 45 |
| | ***TK70E Tape Drive Assembly** | TK70E−AF | | | 45 |
| | ***TK50E Tape Drive Assembly** | TK50E−AA | | | 43 |
| | ***TK50E Tape Drive Assembly** | TK50E−AF | | | 43 |

**Note: Label placement is on Module Bulkhead.**

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. [A] | ECO CUT−IN TK50E 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 43− | STORAGE ELEMENT, TK50E | | | | |
| | Code A − Used on TK50E−AA | TK50E−AA | | A | 42 |
| | Code B − Used on TK50E−AF | TK50E−AF | | B | 42 |
| 1 | *MOUNTING ASSEMBLY, TK50 ISE | 70−22839−01 | | | 44 |
| 2 | *BEZEL ASSEMBLY, TAPE DRIVE | 70−27050−02 | | | 47 |
| 3 | *Documentation, ''Storage Device Add On Procedure'' (Not Shown) | EK−BA44A−IN | | B | |
| 4 | *Package Assembly (Not Shown) | 37−01215−02 | | B | |

☞ ☜ INDICATES FRU LEVEL PARTS.
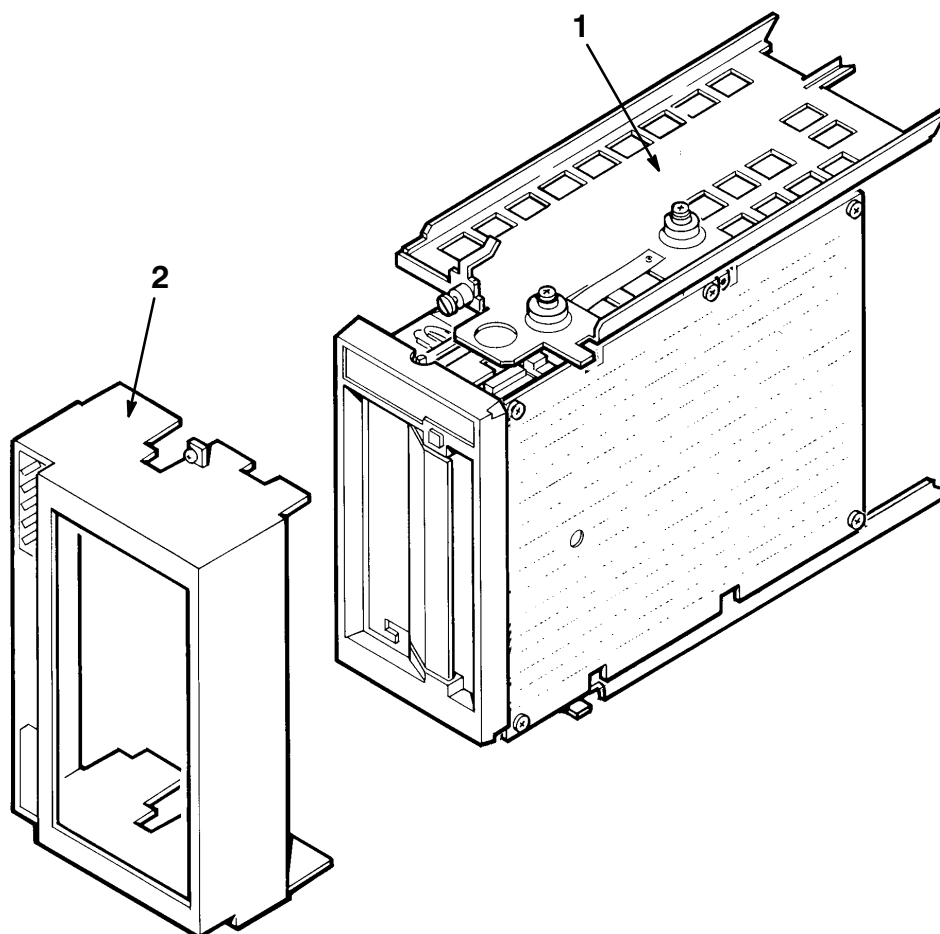


400ST−43−SC

**Figure 43. Storage Element, TK50E**

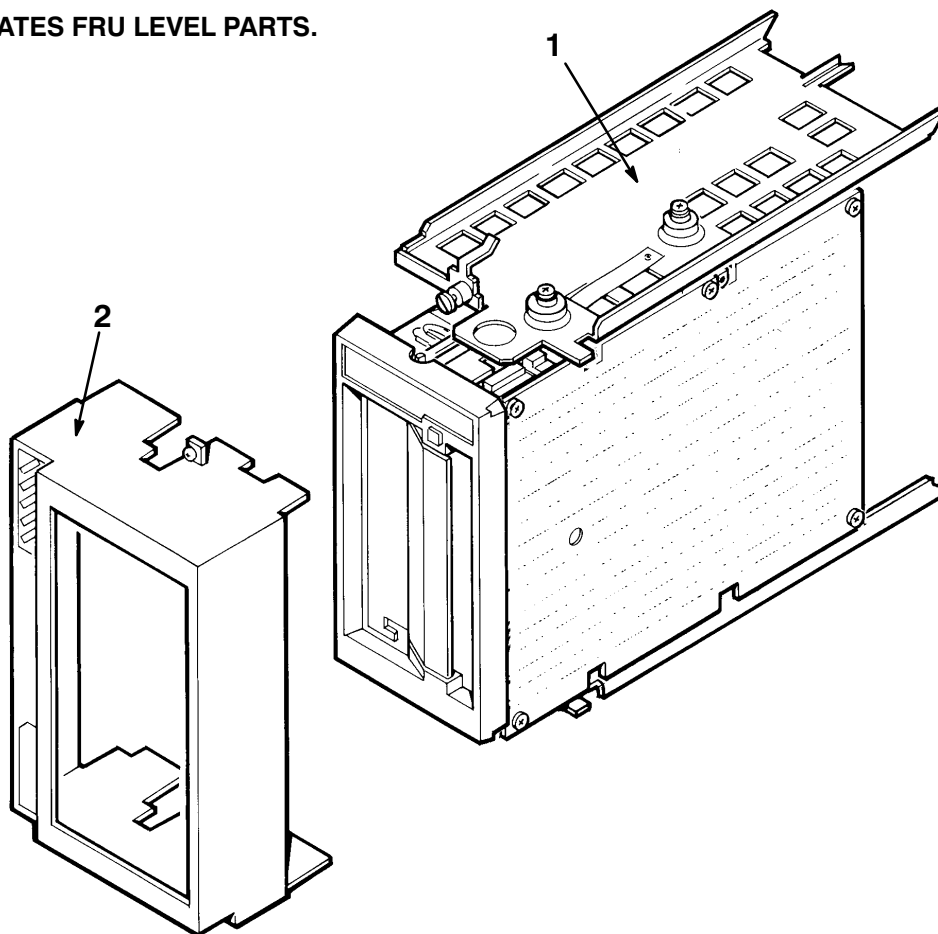THIS PAGE INTENTIONALLY LEFT BLANK

☞ ⌐☜ **INDICATES FRU LEVEL PARTS.**



**7**
**6**
**7**
**6**
**3**
**1** ⌐☜
☞ **5**
**4**
**8**
**6**
**7**
**6**
**7**
**2**
**8**
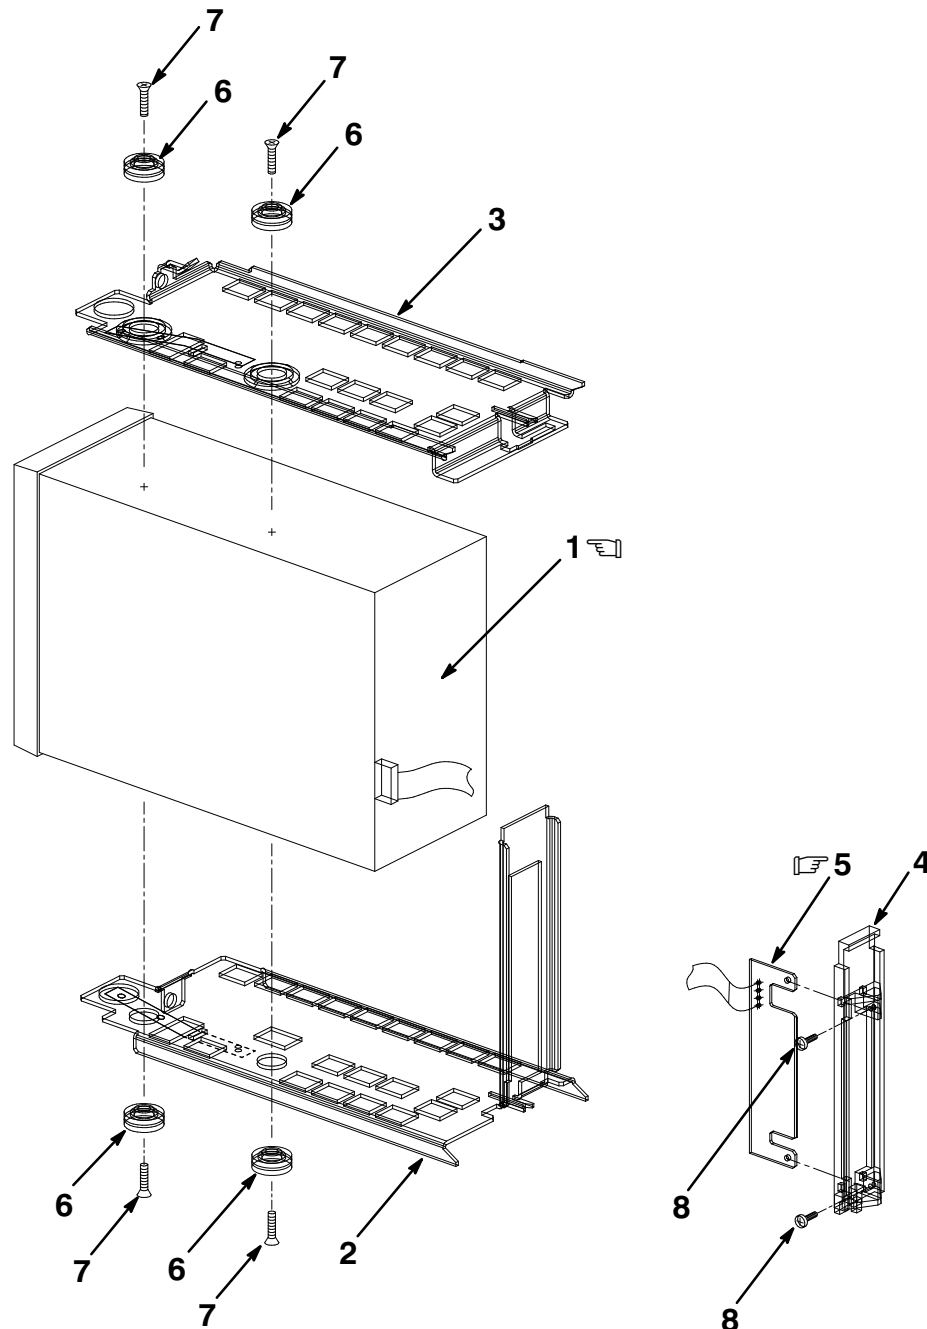
400ST−44−IL

**Figure 44. Mounting Assembly, TK50 ISE**

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. | ECO CUT−IN 70−22839 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| | | B | | | |
| 44− | MOUNTING ASSEMBLY, TK50 ISE | 70−22839−01 | | | 43 |
| | | | | | |
| ☞1 | *Tape Drive Assembly | TK50−EA | | | |
| 2 | *Bracket Assembly, Bottom Tape Drive | 70−27413−01 | | | |
| 3 | *Bracket Assembly, Top Tape Drive | 70−27457−01 | | | |
| 4 | *Bracket, Paddle Board | 74−38830−01 | | | |
| ☞5 | *Module,  Interface Card | 54−20136−02 | | | |
| 6 | *Isolator, Shock (deleted) | 12−32626−01 | 00001 | | |
| 6 | *Isolator, Shock Grommet Only (added) | 12−32626−04 | 00001 | | |
| 6 | *Isolator, Shock Ferrule (added) | 12−32626−03 | 00001 | | |
| 7 | *Screw, Machine Flat Hd No. 6−32 x 5/8 | 90−06025−02 | | | |
| 8 | *Screw, Phl Pan Hd No. 4−40 x 1/4 | 90−09315−01 | | | |

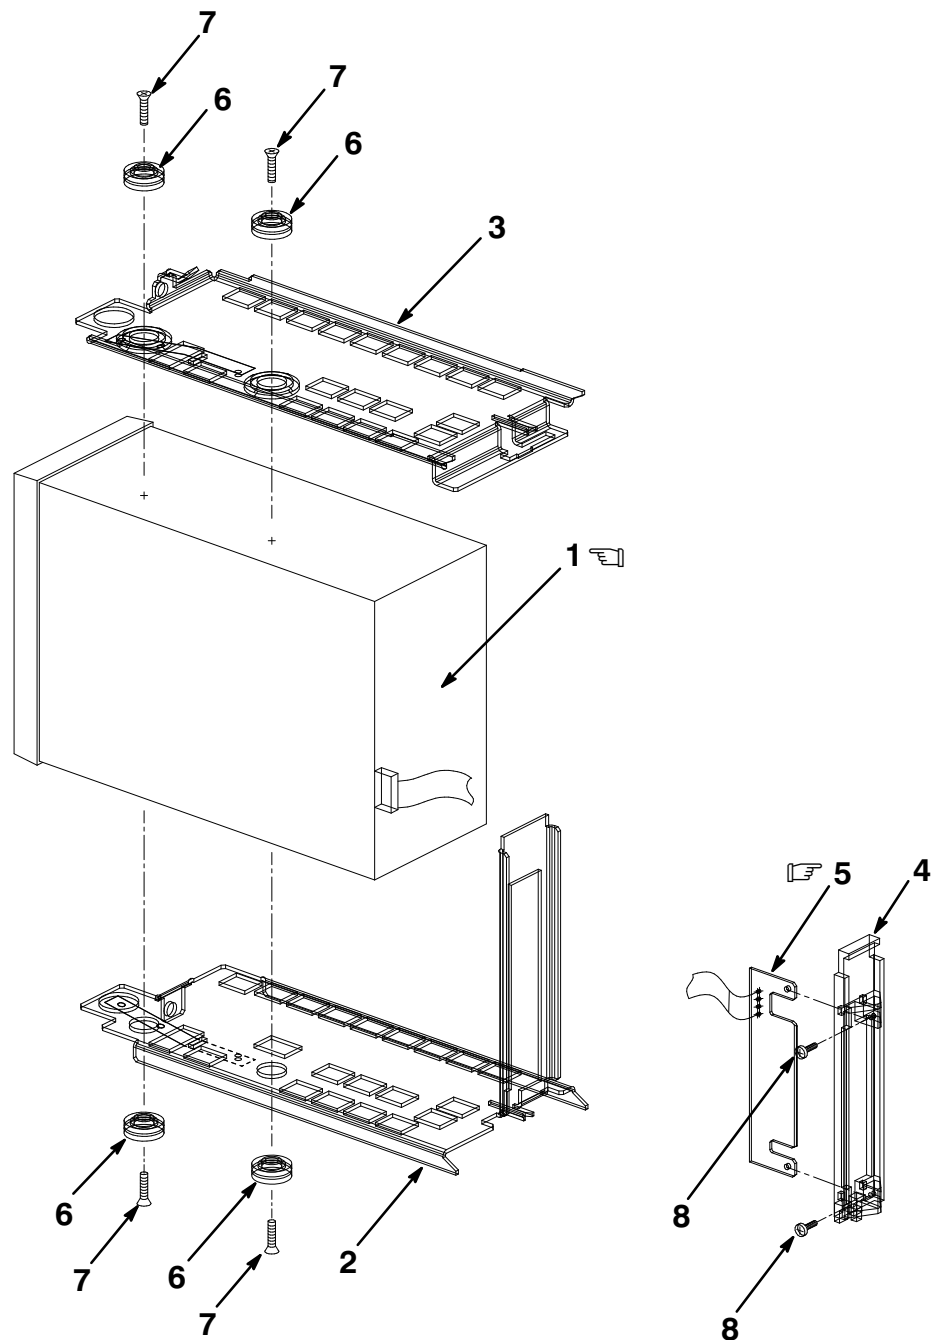| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. [B] | ECO CUT−IN TK70E 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 45− | STORAGE ELEMENT, TK70E | | | | |
| | Code A − Used on TK70E−AA | TK70E−AA | | A | 42 |
| | Code B − Used on TK70E−AF | TK70E−AF | | B | 42 |
| 1 | *MOUNTING ASSEMBLY, TK70 ISE | 70−28088−01 | | | 46 |
| 2 | *BEZEL ASSEMBLY, TAPE DRIVE | 70−27050−02 | | | 42,47 |
| 3 | *Label, Bar Code, Integrated Storage (deleted) (Not Shown) | 36−33151−01 | 00001 | | |
| 4 | *Documentation, ''Storage Device Add On Procedure'' (Not Shown) | EK−BA44A−IN | | B | |
| 5 | *Package Assembly (Not Shown) | 37−01215−02 | | B | |

☞ ☜ INDICATES FRU LEVEL PARTS.



400ST−45−SC

**Figure 45. Storage Element, TK70E**

THIS PAGE INTENTIONALLY LEFT BLANK

☞ ☜ **INDICATES FRU LEVEL PARTS.**



400ST−46−IL

**Figure 46. Mounting Assembly, TK70 ISE**

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. B | ECO CUT−IN 70−28088 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 46− | **MOUNTING ASSEMBLY, TK70 ISE** | 70−28088−01 | | | 45 |
| ☞1 | *Tape Drive Assembly | TK70−EA | | | |
| 2 | *Bracket Assembly, Bottom Tape Drive | 70−27413−01 | | | |
| 3 | *Bracket Assembly, Top Tape Drive | 70−27457−01 | | | |
| 4 | *Bracket, Paddle Board | 74−38830−01 | | | |
| ☞5 | *Module,  Interface Card | 54−20136−02 | | | |
| 6 | *Isolator, Shock (deleted) | 12−32626−01 | 00001 | | |
| 6 | *Isolator, Shock Grommet Only (added) | 12−32626−04 | 00001 | | |
| 6 | *Isolator, Shock Ferrule Only (added) | 12−32626−03 | 00001 | | |
| 7 | *Screw, Machine Flat Hd No. 6−32 x 5/8 | 90−06025−02 | | | |
| 8 | *Screw, Phl Pan Hd No. 4−40 x 1/4 | 90−09315−01 | | | |

| FIG.& ITEM NO. | DESCRIPTION | DIGITAL PART NO. [B] | ECO CUT−IN 70−27050 00000 | USED ON CODE | REF FIG NO. |
|---|---|---|---|---|---|
| 47− | BEZEL ASSEMBLY, TAPE DRIVE | 70−27050−02 | | | 42,44 |
| 1 | *Bezel, Tape Drive | 74−39273−01 | | | |
| 2 | *Finger, Grounding | 12−26922−01 | | | |
| 3 | *Washer, Retaining | 12−30421−01 | | | |
| 4 | *Screw, Phl Pan Hd No. 6−32 x 5/16 | 90−06021−01 | | | |
| | | | | | Ω |



400ST−47−IL
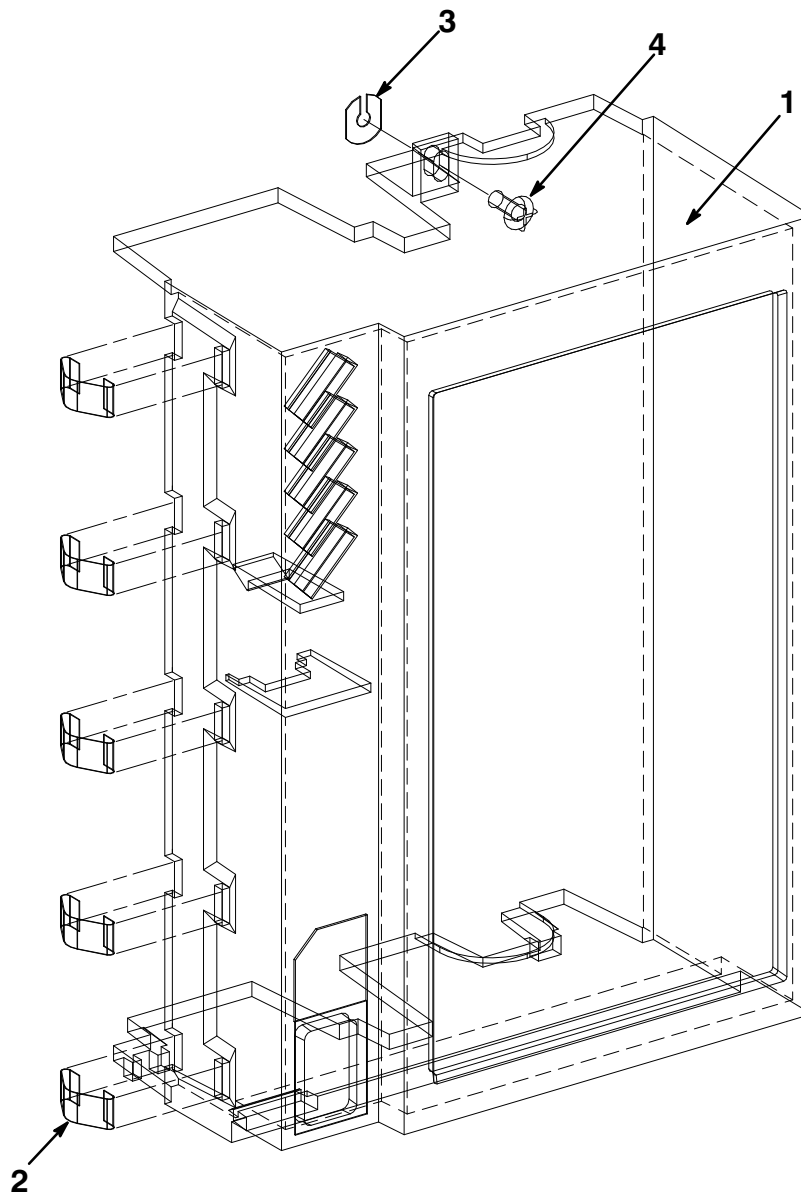
**Figure 47. Bezel Assembly, Tape Drive**

THIS PAGE INTENTIONALLY LEFT BLANK

# PART NUMBER/DESCRIPTION INDEX ▶

THIS PAGE INTENTIONALLY LEFT BLANK

| PART NO. | DESCRIPTION | FIG NO. | ITEM NO. |
|---|---|---|---|
| 36−33183−02 | Label, "Drive No. 2 Language Variant" | 3 | 4 |
| 36−33183−03 | Label, "Bus ID" | 27 | 8 |
| 36−33183−03 | Label, "Bus ID" | 40 | 7 |
| 36−33183−04 | Label, "No. 2 Language Variant" | 14 | 6 |
| 36−33183−04 | Label, "No. 2 Language Variant" | 15 | 6 |
| 36−33183−04 | Label, "No. 2 Language Variant" | 16 | 5 |
| 36−33183−04 | Label, "No. 2 Language Variant" | 17 | 5 |
| 36−33183−04 | Label, "No. 2 Language Variant" | 19 | 5 |
| 36−33183−04 | Label, "No. 2 Language Variant" | 2 | 6 |
| 36−33183−04 | Label, "No. 2 Language Variant" | 20 | 5 |
| 36−33183−04 | Label, "No. 2 Language Variant" | 21 | 5 |
| 36−33183−04 | Label, "No. 2 Language Variant" | 3 | 5 |
| 36−33183−04 | Label, "No. 2 Language Variant" | 31 | 5 |
| 36−33183−04 | Label, "No. 2 Language Variant" | 32 | 5 |
| 36−33183−04 | Label, "No. 2 Language Variant" | 33 | 3 |
| 36−33183−04 | Label, "No. 2 Language Variant" | 35 | 3 |
| 36−33183−04 | Label, "No. 2 Language Variant" | 36 | 3 |
| 37−01186−07 | Package Assembly (Bulk Shipment) (Not Shown) | 16 | 8 |
| 37−01186−07 | Package Assembly (Bulk Shipment) (Not Shown) | 17 | 7 |
| 37−01215−01 | Package Assembly (Not Shown) | 11 | 4 |
| 37−01215−01 | Package Assembly (Not Shown) | 12 | 4 |
| 37−01215−01 | Package Assembly (Not Shown) | 14 | 8 |
| 37−01215−01 | Package Assembly (Not Shown) | 15 | 8 |
| 37−01215−01 | Package Assembly (Not Shown) | 16 | 7 |
| 37−01215−01 | Package Assembly (Not Shown) | 17 | 7 |
| 37−01215−01 | Package Assembly (Not Shown) | 19 | 7 |
| 37−01215−01 | Package Assembly (Not Shown) | 20 | 7 |
| 37−01215−01 | Package Assembly (Not Shown) | 21 | 7 |
| 37−01215−01 | Package Assembly (Not Shown) | 31 | 7 |
| 37−01215−01 | Package Assembly (Not Shown) | 32 | 7 |
| 37−01215−01 | Package Assembly (Not Shown) | 33 | 5 |
| 37−01215−01 | Package Assembly (Not Shown) | 35 | 5 |
| 37−01215−01 | Package Assembly (Not Shown) | 36 | 5 |
| 37−01215−01 | Package Assembly (Not Shown) | 38 | 6 |
| 37−01215−01 | Package Assembly (Not Shown) | 5 | 4 |
| 37−01215−01 | Package Assembly (Not Shown) | 6 | 4 |
| 37−01215−01 | Package Assembly (Not Shown) | 8 | 4 |
| 37−01215−01 | Package Assembly (Not Shown) | 9 | 4 |
| 37−01215−02 | Package Assembly (Not Shown) | 43 | 4 |
| 37−01215−02 | Package Assembly (Not Shown) | 45 | 5 |
| 37−01215−04 | Package Assembly (Not Shown) | 2 | 8 |
| 37−01215−04 | Package Assembly (Not Shown) | 3 | 7 |
| 37−01215−06 | Package Assembly (Not Shown) | 23 | 6 |
| 37−01215−06 | Package Assembly (Not Shown) | 25 | 6 |
| 54−10091−XX | Module, RF72 Drive | 15 | 9 |
| 54−18316−XX | Module, RF71 Drive | 14 | 9 |
| 54−18329−01 | Module, RF31 Drive | 2 | 9 |
| 54−18329−02 | Module, RF31F Drive | 3 | 8 |
| 54−19089−01 | Module, TF85 | 23 | 7 |
| 54−19089−01 | Module, TF85/TF86 | 25 | 7 |
| 54−19110−XX | Module, RZ73 Drive | 35 | 6 |
| 54−19119−XX | Module, RF73 Drive | 16 | 9 |
| 54−19787−01 | Module, DSSI Interface Card | 18 | 6 |

| PART NO. | DESCRIPTION | FIG NO. | ITEM NO. |
|---|---|---|---|
| 54−19787−01 | **Module, DSSI Interface Card** | 22 | 4 |
| 54−19787−01 | **Module, DSSI Interface Card** | 4 | 5 |
| 54−19787−02 | **Module, Interface Card** | 26 | 5 |
| 54−19787−02 | **Module, Interface Card** | 24 | 5 |
| 54−19787−03 | **Module, Paddle** | 10 | 3 |
| 54−19787−03 | **Module, Paddle** | 13 | 3 |
| 54−19787−03 | **Module, Paddle** | 7 | 3 |
| 54−19791−01 | **Module, DSSI Front Panel** | 27 | 9 |
| 54−20136−01 | **Module, SCSI Interface Card** | 34 | 5 |
| 54−20136−01 | **Module, SCSI Interface Card** | 37 | 5 |
| 54−20136−02 | **Module, Interface Card** | 44 | 5 |
| 54−20136−02 | **Module, Interface Card** | 46 | 5 |
| | | | |
| 54−20136−03 | **Module, SCSI Interface Card** | 39 | 5 |
| 54−20336−01 | **Module, Device ID Panel** | 29 | 7 |
| 54−20400−01 | **Module, SCSI Device ID Panel** | 40 | 8 |
| 54−20438−01 | **Module, RDAT ID** | 41 | 6 |
| 54−21530−01 | **Module, DSSI Remote Front Panel** | 28 | 2 |
| | | | |
| 70−22839−01 | **MOUNTING ASSEMBLY, TK50 ISE** | 43 | 1 |
| 70−22839−01 | **MOUNTING ASSEMBLY, TK50 ISE** | 44 | N/A |
| 70−23557−01 | **Mechanics Assembly, RF71** | 14 | 11 |
| 70−24697−01 | **Mechanics Assembly, RF31** | 2 | 11 |
| 70−24697−01 | **Mechanics Assembly, RF31F** | 3 | 10 |
| 70−25972−01 | **Mechanics Assembly, RF72** | 15 | 11 |
| 70−27049−01 | **BEZEL ASSEMBLY, BLANK** | 1 | 9 |
| 70−27049−01 | **BEZEL ASSEMBLY, BLANK** | 30 | 11 |
| 70−27049−01 | **BEZEL ASSEMBLY, DISK DRIVE** | 27 | 1 |
| 70−27049−03 | **BEZEL ASSEMBLY, DISK DRIVE** | 40 | 1 |
| 70−27049−04 | **BEZEL ASSEMBLY, 5 1/4 INCH DISK DRIVE** | 14 | 2 |
| 70−27049−04 | **BEZEL ASSEMBLY, 5 1/4 INCH DISK DRIVE** | 16 | 2 |
| | | | |
| 70−27049−04 | **BEZEL ASSEMBLY, 5 1/4 INCH DSSI DISK DRIVE** | 1 | 6 |
| 70−27049−04 | **BEZEL ASSEMBLY, 5 1/4 INCH DSSI DISK DRIVE** | 15 | 2 |
| 70−27049−04 | **BEZEL ASSEMBLY, 5 1/4 INCH DSSI DISK DRIVE** | 2 | 2 |
| 70−27049−04 | **BEZEL ASSEMBLY, 5 1/4 INCH DSSI DISK DRIVE** | 27 | N/A |
| 70−27049−04 | **BEZEL ASSEMBLY, 5 1/4 INCH DSSI DISK DRIVE** | 3 | 2 |
| 70−27049−04 | **BEZEL ASSEMBLY, DISK DRIVE** | 17 | 2 |
| 70−27049−04 | **Bezel Assembly** | 19 | 2 |
| 70−27049−04 | **Bezel Assembly** | 20 | 2 |
| 70−27049−04 | **Bezel Assembly** | 21 | 2 |
| 70−27049−05 | **BEZEL ASSEMBLY, 5 1/4 INCH DISK DRIVE** | 35 | 2 |
| 70−27049−05 | **BEZEL ASSEMBLY, 5 1/4 INCH DISK DRIVE** | 36 | 2 |
| 70−27049−05 | **BEZEL ASSEMBLY, DISK DRIVE** | 30 | 8 |
| | | | |
| 70−27049−05 | **BEZEL ASSEMBLY, DISK DRIVE** | 31 | 2 |
| 70−27049−05 | **BEZEL ASSEMBLY, DISK DRIVE** | 32 | 2 |
| 70−27049−05 | **BEZEL ASSEMBLY, DISK DRIVE** | 33 | 2 |
| 70−27049−05 | **BEZEL ASSEMBLY, DISK DRIVE** | 40 | N/A |
| 70−27050−01 | **BEZEL ASSEMBLY, TAPE DRIVE** | 29 | 1 |
| 70−27050−02 | **BEZEL ASSEMBLY, TAPE DRIVE** | 42 | 1 |
| 70−27050−02 | **BEZEL ASSEMBLY, TAPE DRIVE** | 43 | 2 |
| 70−27050−02 | **BEZEL ASSEMBLY, TAPE DRIVE** | 45 | 2 |
| 70−27050−02 | **BEZEL ASSEMBLY, TAPE DRIVE** | 47 | N/A |
| 70−27050−03 | **BEZEL ASSEMBLY, TAPE DRIVE** | 1 | 8 |
| 70−27050−03 | **BEZEL ASSEMBLY, TAPE DRIVE** | 23 | 2 |
| 70−27050−03 | **BEZEL ASSEMBLY, TAPE DRIVE** | 25 | 2 |
| 70−27050−03 | **BEZEL ASSEMBLY, TAPE DRIVE** | 29 | N/A |

| PART NO. | DESCRIPTION | FIG NO. | ITEM NO. |
|---|---|---|---|
| 70−29475−01 | **MOUNTING ASSEMBLY, RF35 ISE** | 8 | 1 |
| 70−29475−02 | **MOUNTING ASSEMBLY, RF35 ISE DUAL** | 10 | N/A |
| 70−29475−02 | **MOUNTING ASSEMBLY, RF35 ISE DUAL** | 9 | 1 |
| 70−29475−03 | **MOUNTING ASSEMBLY, RF31T ISE** | 5 | 1 |
| 70−29475−03 | **MOUNTING ASSEMBLY, RF31T ISE** | 7 | N/A |
| 70−29475−04 | **MOUNTING ASSEMBLY, RF312 ISE DUAL** | 7 | N/A |
| 70−29475−04 | **MOUNTING ASSEMBLY, RF35 ISE DUAL** | 6 | 1 |
| 70−29475−05 | **MOUNTING ASSEMBLY, RF36 ISE** | 11 | 1 |
| 70−29475−05 | **MOUNTING ASSEMBLY, RF36 ISE (added)** | 13 | N/A |
| 70−29475−06 | **MOUNTING ASSEMBLY, RF36 ISE DUAL** | 12 | 1 |
| 70−29475−06 | **MOUNTING ASSEMBLY, RF36 ISE DUAL (added)** | 13 | N/A |
| 70−29476−01 | **Bracket Assembly, Bottom Drive** | 10 | 11 |
| 70−29476−01 | **Bracket Assembly, Bottom Drive** | 13 | 11 |
| 70−29476−01 | **Bracket Assembly, Bottom Drive** | 7 | 11 |
| 70−29478−01 | **BEZEL ASSEMBLY, 3 1/2 INCH DSSI DISK DRIVE** | 28 | N/A |
| 70−29478−02 | **BEZEL ASSEMBLY, 3 1/2 INCH DSSI DISK DRIVE** | 1 | 6 |
| 70−29478−02 | **BEZEL ASSEMBLY, 3 1/2 INCH DSSI DISK DRIVE** | 11 | 2 |
| 70−29478−02 | **BEZEL ASSEMBLY, 3 1/2 INCH DSSI DISK DRIVE** | 12 | 2 |
| 70−29478−02 | **BEZEL ASSEMBLY, 3 1/2 INCH DSSI DISK DRIVE** | 5 | 2 |
| 70−29478−02 | **BEZEL ASSEMBLY, 3 1/2 INCH DSSI DISK DRIVE** | 6 | 2 |
| 70−29478−02 | **BEZEL ASSEMBLY, 3 1/2 INCH DSSI DISK DRIVE** | 8 | 2 |
| 70−29478−02 | **BEZEL ASSEMBLY, 3 1/2 INCH DSSI DISK DRIVE** | 9 | 2 |
| 70−29868−01 | **Disk Drive Assembly, SSD, 100 MB w/Data Retention** | 19 | 1 |
| 70−29868−01 | **Disk Drive Assembly, SSD, 100 MB w/Data Retention** | 22 | 1 |
| 70−29868−03 | **Disk Drive Assembly, SSD, 200 MB w/Data Retention** | 20 | 1 |
| 70−29868−03 | **Disk Drive Assembly, SSD, 200 MB w/Data Retention** | 22 | 1 |
| 70−29869−01 | **Disk Drive Assembly, SSD, 250 MB** | 21 | 1 |
| 70−29869−01 | **Disk Drive Assembly, SSD, 250 MB** | 22 | 1 |
| 70−30268−01 | **Bracket Assembly, Top Drive** | 22 | 2 |
| 70−30269−01 | **Bracket Assembly, Bottom Drive** | 22 | 3 |
| 74−25652−02 | **Plate, Skid** | 19 | 8 |
| 74−25652−02 | **Plate, Skid** | 20 | 8 |
| 74−25652−02 | **Plate, Skid** | 21 | 8 |
| 74−33507−01 | **Panel, Blank Dual** | 42 | 11 |
| 74−33507−01 | **Panel, Blank Dual** | 42 | 5 |
| 74−38828−01 | **Bracket Assembly, Top Drive** | 18 | 4 |
| 74−38828−01 | **Bracket, Top SCSI** | 37 | 3 |
| 74−38830−01 | **Bracket, Paddle Board** | 18 | 5 |
| 74−38830−01 | **Bracket, Paddle Board** | 22 | 5 |
| 74−38830−01 | **Bracket, Paddle Board** | 24 | 4 |
| 74−38830−01 | **Bracket, Paddle Board** | 26 | 4 |
| 74−38830−01 | **Bracket, Paddle Board** | 34 | 4 |
| 74−38830−01 | **Bracket, Paddle Board** | 37 | 4 |
| 74−38830−01 | **Bracket, Paddle Board** | 39 | 4 |
| 74−38830−01 | **Bracket, Paddle Board** | 4 | 4 |
| 74−38830−01 | **Bracket, Paddle Board** | 44 | 4 |
| 74−38830−01 | **Bracket, Paddle Board** | 46 | 4 |
| 74−38830−01 | **Bracket, Paddle Module** | 10 | 14 |
| 74−38830−01 | **Bracket, Paddle Module** | 13 | 14 |
| 74−38830−01 | **Bracket, Paddle Module** | 7 | 14 |
| 74−39272−01 | **Bezel, RF71 Drive** | 27 | 2 |
| 74−39272−03 | **Bezel,  Drive** | 40 | 2 |
| 74−39273−01 | **Bezel, Tape Drive** | 29 | 2 |
| 74−39273−01 | **Bezel, Tape Drive** | 47 | 1 |

| PART NO. | DESCRIPTION | FIG NO. | ITEM NO. |
|---|---|---|---|
| 74−40846−01 | **Bracket Assembly, Top Drive** | 4 | 3 |
| 74−41144−01 | **Bracket, Top SCSI** | 34 | 3 |
| 74−41159−01 | **Bezel, Wide Window** | 41 | 2 |
| 74−44231−01 | **Bracket Assembly, Top Drive** | 10 | 1 |
| 74−44231−01 | **Bracket Assembly, Top Drive** | 13 | 1 |
| 74−44231−01 | **Bracket Assembly, Top Drive** | 7 | 1 |
| 74−44233−01 | **Plate, Top Bracket Adapter** | 10 | 4 |
| 74−44233−01 | **Plate, Top Bracket Adapter** | 13 | 4 |
| 74−44233−01 | **Plate, Top Bracket Adapter** | 7 | 4 |
| 74−44234−01 | **Plate, Bottom Bracket Adapter** | 10 | 10 |
| 74−44234−01 | **Plate, Bottom Bracket Adapter** | 13 | 10 |
| 74−44234−01 | **Plate, Bottom Bracket Adapter** | 7 | 10 |
| 74−44325−01 | **Bezel, Blank** | 28 | 1 |
| | | | |
| 90−06011−01 | **Screw, Mach Phl Pan Hd No. 4−40 x 3/8** | 35 | 7 |
| 90−06011−01 | **Screw, Machine Phl Pan Hd No. 4−40 x 3/8** | 14 | 10 |
| 90−06011−01 | **Screw, Machine Phl Pan Hd No. 4−40 x 3/8** | 15 | 10 |
| 90−06011−01 | **Screw, Machine Phl Pan Hd No. 4−40 x 3/8** | 16 | 10 |
| 90−06011−01 | **Screw, Machine Phl Pan Hd No. 4−40 x 3/8** | 2 | 10 |
| 90−06011−01 | **Screw, Machine Phl Pan Hd No. 4−40 x 3/8** | 3 | 9 |
| 90−06020−01 | **Screw, Mach Pan Hd No. 6−32 x 1/4** | 19 | 9 |
| 90−06020−01 | **Screw, Mach Pan Hd No. 6−32 x 1/4** | 20 | 9 |
| 90−06020−01 | **Screw, Mach Pan Hd No. 6−32 x 1/4** | 21 | 9 |
| 90−06021−01 | **Screw, Machine Phl Pan Hd No. 6−32 x 5/16** | 41 | 5 |
| 90−06021−01 | **Screw, Phl Pan Hd No. 6−32 x 5/16** | 27 | 5 |
| 90−06021−01 | **Screw, Phl Pan Hd No. 6−32 x 5/16** | 29 | 5 |
| | | | |
| 90−06021−01 | **Screw, Phl Pan Hd No. 6−32 x 5/16** | 40 | 5 |
| 90−06021−01 | **Screw, Phl Pan Hd No. 6−32 x 5/16** | 47 | 4 |
| 90−06024−02 | **Screw, Machine Phl Pan Hd No. 6−32 x 1/2 (deleted)** | 18 | 8 |
| 90−06024−02 | **Screw, Machine Phl Pan Hd No. 6−32 x 1/2 (deleted)** | 4 | 7 |
| 90−06025−02 | **Screw, Mach Flat Hd No. 6−32 x 5/8** | 22 | 9 |
| 90−06025−02 | **Screw, Machine Flat Hd No. 6−32 x 5/8** | 10 | 6 |
| 90−06025−02 | **Screw, Machine Flat Hd No. 6−32 x 5/8** | 13 | 6 |
| 90−06025−02 | **Screw, Machine Flat Hd No. 6−32 x 5/8** | 24 | 7 |
| 90−06025−02 | **Screw, Machine Flat Hd No. 6−32 x 5/8** | 26 | 7 |
| 90−06025−02 | **Screw, Machine Flat Hd No. 6−32 x 5/8** | 44 | 7 |
| 90−06025−02 | **Screw, Machine Flat Hd No. 6−32 x 5/8** | 46 | 7 |
| 90−06025−02 | **Screw, Machine Flat Hd No. 6−32 x 5/8** | 7 | 6 |
| | | | |
| 90−06025−02 | **Screw, Machine Flat Hd No. 6−32 x 5/8 (deleted)** | 18 | 9 |
| 90−06025−02 | **Screw, Machine Flat Hd No. 6−32 x 5/8 (deleted)** | 4 | 8 |
| 90−09315−01 | **Screw, Phl Pan Hd No. 4−40 x 1/4** | 10 | 12 |
| 90−09315−01 | **Screw, Phl Pan Hd No. 4−40 x 1/4** | 13 | 12 |
| 90−09315−01 | **Screw, Phl Pan Hd No. 4−40 x 1/4** | 18 | 10 |
| 90−09315−01 | **Screw, Phl Pan Hd No. 4−40 x 1/4** | 22 | 10 |
| 90−09315−01 | **Screw, Phl Pan Hd No. 4−40 x 1/4** | 24 | 8 |
| 90−09315−01 | **Screw, Phl Pan Hd No. 4−40 x 1/4** | 26 | 8 |
| 90−09315−01 | **Screw, Phl Pan Hd No. 4−40 x 1/4** | 34 | 8 |
| 90−09315−01 | **Screw, Phl Pan Hd No. 4−40 x 1/4** | 37 | 8 |
| 90−09315−01 | **Screw, Phl Pan Hd No. 4−40 x 1/4** | 39 | 8 |
| 90−09315−01 | **Screw, Phl Pan Hd No. 4−40 x 1/4** | 4 | 9 |
| | | | |
| 90−09315−01 | **Screw, Phl Pan Hd No. 4−40 x 1/4** | 44 | 8 |
| 90−09315−01 | **Screw, Phl Pan Hd No. 4−40 x 1/4** | 46 | 8 |
| 90−09315−01 | **Screw, Phl Pan Hd No. 4−40 x 1/4** | 7 | 12 |
| 90−10174−00 | **Screw, Sems Phl Hd No. 6−32 x 1/4** | 10 | 8 |
| 90−10174−00 | **Screw, Sems Phl Hd No. 6−32 x 1/4** | 13 | 8 |

| PART NO. | DESCRIPTION | FIG NO. | ITEM NO. |
|---|---|---|---|
| RF352−AF | RF352 DISK DRIVE ASSEMBLY | 1 | 5 |
| RF35E−AA | RF35E DISK DRIVE ASSEMBLY | 1 | 5 |
| RF35E−AF | RF35E DISK DRIVE ASSEMBLY | 1 | 5 |
| RF36−EA | Storage Element, RF36E | 13 | 9 |
| RF362−AA | RF362 DISK DRIVE ASSEMBLY | 1 | 5 |
| RF362−AF | RF362 DISK DRIVE ASSEMBLY | 1 | 5 |
| RF36E−AA | RF36E DISK DRIVE ASSEMBLY | 1 | 5 |
| RF36E−AF | RF36E DISK DRIVE ASSEMBLY | 1 | 5 |
| RF71−EA | Disk Drive Assembly (RF71) | 18 | 1 |
| RF71E−AA | RF71E DISK DRIVE ASSEMBLY | 1 | 5 |
| RF71E−AF | RF71E DISK DRIVE ASSEMBLY | 1 | 5 |
| RF72−EA | Disk Drive Assembly (RF72) | 18 | 1 |
| | | | |
| RF72E−AA | RF72E DISK DRIVE ASSEMBLY | 1 | 5 |
| RF72E−AF | RF72E DISK DRIVE ASSEMBLY | 1 | 5 |
| RF73−EA | Disk Drive Assembly (RF73) (added) | 18 | 1 |
| RF73E−AA | RF73E DISK DRIVE ASSEMBLY | 1 | 5 |
| RF73E−AF | RF73E DISK DRIVE ASSEMBLY | 1 | 5 |
| RF74−EA | Disk Drive Assembly (RF74) (added) | 18 | 1 |
| RF74E−AA | RF74E DISK DRIVE ASSEMBLY | 1 | 5 |
| RF74E−AF | RF74E DISK DRIVE ASSEMBLY | 1 | 5 |
| RZ56−E | Disk Drive Assembly | 34 | 1 |
| RZ56E−AA | RZ56E DISK DRIVE ASSEMBLY | 30 | 7 |
| RZ56E−AF | RZ56E DISK DRIVE ASSEMBLY | 30 | 7 |
| RZ57−E | Disk Drive Assembly | 34 | 1 |
| | | | |
| RZ57E−AA | RZ57E DISK DRIVE ASSEMBLY | 30 | 7 |
| RZ57E−AF | RZ57E DISK DRIVE ASSEMBLY | 30 | 7 |
| RZ58−E | Disk Drive Assembly (added) | 34 | 1 |
| RZ58E−AA | RZ58E DISK DRIVE ASSEMBLY | 30 | 7 |
| RZ58E−AF | RZ58E DISK DRIVE ASSEMBLY | 30 | 7 |
| RZ73−E | Disk Drive Assembly | 37 | 1 |
| RZ73E | RZ73 DISK DRIVE ASSEMBLY | 30 | 7 |
| RZ73E | STORAGE ELEMENT, RZ73E | 35 | N/A |
| RZ74−E | Disk Drive Assembly | 37 | 1 |
| RZ74E | RZ74 DISK DRIVE ASSEMBLY | 30 | 7 |
| RZ74E | STORAGE ELEMENT, RZ74E | 36 | N/A |
| | | | |
| TF85−BA | Tape Drive Assembly | 24 | 1 |
| TF85E−JA | TF85E TAPE DRIVE ASSEMBLY | 1 | 7 |
| TF85E−JF | TF85E TAPE DRIVE ASSEMBLY | 1 | 7 |
| TF86−BA | Tape Drive Assembly | 26 | 1 |
| TF86E−JA | TF86E TAPE DRIVE ASSEMBLY | 1 | 7 |
| TF86E−JF | TF86E TAPE DRIVE ASSEMBLY | 1 | 7 |
| TK50−EA | Tape Drive Assembly | 44 | 1 |
| TK50E−AA | TK50E Tape Drive Assembly | 42 | 14 |
| TK50E−AF | TK50E Tape Drive Assembly | 42 | 14 |
| TK70−EA | Tape Drive Assembly | 46 | 1 |
| TK70E−AA | TK70E Tape Drive Assembly | 42 | 14 |
| TK70E−AF | TK70E Tape Drive Assembly | 42 | 14 |
| | | | |
| TK85−BX | Mechanics Assembly, TF85 | 23 | 8 |
| TK86−BX | Mechanics Assembly, TF86 | 25 | 8 |
| TLZ04−AA | Tape Drive Assembly | 39 | 1 |
| TLZ04−JA | TLZ04 TAPE DRIVE ASSEMBLY | 30 | 9 |
| TLZ04−JF | TLZ04 TAPE DRIVE ASSEMBLY | 30 | 9 |
| TQK50−SA | KIT, Q−bus CONTROLLER | 42 | 8 |
| TQK70−SA | KIT, Q−bus CONTROLLER | 42 | 2 |

| PART NO. | DESCRIPTION | FIG NO. | ITEM NO. |
|----------|-------------|---------|----------|

THIS PAGE INTENTIONALLY LEFT BLANK

| DESCRIPTION | PART NO. | FIG. NO. | ITEM NO. |
|---|---|---|---|
| Battery Pack | 12−19245−01 | 22 | 6 |
| Bezel Assembly | 70−27049−04 | 19 | 2 |
| Bezel Assembly | 70−27049−04 | 20 | 2 |
| Bezel Assembly | 70−27049−04 | 21 | 2 |
| BEZEL ASSEMBLY, 3 1/2 INCH DSSI DISK DRIVE | 70−29478−01 | 28 | N/A |
| BEZEL ASSEMBLY, 3 1/2 INCH DSSI DISK DRIVE | 70−29478−02 | 1 | 6 |
| BEZEL ASSEMBLY, 3 1/2 INCH DSSI DISK DRIVE | 70−29478−02 | 11 | 2 |
| BEZEL ASSEMBLY, 3 1/2 INCH DSSI DISK DRIVE | 70−29478−02 | 12 | 2 |
| BEZEL ASSEMBLY, 3 1/2 INCH DSSI DISK DRIVE | 70−29478−02 | 5 | 2 |
| BEZEL ASSEMBLY, 3 1/2 INCH DSSI DISK DRIVE | 70−29478−02 | 6 | 2 |
| BEZEL ASSEMBLY, 3 1/2 INCH DSSI DISK DRIVE | 70−29478−02 | 8 | 2 |
| BEZEL ASSEMBLY, 3 1/2 INCH DSSI DISK DRIVE | 70−29478−02 | 9 | 2 |
| BEZEL ASSEMBLY, 5 1/4 INCH DISK DRIVE | 70−27049−04 | 14 | 2 |
| BEZEL ASSEMBLY, 5 1/4 INCH DISK DRIVE | 70−27049−04 | 16 | 2 |
| BEZEL ASSEMBLY, 5 1/4 INCH DISK DRIVE | 70−27049−05 | 35 | 2 |
| BEZEL ASSEMBLY, 5 1/4 INCH DISK DRIVE | 70−27049−05 | 36 | 2 |
| BEZEL ASSEMBLY, 5 1/4 INCH DSSI DISK DRIVE | 70−27049−04 | 1 | 6 |
| BEZEL ASSEMBLY, 5 1/4 INCH DSSI DISK DRIVE | 70−27049−04 | 15 | 2 |
| BEZEL ASSEMBLY, 5 1/4 INCH DSSI DISK DRIVE | 70−27049−04 | 2 | 2 |
| BEZEL ASSEMBLY, 5 1/4 INCH DSSI DISK DRIVE | 70−27049−04 | 27 | N/A |
| BEZEL ASSEMBLY, 5 1/4 INCH DSSI DISK DRIVE | 70−27049−04 | 3 | 2 |
| BEZEL ASSEMBLY, BLANK | 70−27049−01 | 1 | 9 |
| BEZEL ASSEMBLY, BLANK | 70−27049−01 | 30 | 11 |
| BEZEL ASSEMBLY, DISK DRIVE | 70−27049−0 | 32 | 3 |
| BEZEL ASSEMBLY, DISK DRIVE | 70−27049−01 | 27 | 1 |
| BEZEL ASSEMBLY, DISK DRIVE | 70−27049−03 | 40 | 1 |
| BEZEL ASSEMBLY, DISK DRIVE | 70−27049−04 | 17 | 2 |
| BEZEL ASSEMBLY, DISK DRIVE | 70−27049−05 | 30 | 8 |
| BEZEL ASSEMBLY, DISK DRIVE | 70−27049−05 | 31 | 2 |
| BEZEL ASSEMBLY, DISK DRIVE | 70−27049−05 | 33 | 2 |
| BEZEL ASSEMBLY, DISK DRIVE | 70−27049−05 | 40 | N/A |
| Bezel Assembly, Filler | 70−27414−01 | 1 | 2 |
| Bezel Assembly, Filler | 70−27414−01 | 30 | 2 |
| BEZEL ASSEMBLY, TAPE DRIVE | 70−27050−01 | 29 | 1 |
| BEZEL ASSEMBLY, TAPE DRIVE | 70−27050−02 | 42 | 1 |
| BEZEL ASSEMBLY, TAPE DRIVE | 70−27050−02 | 43 | 2 |
| BEZEL ASSEMBLY, TAPE DRIVE | 70−27050−02 | 45 | 2 |
| BEZEL ASSEMBLY, TAPE DRIVE | 70−27050−02 | 47 | N/A |
| BEZEL ASSEMBLY, TAPE DRIVE | 70−27050−03 | 1 | 8 |
| BEZEL ASSEMBLY, TAPE DRIVE | 70−27050−03 | 23 | 2 |
| BEZEL ASSEMBLY, TAPE DRIVE | 70−27050−03 | 25 | 2 |
| BEZEL ASSEMBLY, TAPE DRIVE | 70−27050−03 | 29 | N/A |
| BEZEL ASSEMBLY, TAPE DRIVE (Wide Window) | 70−28081−03 | 30 | 10 |
| BEZEL ASSEMBLY, WIDE WINDOW | 70−28081−03 | 38 | 2 |
| BEZEL ASSEMBLY, WIDE WINDOW | 70−28081−03 | 41 | N/A |
| Bezel Assembly, Wide Window | 70−28081−01 | 41 | 1 |
| Bezel, Blank | 74−44325−01 | 28 | 1 |
| Bezel,  Drive | 74−39272−03 | 40 | 2 |
| Bezel, RF71 Drive | 74−39272−01 | 27 | 2 |
| Bezel, Tape Drive | 74−39273−01 | 29 | 2 |
| Bezel, Tape Drive | 74−39273−01 | 47 | 1 |
| Bezel, Wide Window | 74−41159−01 | 41 | 2 |
| Bracket Assembly, Bottom | 70−28078−01 | 39 | 2 |
| Bracket Assembly, Bottom Drive | 70−27412−01 | 18 | 3 |

| DESCRIPTION | PART NO. | FIG. NO. | ITEM NO. |
|---|---|---|---|
| **Bracket Assembly, Bottom Drive** | 70−27412−01 | 37 | 2 |
| **Bracket Assembly, Bottom Drive** | 70−27469−0 | 4 | 2 |
| **Bracket Assembly, Bottom Drive** | 70−28076−01 | 34 | 2 |
| **Bracket Assembly, Bottom Drive** | 70−29476−01 | 10 | 11 |
| **Bracket Assembly, Bottom Drive** | 70−29476−01 | 13 | 11 |
| **Bracket Assembly, Bottom Drive** | 70−29476−01 | 7 | 11 |
| **Bracket Assembly, Bottom Drive** | 70−30269−01 | 22 | 3 |
| **Bracket Assembly, Bottom Tape Drive** | 70−27413−01 | 24 | 2 |
| **Bracket Assembly, Bottom Tape Drive** | 70−27413−01 | 26 | 2 |
| **Bracket Assembly, Bottom Tape Drive** | 70−27413−01 | 44 | 2 |
| **Bracket Assembly, Bottom Tape Drive** | 70−27413−01 | 46 | 2 |
| **Bracket Assembly, Top Drive** | 70−30268−01 | 22 | 2 |
| **Bracket Assembly, Top Drive** | 74−38828−01 | 18 | 4 |
| **Bracket Assembly, Top Drive** | 74−40846−01 | 4 | 3 |
| **Bracket Assembly, Top Drive** | 74−44231−01 | 10 | 1 |
| **Bracket Assembly, Top Drive** | 74−44231−01 | 13 | 1 |
| **Bracket Assembly, Top Drive** | 74−44231−01 | 7 | 1 |
| **Bracket Assembly, Top Tape Drive** | 70−27457−01 | 24 | 3 |
| **Bracket Assembly, Top Tape Drive** | 70−27457−01 | 26 | 3 |
| **Bracket Assembly, Top Tape Drive** | 70−27457−01 | 44 | 3 |
| **Bracket Assembly, Top Tape Drive** | 70−27457−01 | 46 | 3 |
| **Bracket, Paddle Board** | 74−38830−01 | 18 | 5 |
| **Bracket, Paddle Board** | 74−38830−01 | 22 | 5 |
| **Bracket, Paddle Board** | 74−38830−01 | 24 | 4 |
| **Bracket, Paddle Board** | 74−38830−01 | 26 | 4 |
| **Bracket, Paddle Board** | 74−38830−01 | 34 | 4 |
| **Bracket, Paddle Board** | 74−38830−01 | 37 | 4 |
| **Bracket, Paddle Board** | 74−38830−01 | 39 | 4 |
| **Bracket, Paddle Board** | 74−38830−01 | 4 | 4 |
| **Bracket, Paddle Board** | 74−38830−01 | 44 | 4 |
| **Bracket, Paddle Board** | 74−38830−01 | 46 | 4 |
| **Bracket, Paddle Module** | 74−38830−01 | 10 | 14 |
| **Bracket, Paddle Module** | 74−38830−01 | 13 | 14 |
| **Bracket, Paddle Module** | 74−38830−01 | 7 | 14 |
| **Bracket, Top** | 70−28077−01 | 39 | 3 |
| **Bracket, Top SCSI** | 74−38828−01 | 37 | 3 |
| **Bracket, Top SCSI** | 74−41144−01 | 34 | 3 |
| **Cable Assembly** | 17−01363−01 | 42 | 10 |
| **Cable Assembly** | 17−01363−01 | 42 | 4 |
| **Cable Assembly, 06 Cond.** | 17−03498−01 | 37 | 9 |
| **Cable Assembly, 10 Cond** | 17−02706−01 | 18 | 11 |
| **Cable Assembly, 10 Cond** | 17−02706−01 | 22 | 7 |
| **Cable Assembly, 10 Cond** | 17−02706−01 | 4 | 10 |
| **Cable Assembly, 10 Cond.** | 17−01936−02 | 39 | 9 |
| **Cable Assembly, 10 Cond.** | 17−02887−01 | 34 | 9 |
| **Cable Assembly, 50 Cond Molded Micro−D (BC21M−09)** | 17−02152−03 | 1 | 3 |
| **Cable Assembly, 50 Cond, Molded, Shielded** | 17−02659−03 | 30 | 5 |
| **Cable Assembly, Internal DSSI** | 70−27458−01 | 1 | 1 |
| **Cable Assembly, Internal SCSI** | 70−27459−01 | 30 | 1 |
| **Cable Assembly, RFP 7 in. Female Flat** | 17−03428−01 | 10 | 15 |
| **Cable Assembly, RFP 7 in. Female Flat** | 17−03428−01 | 13 | 15 |
| **Cable Assembly, RFP 7 in. Female Flat** | 17−03428−01 | 7 | 15 |
| **Connector, SCSI Term 50 Pos Champ Hsg** | 12−30552−01 | 30 | 4 |
| **Connector, Terminator** | 12−29258−01 | 1 | 4 |

| DESCRIPTION | PART NO. | FIG. NO. | ITEM NO. |
|---|---|---|---|
| Cover, 50 Pin IDC Connector | 12−33377−01 | 30 | 6 |
| | | | |
| Disk Assembly, RZ56 | 29−27890−01 | 31 | 9 |
| Disk Assembly, RZ57 | 29−28158−01 | 32 | 9 |
| Disk Drive Assembly | RZ56−E | 34 | 1 |
| Disk Drive Assembly | RZ57−E | 34 | 1 |
| Disk Drive Assembly | RZ73−E | 37 | 1 |
| Disk Drive Assembly | RZ74−E | 37 | 1 |
| Disk Drive Assembly (RF71) | RF71−EA | 18 | 1 |
| Disk Drive Assembly (RF72) | RF72−EA | 18 | 1 |
| Disk Drive Assembly (RF73) (added) | RF73−EA | 18 | 1 |
| Disk Drive Assembly (RF74) (added) | RF74−EA | 18 | 1 |
| Disk Drive Assembly (added) | RZ58−E | 34 | 1 |
| Disk Drive Assembly RF31E | RF31E−EA | 4 | 1 |
| | | | |
| Disk Drive Assembly RF31F | RF31F−EA | 4 | 1 |
| Disk Drive Assembly, SSD, 100 MB w/Data Retention | 70−29868−01 | 19 | 1 |
| Disk Drive Assembly, SSD, 100 MB w/Data Retention | 70−29868−01 | 22 | 1 |
| Disk Drive Assembly, SSD, 200 MB w/Data Retention | 70−29868−03 | 20 | 1 |
| Disk Drive Assembly, SSD, 200 MB w/Data Retention | 70−29868−03 | 22 | 1 |
| Disk Drive Assembly, SSD, 250 MB | 70−29869−01 | 21 | 1 |
| Disk Drive Assembly, SSD, 250 MB | 70−29869−01 | 22 | 1 |
| Documentation, "Storage Device Add On Procedure" | EK−BA44A−IN | 31 | 6 |
| Documentation, "EF5XX Series Solid State Disk" | EK−EF5XX−UG | 19 | 6 |
| Documentation, "EF5XX Series Solid State Disk" | EK−EF5XX−UG | 20 | 6 |
| Documentation, "EF5XX Series Solid State Disk" | EK−EF5XX−UG | 21 | 6 |
| Documentation, "Storage Device Add On Procedure | 37−01215−01 | 33 | 4 |
| | | | |
| Documentation, "Storage Device Add On Procedure" | EK−BA44A−IN | 38 | 5 |
| Documentation, "Storage Device Add On Procedure" | EK−BA44A−IN | 11 | 3 |
| Documentation, "Storage Device Add On Procedure" | EK−BA44A−IN | 12 | 3 |
| Documentation, "Storage Device Add On Procedure" | EK−BA44A−IN | 14 | 7 |
| Documentation, "Storage Device Add On Procedure" | EK−BA44A−IN | 15 | 7 |
| Documentation, "Storage Device Add On Procedure" | EK−BA44A−IN | 16 | 6 |
| Documentation, "Storage Device Add On Procedure" | EK−BA44A−IN | 17 | 6 |
| Documentation, "Storage Device Add On Procedure" | EK−BA44A−IN | 19 | 6 |
| Documentation, "Storage Device Add On Procedure" | EK−BA44A−IN | 2 | 7 |
| Documentation, "Storage Device Add On Procedure" | EK−BA44A−IN | 20 | 6 |
| Documentation, "Storage Device Add On Procedure" | EK−BA44A−IN | 21 | 6 |
| Documentation, "Storage Device Add On Procedure" | EK−BA44A−IN | 23 | 5 |
| | | | |
| Documentation, "Storage Device Add On Procedure" | EK−BA44A−IN | 25 | 5 |
| Documentation, "Storage Device Add On Procedure" | EK−BA44A−IN | 3 | 6 |
| Documentation, "Storage Device Add On Procedure" | EK−BA44A−IN | 32 | 6 |
| Documentation, "Storage Device Add On Procedure" | EK−BA44A−IN | 35 | 4 |
| Documentation, "Storage Device Add On Procedure" | EK−BA44A−IN | 36 | 4 |
| Documentation, "Storage Device Add On Procedure" | EK−BA44A−IN | 43 | 3 |
| Documentation, "Storage Device Add On Procedure" | EK−BA44A−IN | 45 | 4 |
| Documentation, "Storage Device Add On Procedure" | EK−BA44A−IN | 5 | 3 |
| Documentation, "Storage Device Add On Procedure" | EK−BA44A−IN | 6 | 3 |
| Documentation, "Storage Device Add On Procedure" | EK−BA44A−IN | 8 | 3 |
| Documentation, "Storage Device Add On Procedure" | EK−BA44A−IN | 9 | 3 |
| | | | |
| EF51R DISK DRIVE ASSEMBLY | EF51R−AA | 1 | 5 |
| EF51R DISK DRIVE ASSEMBLY | EF51R−AF | 1 | 5 |
| EF52R DISK DRIVE ASSEMBLY | EF52R−AA | 1 | 5 |
| EF52R DISK DRIVE ASSEMBLY | EF52R−AF | 1 | 5 |
| EF53 DISK DRIVE ASSEMBLY | EF53−AA | 1 | 5 |

| DESCRIPTION | PART NO. | FIG. NO. | ITEM NO. |
|---|---|---|---|
| **EF53 DISK DRIVE ASSEMBLY** | **EF53−AF** | **1** | **5** |
| **Encoder Set, Lens (DSSI Unit ID Plug)** | **12−28766−19** | **22** | **11** |
| | | | |
| **Ferrule (added)** | **12−32626−03** | **39** | **10** |
| **Finger, Grounding** | **12−26922−01** | **27** | **3** |
| **Finger, Grounding** | **12−26922−01** | **29** | **3** |
| **Finger, Grounding** | **12−26922−01** | **40** | **3** |
| **Finger, Grounding** | **12−26922−01** | **41** | **3** |
| **Finger, Grounding** | **12−26922−01** | **47** | **2** |
| **Finger, Non−Snag Grounding** | **12−26922−01** | **28** | **3** |
| | | | |
| **Isolator, Shock  Grommet (added)** | **12−32626−04** | **18** | **7** |
| **Isolator, Shock (Ferrule)** | **12−32626−03** | **24** | **6** |
| **Isolator, Shock (Ferrule)** | **12−32626−03** | **26** | **6** |
| **Isolator, Shock (Grommet)** | **12−32626−04** | **24** | **6A** |
| **Isolator, Shock (Grommet)** | **12−32626−04** | **26** | **6A** |
| **Isolator, Shock (deleted)** | **12−32626−01** | **18** | **7** |
| **Isolator, Shock (deleted)** | **12−32626−01** | **39** | **6** |
| **Isolator, Shock (deleted)** | **12−32626−01** | **4** | **6** |
| **Isolator, Shock (deleted)** | **12−32626−01** | **44** | **6** |
| **Isolator, Shock (deleted)** | **12−32626−01** | **46** | **6** |
| **Isolator, Shock Ferrule** | **12−32626−03** | **10** | **7** |
| **Isolator, Shock Ferrule** | **12−32626−03** | **13** | **7** |
| **Isolator, Shock Ferrule** | **12−32626−03** | **7** | **7** |
| | | | |
| **Isolator, Shock Ferrule (added)** | **12−32626−03** | **44** | **6** |
| **Isolator, Shock Ferrule Only (added)** | **12−32626−03** | **46** | **6** |
| **Isolator, Shock Grommet** | **12−32626−04** | **10** | **5** |
| **Isolator, Shock Grommet** | **12−32626−04** | **13** | **5** |
| **Isolator, Shock Grommet** | **12−32626−04** | **34** | **6** |
| **Isolator, Shock Grommet** | **12−32626−04** | **37** | **6** |
| **Isolator, Shock Grommet** | **12−32626−04** | **7** | **5** |
| **Isolator, Shock Grommet (added)** | **12−32626−04** | **39** | **6** |
| **Isolator, Shock Grommet (added)** | **12−32626−04** | **4** | **6** |
| **Isolator, Shock Grommet Only (added)** | **12−32626−04** | **44** | **6** |
| **Isolator, Shock Grommet Only (added)** | **12−32626−04** | **46** | **6** |
| **Isolator, Shock, Ferrule** | **12−32626−03** | **22** | **8** |
| **Isolator, Shock, Grommet** | **12−32626−04** | **22** | **8** |
| | | | |
| **KIT, Q−bus CONTROLLER** | **TQK50−SA** | **42** | **8** |
| **KIT, Q−bus CONTROLLER** | **TQK70−SA** | **42** | **2** |
| | | | |
| **Label, "BAXXX Rev" (Rolled) (Not Shown)** | **36−29163−07** | **42** | **13** |
| **Label, "BAXXX Rev" (Rolled) (Not Shown)** | **36−29163−07** | **42** | **7** |
| **Label, "Bar Code" (Not Shown) (deleted)** | **36−33151−03** | **2** | **4** |
| **Label, "Bar Code, Integrated Storage" (deleted)** | **36−33151−04** | **15** | **4** |
| **Label, "Bar Code, Integrated Storage" (deleted)** | **36−33151−05** | **31** | **4** |
| **Label, "Bar Code, Integrated Storage" (deleted)** | **36−33151−05** | **32** | **4** |
| **Label, "Bar Code, Integrated Storage" (deleted)** | **36−33151−07** | **38** | **3** |
| **Label, "Bar Code, Integrated Storage" (deleted)** | **36−33151−02** | **14** | **4** |
| **Label, "Bar Code, Integrated Storage" (deleted)** | **36−33151−01** | **45** | **3** |
| **Label, "Bus ID Language Variant"** | **36−33181−02** | **38** | **4** |
| **Label, "Bus ID"** | **36−33181−01** | **29** | **6** |
| **Label, "Bus ID"** | **36−33181−01** | **41** | **7** |
| | | | |
| **Label, "Bus ID"** | **36−33183−03** | **27** | **8** |
| **Label, "Bus ID"** | **36−33183−03** | **40** | **7** |
| **Label, "Bus ID" (Language Variant)** | **36−33181−02** | **23** | **4** |

| DESCRIPTION | PART NO. | FIG. NO. | ITEM NO. |
|---|---|---|---|
| Label, "Bus ID" (Language Variant) | 36−33181−02 | 25 | 4 |
| Label, "Drive Control" | 36−33183−01 | 27 | 7 |
| Label, "Drive No. 2 Language Variant" | 36−33183−02 | 14 | 5 |
| Label, "Drive No. 2 Language Variant" | 36−33183−02 | 15 | 5 |
| Label, "Drive No. 2 Language Variant" | 36−33183−02 | 16 | 4 |
| Label, "Drive No. 2 Language Variant" | 36−33183−02 | 17 | 4 |
| Label, "Drive No. 2 Language Variant" | 36−33183−02 | 19 | 4 |
| Label, "Drive No. 2 Language Variant" | 36−33183−02 | 2 | 5 |
| Label, "Drive No. 2 Language Variant" | 36−33183−02 | 20 | 4 |
| Label, "Drive No. 2 Language Variant" | 36−33183−02 | 21 | 4 |
| Label, "Drive No. 2 Language Variant" | 36−33183−02 | 3 | 4 |
| Label, "Module Number" | 36−26883−11 | 42 | 12 |
| Label, "Module Number" | 36−26883−45 | 42 | 6 |
|  |  |  |  |
| Label, "No. 2 Language Variant" | 36−33183−04 | 14 | 6 |
| Label, "No. 2 Language Variant" | 36−33183−04 | 15 | 6 |
| Label, "No. 2 Language Variant" | 36−33183−04 | 16 | 5 |
| Label, "No. 2 Language Variant" | 36−33183−04 | 17 | 5 |
| Label, "No. 2 Language Variant" | 36−33183−04 | 19 | 5 |
| Label, "No. 2 Language Variant" | 36−33183−04 | 2 | 6 |
| Label, "No. 2 Language Variant" | 36−33183−04 | 20 | 5 |
| Label, "No. 2 Language Variant" | 36−33183−04 | 21 | 5 |
| Label, "No. 2 Language Variant" | 36−33183−04 | 3 | 5 |
| Label, "No. 2 Language Variant" | 36−33183−04 | 31 | 5 |
| Label, "No. 2 Language Variant" | 36−33183−04 | 32 | 5 |
| Label, "No. 2 Language Variant" | 36−33183−04 | 33 | 3 |
|  |  |  |  |
| Label, "No. 2 Language Variant" | 36−33183−04 | 35 | 3 |
| Label, "No. 2 Language Variant" | 36−33183−04 | 36 | 3 |
| Label, "Switch  Marker" | 36−18940−02 | 19 | 3 |
| Label, "Switch Marker" | 36−18940−02 | 14 | 3 |
| Label, "Switch Marker" | 36−18940−02 | 15 | 3 |
| Label, "Switch Marker" | 36−18940−02 | 16 | 3 |
| Label, "Switch Marker" | 36−18940−02 | 17 | 3 |
| Label, "Switch Marker" | 36−18940−02 | 20 | 3 |
| Label, "Switch Marker" | 36−18940−02 | 21 | 3 |
| Label, "Switch Marker" | 36−18940−02 | 23 | 3 |
| Label, "Switch Marker" | 36−18940−02 | 2 | 3 |
| Label, "Switch Marker" | 36−18940−02 | 3 | 3 |
|  |  |  |  |
| Label, "Switch Marker" | 36−18940−02 | 25 | 3 |
| Label, "Switch Marker" (deleted) | 36−18940−02 | 31 | 3 |
| Label, "Switch Marker" (deleted) | 36−18940−02 | 32 | 3 |
|  |  |  |  |
| Mechanics Assembly, RF31 | 70−24697−01 | 2 | 11 |
| Mechanics Assembly, RF31F | 70−24697−01 | 3 | 10 |
| Mechanics Assembly, RF71 | 70−23557−01 | 14 | 11 |
| Mechanics Assembly, RF72 | 70−25972−01 | 15 | 11 |
| Mechanics Assembly, RF73 | 70−28814−01 | 16 | 11 |
| Mechanics Assembly, TF85 | TK85−BX | 23 | 8 |
| Mechanics Assembly, TF86 | TK86−BX | 25 | 8 |
| Module,  Interface Card | 54−19787−02 | 26 | 5 |
| Module,  Interface Card | 54−20136−02 | 44 | 5 |
| Module, DSSI Front Panel | 54−19791−01 | 27 | 9 |
| Module, DSSI Interface Card | 54−19787−01 | 18 | 6 |
| Module, DSSI Interface Card | 54−19787−01 | 22 | 4 |
| Module, DSSI Interface Card | 54−19787−01 | 4 | 5 |
| Module, DSSI Remote Front Panel | 54−21530−01 | 28 | 2 |

| DESCRIPTION | PART NO. | FIG. NO. | ITEM NO. |
|---|---|---|---|
| Module, Device ID Panel | 54−20336−01 | 29 | 7 |
| Module, Interface Card | 54−19787−02 | 24 | 5 |
| Module, Interface Card | 54−20136−02 | 46 | 5 |
| Module, KZQSA | KZQSA−SA | 30 | 3 |
| Module, Paddle | 54−19787−03 | 10 | 3 |
| Module, Paddle | 54−19787−03 | 13 | 3 |
| Module, Paddle | 54−19787−03 | 7 | 3 |
| Module, RDAT ID | 54−20438−01 | 41 | 6 |
| Module, RF31 Drive | 54−18329−01 | 2 | 9 |
| Module, RF31F Drive | 54−18329−02 | 3 | 8 |
| Module, RF71  Drive | 54−18316−XX | 14 | 9 |
| Module, RF72 Drive | 54−10091−XX | 15 | 9 |
| Module, RF73 Drive | 54−19119−XX | 16 | 9 |
| Module, RZ56 Drive | 29−27889−01 | 31 | 8 |
| Module, RZ57 Drive | 29−28159−01 | 32 | 8 |
| Module, RZ73 Drive | 54−19110−XX | 35 | 6 |
| Module, SCSI Device ID Panel | 54−20400−01 | 40 | 8 |
| Module, SCSI Interface Card | 54−20136−01 | 34 | 5 |
| Module, SCSI Interface Card | 54−20136−01 | 37 | 5 |
| Module, SCSI Interface Card | 54−20136−03 | 39 | 5 |
| Module, Tape Controller | M7546−00 | 42 | 9 |
| Module, Tape Controller | M7559−00 | 42 | 3 |
| Module, TF85 | 54−19089−01 | 23 | 7 |
| Module, TF85/TF86 | 54−19089−01 | 25 | 7 |
| MOUNTING ASSEMBLY, EF51R/EF52R/EF53 ISE | N/A | 22 | N/A |
| MOUNTING ASSEMBLY, RF312 ISE DUAL | 70−29475−04 | 7 | N/A |
| MOUNTING ASSEMBLY, RF31E ISE | 70−28086−01 | 2 | 1 |
| MOUNTING ASSEMBLY, RF31E ISE | 70−28086−01 | 4 | N/A |
| MOUNTING ASSEMBLY, RF31F ISE | 70−28086−02 | 3 | 1 |
| MOUNTING ASSEMBLY, RF31F ISE | 70−28086−02 | 4 | N/A |
| MOUNTING ASSEMBLY, RF31T ISE | 70−29475−03 | 5 | 1 |
| MOUNTING ASSEMBLY, RF31T ISE | 70−29475−03 | 7 | N/A |
| MOUNTING ASSEMBLY, RF35 ISE | 70−29475−01 | 10 | N/A |
| MOUNTING ASSEMBLY, RF35 ISE | 70−29475−01 | 8 | 1 |
| MOUNTING ASSEMBLY, RF35 ISE DUAL | 70−29475−02 | 10 | N/A |
| MOUNTING ASSEMBLY, RF35 ISE DUAL | 70−29475−02 | 9 | 1 |
| MOUNTING ASSEMBLY, RF35 ISE DUAL | 70−29475−04 | 6 | 1 |
| MOUNTING ASSEMBLY, RF36 ISE | 70−29475−05 | 11 | 1 |
| MOUNTING ASSEMBLY, RF36 ISE (added) | 70−29475−05 | 13 | N/A |
| MOUNTING ASSEMBLY, RF36 ISE DUAL | 70−29475−06 | 12 | 1 |
| MOUNTING ASSEMBLY, RF36 ISE DUAL (added) | 70−29475−06 | 13 | N/A |
| MOUNTING ASSEMBLY, RF71 ISE | 70−28087−01 | 14 | 1 |
| MOUNTING ASSEMBLY, RF71 ISE | 70−28087−01 | 18 | N/A |
| MOUNTING ASSEMBLY, RF72 ISE | 70−28087−02 | 15 | 1 |
| MOUNTING ASSEMBLY, RF72 ISE | 70−28087−02 | 18 | N/A |
| MOUNTING ASSEMBLY, RF73 ISE | 70−28087−03 | 16 | 1 |
| MOUNTING ASSEMBLY, RF73 ISE (added) | 70−28087−03 | 18 | N/A |
| MOUNTING ASSEMBLY, RF74 ISE | 70−28087−05 | 17 | 1 |
| MOUNTING ASSEMBLY, RF74 ISE (added) | 70−28087−05 | 18 | N/A |
| MOUNTING ASSEMBLY, RZ56 ISE | 70−28089−01 | 31 | 1 |
| MOUNTING ASSEMBLY, RZ56 ISE | 70−28089−01 | 34 | N/A |
| MOUNTING ASSEMBLY, RZ57 ISE | 70−28089−02 | 32 | 1 |
| MOUNTING ASSEMBLY, RZ57 ISE | 70−28089−02 | 34 | N/A |
| MOUNTING ASSEMBLY, RZ58 ISE | 70−28089−03 | 33 | 1 |

| DESCRIPTION | PART NO. | FIG. NO. | ITEM NO. |
|---|---|---|---|
| RF312 DISK DRIVE ASSEMBLY | RF312−AA | 1 | 5 |
| RF312 DISK DRIVE ASSEMBLY | RF312−AF | 1 | 5 |
| RF31E DISK DRIVE ASSEMBLY | RF31E−AA | 1 | 5 |
| RF31E DISK DRIVE ASSEMBLY | RF31E−AF | 1 | 5 |
| RF31F DISK DRIVE ASSEMBLY | RF31F−AA | 1 | 5 |
| RF31F DISK DRIVE ASSEMBLY | RF31F−AF | 1 | 5 |
| RF31T DISK DRIVE ASSEMBLY | RF31T−AA | 1 | 5 |
| RF31T DISK DRIVE ASSEMBLY | RF31T−AF | 1 | 5 |
| RF352 DISK DRIVE ASSEMBLY | RF352−AA | 1 | 5 |
| RF352 DISK DRIVE ASSEMBLY | RF352−AF | 1 | 5 |
| RF35E DISK DRIVE ASSEMBLY | RF35E−AA | 1 | 5 |
| RF35E DISK DRIVE ASSEMBLY | RF35E−AF | 1 | 5 |
| | | | |
| RF362 DISK DRIVE ASSEMBLY | RF362−AA | 1 | 5 |
| RF362 DISK DRIVE ASSEMBLY | RF362−AF | 1 | 5 |
| RF36E DISK DRIVE ASSEMBLY | RF36E−AA | 1 | 5 |
| RF36E DISK DRIVE ASSEMBLY | RF36E−AF | 1 | 5 |
| RF71E DISK DRIVE ASSEMBLY | RF71E−AA | 1 | 5 |
| RF71E DISK DRIVE ASSEMBLY | RF71E−AF | 1 | 5 |
| RF72E DISK DRIVE ASSEMBLY | RF72E−AA | 1 | 5 |
| RF72E DISK DRIVE ASSEMBLY | RF72E−AF | 1 | 5 |
| RF73E DISK DRIVE ASSEMBLY | RF73E−AA | 1 | 5 |
| RF73E DISK DRIVE ASSEMBLY | RF73E−AF | 1 | 5 |
| RF74E DISK DRIVE ASSEMBLY | RF74E−AA | 1 | 5 |
| RF74E DISK DRIVE ASSEMBLY | RF74E−AF | 1 | 5 |
| | | | |
| RZ56E DISK DRIVE ASSEMBLY | RZ56E−AA | 30 | 7 |
| RZ56E DISK DRIVE ASSEMBLY | RZ56E−AF | 30 | 7 |
| RZ57E DISK DRIVE ASSEMBLY | RZ57E−AA | 30 | 7 |
| RZ57E DISK DRIVE ASSEMBLY | RZ57E−AF | 30 | 7 |
| RZ58E DISK DRIVE ASSEMBLY | RZ58E−AA | 30 | 7 |
| RZ58E DISK DRIVE ASSEMBLY | RZ58E−AF | 30 | 7 |
| RZ73 DISK DRIVE ASSEMBLY | RZ73E | 30 | 7 |
| RZ74 DISK DRIVE ASSEMBLY | RZ74E | 30 | 7 |
| | | | |
| Screw, Mach Flat Hd No. 6−32 x 5/8 | 90−06025−02 | 22 | 9 |
| Screw, Mach Pan Hd No. 6−32 x 1/4 | 90−06020−01 | 19 | 9 |
| Screw, Mach Pan Hd No. 6−32 x 1/4 | 90−06020−01 | 20 | 9 |
| Screw, Mach Pan Hd No. 6−32 x 1/4 | 90−06020−01 | 21 | 9 |
| Screw, Mach Phl Pan Hd No. 4−40 x 3/8 | 90−06011−01 | 35 | 7 |
| Screw, Machine Flat Hd No. 6−32 x 5/8 | 90−06025−02 | 10 | 6 |
| Screw, Machine Flat Hd No. 6−32 x 5/8 | 90−06025−02 | 13 | 6 |
| Screw, Machine Flat Hd No. 6−32 x 5/8 | 90−06025−02 | 24 | 7 |
| Screw, Machine Flat Hd No. 6−32 x 5/8 | 90−06025−02 | 26 | 7 |
| Screw, Machine Flat Hd No. 6−32 x 5/8 | 90−06025−02 | 44 | 7 |
| Screw, Machine Flat Hd No. 6−32 x 5/8 | 90−06025−02 | 46 | 7 |
| Screw, Machine Flat Hd No. 6−32 x 5/8 | 90−06025−02 | 7 | 6 |
| | | | |
| Screw, Machine Flat Hd No. 6−32 x 5/8 (deleted) | 90−06025−02 | 18 | 9 |
| Screw, Machine Flat Hd No. 6−32 x 5/8 (deleted) | 90−06025−02 | 4 | 8 |
| Screw, Machine No. M−3 14 mm | 90−11163−01 | 39 | 7 |
| Screw, Machine Phl Pan Hd No. 4−40 x 3/8 | 90−06011−01 | 14 | 10 |
| Screw, Machine Phl Pan Hd No. 4−40 x 3/8 | 90−06011−01 | 15 | 10 |
| Screw, Machine Phl Pan Hd No. 4−40 x 3/8 | 90−06011−01 | 16 | 10 |
| Screw, Machine Phl Pan Hd No. 4−40 x 3/8 | 90−06011−01 | 2 | 10 |
| Screw, Machine Phl Pan Hd No. 4−40 x 3/8 | 90−06011−01 | 3 | 9 |
| Screw, Machine Phl Pan Hd No. 6−32 x 1/2 (deleted) | 90−06024−02 | 18 | 8 |
| Screw, Machine Phl Pan Hd No. 6−32 x 1/2 (deleted) | 90−06024−02 | 4 | 7 |

| DESCRIPTION | PART NO. | FIG. NO. | ITEM NO. |
|---|---|---|---|
| Screw, Machine Phl Pan Hd No. 6−32 x 5/16 | 90−06021−01 | 41 | 5 |
| Screw, Phl Pan Hd No. 4−40 x 1/4 | 90−09315−01 | 10 | 12 |
| Screw, Phl Pan Hd No. 4−40 x 1/4 | 90−09315−01 | 13 | 12 |
| Screw, Phl Pan Hd No. 4−40 x 1/4 | 90−09315−01 | 18 | 10 |
| Screw, Phl Pan Hd No. 4−40 x 1/4 | 90−09315−01 | 22 | 10 |
| Screw, Phl Pan Hd No. 4−40 x 1/4 | 90−09315−01 | 24 | 8 |
| Screw, Phl Pan Hd No. 4−40 x 1/4 | 90−09315−01 | 26 | 8 |
| Screw, Phl Pan Hd No. 4−40 x 1/4 | 90−09315−01 | 34 | 8 |
| Screw, Phl Pan Hd No. 4−40 x 1/4 | 90−09315−01 | 37 | 8 |
| Screw, Phl Pan Hd No. 4−40 x 1/4 | 90−09315−01 | 39 | 8 |
| Screw, Phl Pan Hd No. 4−40 x 1/4 | 90−09315−01 | 4 | 9 |
| Screw, Phl Pan Hd No. 4−40 x 1/4 | 90−09315−01 | 44 | 8 |
| Screw, Phl Pan Hd No. 4−40 x 1/4 | 90−09315−01 | 46 | 8 |
| Screw, Phl Pan Hd No. 4−40 x 1/4 | 90−09315−01 | 7 | 12 |
| Screw, Phl Pan Hd No. 6−32 x 5/16 | 90−06021−01 | 27 | 5 |
| Screw, Phl Pan Hd No. 6−32 x 5/16 | 90−06021−01 | 29 | 5 |
| Screw, Phl Pan Hd No. 6−32 x 5/16 | 90−06021−01 | 40 | 5 |
| Screw, Phl Pan Hd No. 6−32 x 5/16 | 90−06021−01 | 47 | 4 |
| Screw, Sems Phl Hd No. 6−32 x 1/4 | 90−10174−00 | 10 | 8 |
| Screw, Sems Phl Hd No. 6−32 x 1/4 | 90−10174−00 | 13 | 8 |
| Screw, Sems Phl Hd No. 6−32 x 1/4 | 90−10174−00 | 7 | 8 |
| Screw, Shoulder Hd No. 6−32 x 1/2 (added) | 12−34462−01 | 18 | 8 |
| Screw, Shoulder Hd No. 6−32 x 1/2 (added) | 12−34462−01 | 18 | 9 |
| Screw, Shoulder No. 6−32 | 12−34462−01 | 37 | 7 |
| Screw, Shoulder No. 6−32 | 12−34462−02 | 34 | 7 |
| Screw, Shoulder No. 6−32 x 1/2 (added) | 12−34462−01 | 4 | 7 |
| Screw, Shoulder No. 6−32 x 1/2 (added) | 12−34462−01 | 4 | 8 |
| STORAGE ELEMENT, EF51R | N/A | 19 | N/A |
| STORAGE ELEMENT, EF52R | N/A | 20 | N/A |
| STORAGE ELEMENT, EF53 | N/A | 21 | N/A |
| STORAGE ELEMENT, RF312 DUAL | N/A | 6 | N/A |
| STORAGE ELEMENT, RF31E | N/A | 2 | N/A |
| STORAGE ELEMENT, RF31F | N/A | 3 | N/A |
| STORAGE ELEMENT, RF31T | N/A | 5 | N/A |
| STORAGE ELEMENT, RF352 DUAL | N/A | 9 | N/A |
| STORAGE ELEMENT, RF35E | N/A | 8 | N/A |
| STORAGE ELEMENT, RF362 DUAL | N/A | 12 | N/A |
| STORAGE ELEMENT, RF36E | N/A | 11 | N/A |
| STORAGE ELEMENT, RF71E | N/A | 14 | N/A |
| STORAGE ELEMENT, RF72E | N/A | 15 | N/A |
| STORAGE ELEMENT, RF73E | N/A | 16 | N/A |
| STORAGE ELEMENT, RF74E | N/A | 17 | N/A |
| STORAGE ELEMENT, RZ56E | N/A | 31 | N/A |
| STORAGE ELEMENT, RZ57E | N/A | 32 | N/A |
| STORAGE ELEMENT, RZ58E | N/A | 33 | N/A |
| STORAGE ELEMENT, RZ73E | RZ73E | 35 | N/A |
| STORAGE ELEMENT, RZ74E | RZ74E | 36 | N/A |
| STORAGE ELEMENT, TF85E | N/A | 23 | N/A |
| STORAGE ELEMENT, TF86E | N/A | 25 | N/A |
| STORAGE ELEMENT, TK50E | N/A | 43 | N/A |
| STORAGE ELEMENT, TK70E | N/A | 45 | N/A |
| STORAGE ELEMENT, TLZ04 | N/A | 38 | N/A |
| Storage Element, RF31T | RF31T−EA | 7 | 9 |
| Storage Element, RF35E | RF35−EA | 10 | 9 |

| DESCRIPTION | PART NO. | FIG. NO. | ITEM NO. |
|---|---|---|---|
| **Storage Element, RF36E** | **RF36−EA** | **13** | **9** |
| | | | |
| **Tape Drive Assembly** | **TF85−BA** | **24** | **1** |
| **Tape Drive Assembly** | **TF86−BA** | **26** | **1** |
| **Tape Drive Assembly** | **TK50−EA** | **44** | **1** |
| **Tape Drive Assembly** | **TK70−EA** | **46** | **1** |
| **Tape Drive Assembly** | **TLZ04−AA** | **39** | **1** |
| **Tape, Velcro** | **12−32980−01** | **27** | **6** |
| **Tape, Velcro** | **12−32980−01** | **40** | **6** |
| **TF85E TAPE DRIVE ASSEMBLY** | **TF85E−JA** | **1** | **7** |
| **TF85E TAPE DRIVE ASSEMBLY** | **TF85E−JF** | **1** | **7** |
| **TF86E TAPE DRIVE ASSEMBLY** | **TF86E−JA** | **1** | **7** |
| **TF86E TAPE DRIVE ASSEMBLY** | **TF86E−JF** | **1** | **7** |
| **TK50E Tape Drive Assembly** | **TK50E−AA** | **42** | **14** |
| | | | |
| **TK50E Tape Drive Assembly** | **TK50E−AF** | **42** | **14** |
| **TK70E Tape Drive Assembly** | **TK70E−AA** | **42** | **14** |
| **TK70E Tape Drive Assembly** | **TK70E−AF** | **42** | **14** |
| **TLZ04 TAPE DRIVE ASSEMBLY** | **TLZ04−JA** | **30** | **9** |
| **TLZ04 TAPE DRIVE ASSEMBLY** | **TLZ04−JF** | **30** | **9** |
| **TYPICAL DSSI SYSTEM MOUNTING and CABLING** | **N/A** | **1** | **N/A** |
| **TYPICAL SCSI SYSTEM MOUNTING and CABLING** | **N/A** | **30** | **N/A** |
| **TYPICAL TK SYSTEM MOUNTING and CABLING** | **N/A** | **42** | **N/A** |
| | | | |
| **Washer, Retainer** | **12−30421−01** | **27** | **4** |
| **Washer, Retainer** | **12−30421−01** | **40** | **4** |
| **Washer, Retaining** | **12−30421−01** | **29** | **4** |
| **Washer, Retaining** | **12−30421−01** | **41** | **4** |
| **Washer, Retaining** | **12−30421−01** | **47** | **3** |